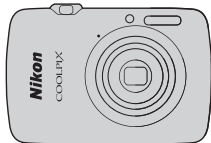


# **Nikon**

DIGITAL CAMERA

# COOLPIX S01

## Reference Manual



*Table of Contents*

*For Your Safety*

*Prepare*

*Shoot*

*View*

*Connect*

*The Setup Menu*

*Technical Notes*

*Index*

En

Thank you for your purchase of a Nikon COOLPIX S01 digital camera. To get the most from your Nikon product, be sure to read “For Your Safety” (📖 iii–iv) and all other instructions thoroughly and keep them where they will be read by all who use the camera.

## Symbols and Conventions

To make it easier to find the information you need, the following symbols and conventions are used:



This icon marks cautions, information that should be read before use to prevent damage to the camera.



This icon marks notes, information that should be read before using the camera.



This icon directs you to related sections in this manual.



This icon marks references to other pages in this manual.

Menus and other text displayed by the camera or computer applications are shown in **bold**. The illustrations in this manual may be simplified for explanatory purposes.

# Table of Contents

For Your Safety.....	iii	Image Size .....	25
Notices .....	v	Touch Shooting.....	26
Prepare .....	1	Autofocus Mode.....	28
Parts of the Camera .....	5	Movie Frame Size.....	29
Using the Touch Screen .....	6	<b>View</b> .....	<b>30</b>
Adjusting Camera Settings.....	7	<b>Basic Playback.....</b>	<b>30</b>
<b>Shoot</b> .....	<b>8</b>	Viewing Photographs Full Frame .....	30
<b>Point-and-Shoot Photography and Movie</b>		Viewing Movies.....	31
<b>Recording</b> .....	<b>8</b>	The Playback Display .....	32
Still Pictures .....	8	The Playback Menu .....	33
The Shooting Mode Display.....	11	<b>More on Playback</b> .....	<b>34</b>
The Shooting Menu.....	13	Playback Zoom.....	34
Movies .....	16	Viewing Multiple Images (Thumbnail Playback) ...	35
The Movie Mode Display.....	17	Adding Pictures to Favorites.....	36
The Movie Menu .....	18	Viewing Favorites .....	38
<b>More on Photography and Movie Recording</b> ....	<b>20</b>	Viewing Pictures by Date.....	39
The Self-Timer .....	20	Slide Shows .....	40
Choosing a Flash Mode.....	21	Filter Effects.....	41
Special Effects.....	23	Deleting Pictures.....	43
Exposure Compensation .....	24		

<b>Connect</b>	<b>46</b>	Cleaning and Storage.....	71
Copying Pictures to a Computer .....	46	Troubleshooting .....	72
Installing ViewNX 2 .....	46	Error Messages.....	77
Using ViewNX 2: Downloading Pictures .....	47	Specifications .....	80
Printing Photographs.....	48	Index .....	84
Print Orders (DPOF) .....	51		
Viewing Pictures on TV .....	53		
<b>The Setup Menu</b>	<b>54</b>		
Choosing a HOME Design .....	55		
Welcome Screen .....	56		
Time Zone and Date .....	57		
Sound Settings.....	59		
Formatting .....	60		
Choosing a Language.....	61		
Video Mode .....	62		
Computer Charging.....	63		
Restoring Default Settings .....	65		
Firmware Version.....	66		
<b>Technical Notes</b>	<b>67</b>		
File and Folder Names.....	67		
Caring for the Camera: Cautions.....	68		

# For Your Safety

To prevent damage to your Nikon product or injury to yourself or to others, read the following safety precautions in their entirety before using this equipment. Keep these safety instructions where all those who use the product will read them.

The consequences that could result from failure to observe the precautions listed in this section are indicated by the following symbol:



This icon marks warnings. To prevent possible injury, read all warnings before using this Nikon product.

## ■ ■ WARNINGS

- ▲ **Turn off immediately in the event of malfunction.**  
Should you notice smoke or an unusual smell coming from the equipment or charging AC adapter, unplug the adapter. Continued operation could result in injury. After turning the equipment off, wait for it to cool and then take it to a Nikon-authorized service center for inspection.
- ▲ **Do not use in the presence of flammable gas.** Do not use electronic equipment in the presence of flammable gas, as this could result in explosion or fire.
- ▲ **Do not disassemble.** Touching the product's internal parts could result in injury. In the event of malfunction, the product should be repaired only by a qualified technician. Should the product break open as the result of a fall or other accident, disconnect the charging AC adapter and take the product to a Nikon-authorized service center for inspection.
- ▲ **Keep dry.** Failure to observe this precaution could result in fire or electric shock.
- ▲ **Do not handle the plug or charging AC adapter with wet hands.** Failure to observe this precaution could result in electric shock.
- ▲ **Do not go near the plug during thunderstorms.** Failure to observe this precaution could result in electric shock.
- ▲ **Dust on or around the metal parts of the charging AC adapter plug must be removed with a dry cloth.**  
Continued use could result in fire.
- ▲ **Keep out of reach of children.** Failure to observe this precaution could result in injury. In addition, note that small parts constitute a choking hazard. Should a child swallow any part of this equipment, consult a physician immediately.
- ▲ **Do not place the strap around the neck of an infant or child.** Failure to observe this precaution could result in strangulation.
- ▲ **Observe caution when using the flash.**
  - Using the camera with the flash in close contact with the skin or other objects could cause burns.
  - Using the flash close to the subject's eyes could cause temporary visual impairment. Particular care should be observed when photographing infants, when the flash should be no less than one meter (3 ft 4 in.) from the subject.
  - Do not aim the flash at the operator of a motor vehicle. Failure to observe this precaution could result in accidents.
- ▲ **Avoid contact with liquid crystal.** Should the monitor break, care should be taken to avoid injury due to broken glass and to prevent the liquid crystal from the monitor touching the skin or entering the eyes or mouth.

- ⚠ **Do not use the charging AC adapter with travel converters or adapters designed to convert from one voltage to another or with DC-to-AC inverters.** Failure to observe this precaution could damage the product or cause overheating or fire.
- ⚠ **Use appropriate cables.** When connecting cables to the input and output jacks, use only the cables provided or sold by Nikon for the purpose to maintain compliance with product regulations.
- ⚠ **Do not damage, heat, modify, or forcibly tug or bend cables or place them under heavy objects.** Failure to observe these precautions could result in fire or electric shock.
- ⚠ **Do not cover the product during use.** The build-up of heat could deform the casing or cause fire.
- ⚠ **Discontinue use immediately should you notice any changes in the product, such as deformation or discoloration.** Failure to observe this precaution could result in the built-in battery leaking, overheating, or rupturing.
- ⚠ **Do not remain in contact with the camera or charging AC adapter for extended periods while the devices are on or in use.** Parts of the device may become hot. Leaving the device in direct contact with the skin for extended periods may result in low-temperature burns.
- ⚠ **Use designated AC charging adapters.** When charging the camera from an outlet, use only AC charging adapters designated for use with this product.
- ⚠ **Do not store in direct sunlight.** When the product is not in use, turn it off and ensure the lens is covered before storing it out of direct sunlight. Sunlight focused by the lens could cause fire.
- ⚠ **Follow the directions of airline and hospital personnel.** Turn the product off during takeoff and landing or when so directed by airline or hospital staff. Radio waves emitted by the device could interfere with aircraft navigation or hospital medical equipment.
- ⚠ **Should the camera battery leak and liquid from the camera battery come into contact with your clothes or skin, immediately rinse the affected area with water.**

# Notices

- No part of the manuals included with this product may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form, by any means, without Nikon's prior written permission.
- Nikon reserves the right to change the specifications of the hardware and software described in these manuals at any time and without prior notice.

## Notices for Customers in the U.S.A.

### Federal Communications Commission (FCC) Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

### Notice for Customers in the State of California

**WARNING:** Handling the cord on this product may expose you to lead, a chemical known to the State of California to cause birth defects or other reproductive harm. *Wash hands after handling.*

Nikon Inc., 1300 Walt Whitman Road, Melville, New York 11747-3064, U. S. A.

Tel.: 631-547-4200

- Nikon will not be held liable for any damages resulting from the use of this product.
- While every effort has been made to ensure that the information in these manuals is accurate and complete, we would appreciate it were you to bring any errors or omissions to the attention of the Nikon representative in your area (address provided separately).



**Nikon**  
COOLPIX S01

### CAUTIONS

#### Modifications

The FCC requires the user be notified that any changes or modifications made to this device that are not expressly approved by Nikon Corporation may void the user's authority to operate the equipment.

#### Interface Cables

Use the interface cables sold or provided by Nikon for your equipment. Using other interface cables may exceed the limits of Class B Part 15 of the FCC rules.

## Notice for Customers in Canada

**CAUTION:** This Class B digital apparatus complies with Canadian ICES-003.

## Notices for Customers in Europe

This symbol indicates that this product is to be collected separately.

The following apply only to users in European countries:

- This product is designated for separate collection at an appropriate collection point. Do not dispose of as household waste.
- For more information, contact the retailer or the local authorities in charge of waste management.

## Notice Concerning Prohibition of Copying or Reproduction

Note that simply being in possession of material that has been digitally copied or reproduced by means of a scanner, digital camera, or other device may be punishable by law.

### • Items prohibited by law from being copied or reproduced

Do not copy or reproduce paper money, coins, securities, government bonds, or local government bonds, even if such copies or reproductions are stamped "Sample."

The copying or reproduction of paper money, coins, or securities which are circulated in a foreign country is prohibited.

Unless the prior permission of the government has been obtained, the copying or reproduction of unused postage stamps or post cards issued by the government is prohibited.

The copying or reproduction of stamps issued by the government and of certified documents stipulated by law is prohibited.

**ATTENTION:** Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.



### • Cautions on certain copies and reproductions

The government has issued cautions on copies or reproductions of securities issued by private companies (shares, bills, checks, gift certificates, etc.), commuter passes, or coupon tickets, except when a minimum of necessary copies are to be provided for business use by a company. Also, do not copy or reproduce passports issued by the government, licenses issued by public agencies and private groups, ID cards, and tickets, such as passes and meal coupons.

### • Comply with copyright notices

The copying or reproduction of copyrighted creative works such as books, music, paintings, woodcuts, prints, maps, drawings, movies, and photographs is governed by national and international copyright laws. Do not use this product for the purpose of making illegal copies or to infringe copyright laws.



## ***Disposing of Data Storage Devices***

Please note that deleting images or formatting camera memory or other data storage devices does not completely erase the original image data. Deleted files can sometimes be recovered from discarded storage devices, potentially resulting in the malicious use of personal image data. Ensuring the privacy of such data is the user's responsibility.

Before discarding a data storage device or transferring ownership to another person, format the device and then completely refill it with images containing no private information (for example, pictures of empty sky). Be sure to also replace any pictures selected for the HOME display.

## ***Use Only Nikon Brand Electronic Accessories***

Nikon cameras are designed to the highest standards and include complex electronic circuitry. Only Nikon brand electronic accessories (including charging AC adapters) certified by Nikon specifically for use with this Nikon digital camera are engineered and proven to operate within the operational and safety requirements of this electronic circuitry.

The use of non-Nikon electronic accessories could damage the camera and may void your Nikon warranty.

For more information about Nikon brand accessories, contact a local authorized Nikon dealer.

✔ **Use only Nikon brand accessories:** Only Nikon brand accessories certified by Nikon specifically for use with your Nikon digital camera are engineered and proven to operate within its operational and safety requirements. The use of non-Nikon accessories could damage your camera and may void your Nikon warranty.

🔗 **Before taking pictures on important occasions** (such as at weddings or before taking the camera on a trip), take a test shot to ensure that the camera is functioning normally. Nikon will not be held liable for damages or lost profits that may result from product malfunction.

🔗 **Life-Long Learning:** As part of Nikon's "Life-Long Learning" commitment to ongoing product support and education, continually-updated information is available on-line at the following sites:

- For users in the U. S. A.: <http://www.nikonusa.com/>
- For users in Europe and Africa:  
<http://www.europe-nikon.com/support/>
- For users in Asia, Oceania, and the Middle East:  
<http://www.nikon-asia.com/>

Visit these sites to keep up-to-date with the latest product information, tips, answers to frequently-asked questions (FAQs), and general advice on digital imaging and photography. Additional information may be available from the Nikon representative in your area. For contact information, visit <http://imaging.nikon.com/>

# Prepare

## 1 Check the package contents.

Confirm that the package contains the items listed below.

Contact your retailer if anything is missing.

COOLPIX S01 digital camera<sup>1</sup>

Camera strap

User's Manual

USB Cable UC-E16

For Your Safety




Charging AC Adapter EH-69P<sup>2</sup>


Warranty


1 Comes with memory and a rechargeable battery, both of which are built in. Memory cards can not be used.

2 A plug adapter is supplied in countries or regions where required.

## 2 Attach the strap.

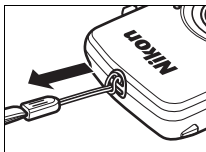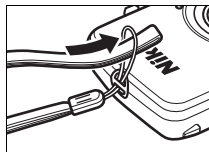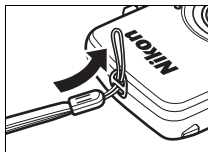

 If a **plug adapter** is included, attach it securely to the charging AC adapter; note that once the adapter is attached, attempting to forcibly remove the plug adapter could damage the product.

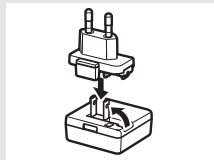

*Shape of plug adapter varies with country or region of purchase.*

Users in Argentina and Korea can omit this step, as the plug adapter comes permanently bonded to the charging AC adapter.


### 3 Charge the camera.

Use the supplied charging AC adapter when charging the camera for the first time.

#### 3.1 Turn the camera off and connect the USB cable to the camera (①) and AC charging adapter (②).

#### 3.2 Plug the adapter in (③).

*The power lamp flashes during charging and turns off when charging is complete.*

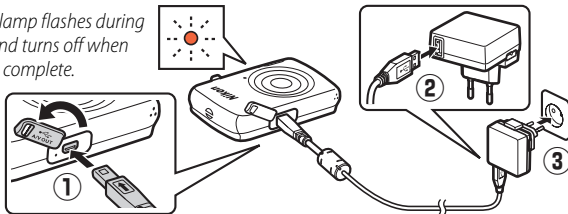

#### 3.3 Charging takes about two hours and 50 minutes. When charging is complete, unplug the charging AC adapter and disconnect the USB cable.

ⓘ The **power-on lamp** slowly flashes orange during charging and turns off when charging is complete. If the power-on lamp flashes orange rapidly, an error has occurred. Check that the USB cable is correctly connected and that the ambient temperature is between 5 °C and 35 °C (41 °F–95 °F).

ⓘ While the charging AC adapter is connected, the camera functions only in playback mode (📖 30) and pictures can not be taken. Turning the camera on slows charging.


ⓘ Once the clock has been set (📖 3), the camera will also charge when connected to a computer via a USB cable (📖 63).

## 4 Ready the camera for shooting.

### 4.1 Turn the camera on.




### 4.2 Tap the desired language.

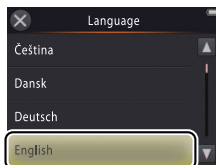


### 4.3 Set the clock.

When prompted to choose whether to set the camera clock, tap **Yes**. Tap **◀** or **▶** to highlight your home time zone and tap **OK** to select.

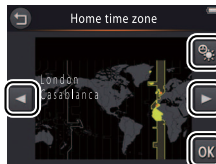

Tap to choose a date format. The options shown at right will be displayed; tap to highlight items and tap **▲** or **▼** to change. Tapping **OK** displays a confirmation dialog; tap **Yes** to set the clock.

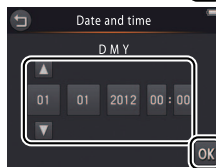

To turn **daylight saving time** on or off, tap .


**The clock is powered** by the camera's built-in battery. If the battery is exhausted, you will be prompted to re-enter the date and time the next time the camera is turned on. Be sure to set the clock before proceeding.

**To choose another language or adjust the clock**, use the **Language** (📖 61) or **Time zone and date** (📖 57) option in the setup menu.

#### 4.4 Choose a design for the HOME display.


Tap to highlight a HOME design and tap

**OK** to select.

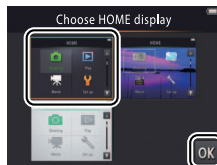


The camera exits to the HOME display when setup is complete.


➔ The HOME display .....📖 7

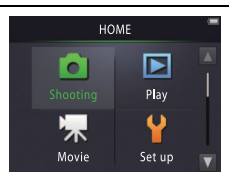

# Parts of the Camera

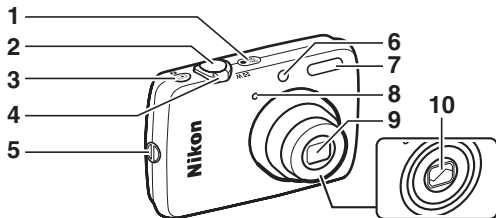

<b>1</b>	Power switch/power-on lamp.....	2
<b>2</b>	Shutter-release button.....	9
<b>3</b>	▶ (playback) button.....	30
<b>4</b>	Zoom control.....	9, 34, 35
<b>5</b>	Eyelet for camera strap.....	1
<b>6</b>	Self-timer lamp.....	20
	AF-assist illuminator.....	14
<b>7</b>	Flash.....	21
<b>8</b>	Microphone.....	16
<b>9</b>	Lens	
<b>10</b>	Lens cover	

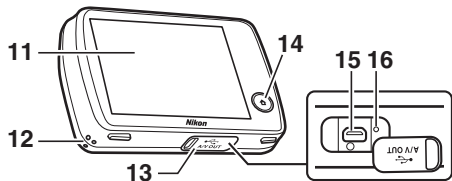


<b>11</b>	Monitor/touch screen.....	6
<b>12</b>	Speaker.....	31
<b>13</b>	Connector cover.....	2, 47, 48, 53
<b>14</b>	HOME button.....	7
<b>15</b>	USB and audio/video connector.....	2, 47, 48, 53
<b>16</b>	Reset button.....	72, 78

**🔌 To turn the camera on or off**, press the power switch. If the camera is off, pressing and holding the ▶ button will turn the camera on and start playback without extending the lens.


## Using the Touch Screen

The following operations can be performed by touching or sliding a finger over the monitor:


**Tap:** Tap the monitor.

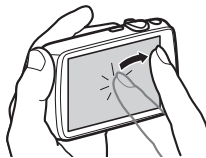


**Touch and hold:** Touch the monitor and leave your finger in place for a short period.

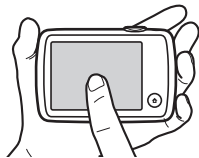

**Drag:** Drag a finger over the monitor.

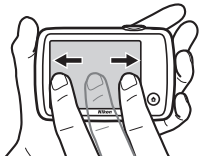

**Drag and drop:** Touch an item in the display, drag it to the desired location (①), and lift your finger from the monitor (②).

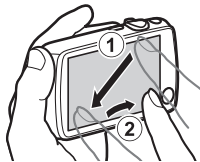


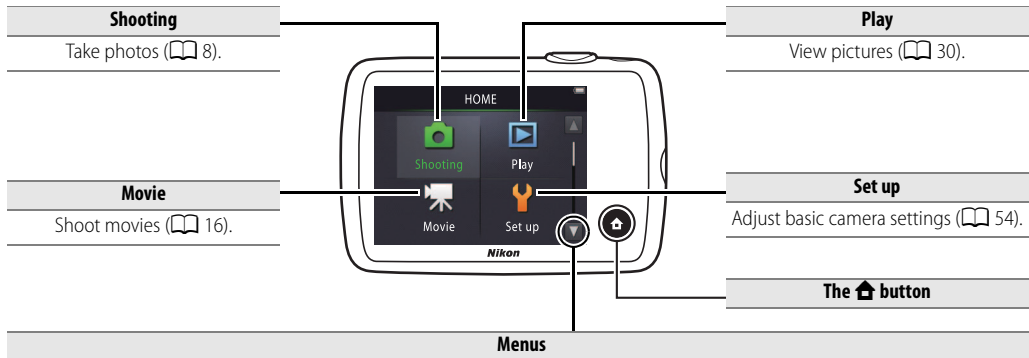
✔ **The touch screen:** Do not touch the display with sharp objects or apply excessive force. The touch screen may not be compatible with some types of protective film.

✔ **Using the touch screen:** The device may not respond as expected if you flick your finger to drag items across the display, drag items only a short distance, glide your finger lightly over the display, or move your finger too quickly. The screen may not respond as expected if touched in two or more locations at the same time.






# Adjusting Camera Settings

Use the HOME display when adjusting camera settings or switching between photo, movie, and playback modes. To view the HOME display, touch the  button.




Settings are adjusted from the menus. Tap  or drag the HOME display up to view the menu for the current mode.

- ➔ Shooting menu .....  13
- ➔ Movie menu .....  18
- ➔ Playback menu .....  33


# Shoot

## Point-and-Shoot Photography and Movie Recording

### Still Pictures

1 Touch the  button.


2 Tap **Shooting**.

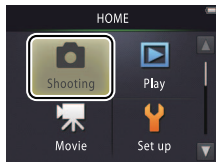

- ➔ Battery level and memory remaining..... 11
- ➔ The shutter-release button..... 9
- ➔ The self-timer ..... 20
- ➔ The flash..... 21
- ➔ Special effects ..... 23
- ➔ Exposure compensation ..... 24
- ➔ Image size ..... 25
- ➔ Touch shooting..... 26
- ➔ More on photography .. 14


### 3 Frame the shot.

Ready the camera and frame the shot.

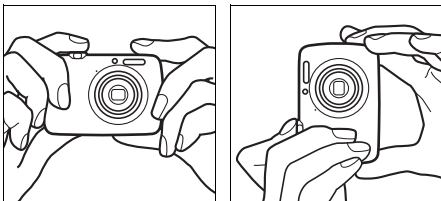


### 4 Focus.

 Press the shutter-release button halfway to lock focus and exposure.



Shutter speed Aperture

 


### 5 Shoot.



Press the shutter-release button the rest of the way down.

**Holding the camera:** Be careful that your fingers or hair, the camera strap, or other objects do not obstruct the lens, flash, AF-assist illuminator, or microphone. When framing pictures in “tall” (portrait) orientation, hold the camera so that the flash is above the lens.

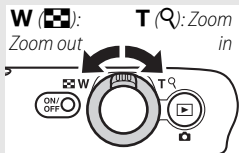
**Zoom:** Use the zoom control to zoom in or out.



To focus, lightly press the **shutter-release button**, stopping when you feel resistance. This is referred to as “pressing the shutter-release button halfway”. Next, press the shutter-release button the rest of the way down to release the shutter.

- ➔ Viewing pictures .....  30
- ➔ Deleting pictures .....  43

## The Shooting Mode Display

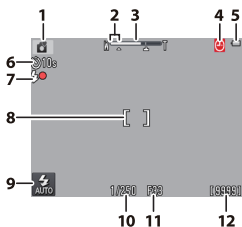

1	Scene .....	12
2	Macro zoom range .....	14
3	Zoom indicator.....	9, 14
4	"Date not set" indicator .....	12, 54
	Travel destination .....	58
5	Battery level.....	11
6	Self-timer.....	20
7	Flash indicator.....	11
8	Focus area.....	11, 14
9	Flash mode.....	21
10	Shutter speed	
11	Aperture	
12	Number of exposures remaining.....	11

**The indicators displayed** vary with camera settings and shooting conditions. Some indicators only appear for a few seconds after the camera is turned on or an operation is performed; to display the indicators again, tap **DISP**.

When the shutter-release button is pressed halfway, **focus status** is shown as follows:

	Face detected
	No face detected
	Digital zoom in effect

- If the camera fails to focus, the focus area or in-focus indicator will flash red; recompose the shot and try again.

**Battery level** is shown as follows:

	Battery charged.
	Low battery. Charge camera.
<b>Battery exhausted.</b>	Battery exhausted. Charge camera.

**The number of exposures remaining** varies with available memory and the option selected for **Image mode** (25).


📌 The camera automatically selects from the following **scene modes** according to the type of subject: 👤 (portraits), 🌄 (landscapes), 🌃 (night portraits), 🌃 (night landscapes), 📷 (close-ups), 📷 (backlit subjects), and 📷 (other subjects). Note that if fill flash is selected, the camera will automatically select 📷 mode, while in other cases, the camera may fail to select the appropriate scene.

📌 **Motion detection:** If the camera detects subject movement or camera shake, it will raise ISO sensitivity for faster shutter speeds and the shutter speed and aperture will be displayed in green.


📌 At the default flash mode of 📷 **AUTO Auto**, the flash fires to provide additional lighting as required. To turn the flash off, tap 📷 and select 📷 **Off** (📖 21).

📌 If 📷 **flashes in the monitor during shooting**, be sure to reset the clock (📖 57).

## The Shooting Menu

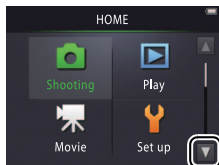

The shooting menu can be displayed by touching the button when the camera is in shooting mode and tapping . Tap or to display the desired item and tap to view options.

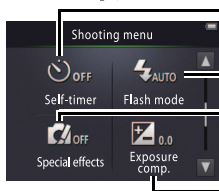

### Self-timer

Release the shutter ten seconds after the shutter-release button is pressed.

20

### Flash mode

Choose a flash mode.

21

### Special effects


Take pictures with special effects.

23

### Exposure comp.

Adjust exposure to make pictures lighter or darker.

24

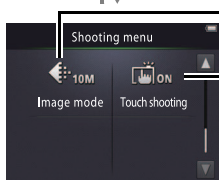

### Image mode

Choose an image size.

25

### Touch shooting



Choose whether pictures can be taken by tapping the display.

26

## ■ Taking Photographs

🔗 If you hold the zoom control to **T** after zooming in to the maximum optical zoom position, you can further increase magnification by up to 4× with **digital zoom**. 📷 mode is selected when digital zoom is in effect. Note that due to the digital processing used to enlarge the image, pictures become noticeably “grainy” at positions past the 🏠 icon in the zoom display. To prevent loss of quality at higher zoom ratios, choose a smaller **Image mode** setting (📖 25).

 🔗 When 📷 mode is selected, a 🏠 icon will appear in the zoom display and the zoom display will turn green when zoom is between this icon and the **W** position. At the **W** position the camera can focus on objects as close as about 5 cm (2 in.) to the lens, while at the 🏠 position it can focus on subjects as close as about 20 cm (8 in.).

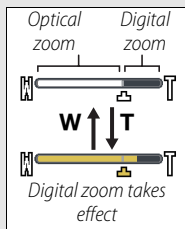


🔗 **Autofocus:** If faces are detected, the camera will focus on the face closest to the camera. If no face is detected or digital zoom is in effect, the camera will focus on the subject in the center of the display.



The AF-assist illuminator (📖 5) may light to assist the focus operation if the subject is poorly lit.

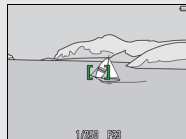

The illuminator has a range of about 1.4 m (4 ft 7 in.) at the maximum wide-angle position and about 0.8 m (2 ft 7 in.) at the maximum telephoto position.

🔗 Although the focus area may still be displayed or the in-focus indicator light green, **the camera may fail to focus** if the subject is very dark, fast-moving, mixes areas of sharply contrasting brightness (e.g., is half in the shade) or near and distant objects (e.g., is behind the bars of a cage), is dominated by regular geometric patterns (e.g., venetian blinds or a row of windows in a skyscraper), or contrasts poorly with the background (e.g., is the same color as the background). Should this occur, try pressing the shutter-release button halfway a second time or recomposing the photograph.





 **Touch shooting:** At default settings, you can take pictures simply by tapping subjects in the display ( 26). If faces are detected, you can focus and take pictures by tapping inside the double borders.


 **Sleep:** If no operations are performed for a set period, the display will turn off and the power-on lamp will flash. Pressing the shutter-release button, power switch, or  button reactivates the display. If no operations are performed for an additional three minutes, the camera will turn off.

# Movies

1 Touch the  button.




2 Tap **Movie**.

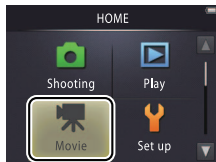

3 Frame the shot.

 4 Start recording.



Press the shutter-release button all the way down.











5 End recording.


Press the shutter-release button all the way down a second time to end recording.

To view movies, press the  button.


- ➔ Viewing movies.....  31
- ➔ Deleting movies.....  43


- ➔ The self-timer .....  20
- ➔ Special effects .....  23
- ➔ Exposure compensation .....  24
- ➔ Touch shooting.....  26
- ➔ Autofocus mode .....  28
- ➔ Frame size .....  29
- ➔ More on movies .....  19

 **Zoom:** Use the zoom control to zoom in or out.

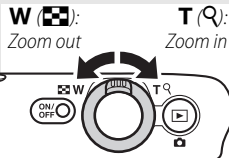

## The Movie Mode Display

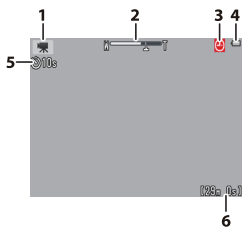






 The camera focuses on the subject in the center of the frame. The focus indicator lights green when the camera focuses, red if the camera is unable to focus.

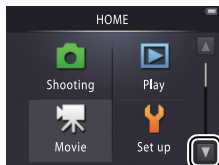


<b>1</b>	Movie mode indicator .....	16
<b>2</b>	Zoom indicator.....	16, 19
<b>3</b>	“Date not set” indicator .....	12, 54
	Travel destination .....	58
<b>4</b>	Battery level.....	11
<b>5</b>	Self-timer .....	20
<b>6</b>	Time available .....	29

## The Movie Menu



The movie menu can be displayed by touching the  button when the camera is in movie mode and tapping . Tap  or  to display the desired item and tap to view options.

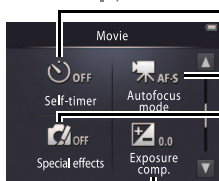

### Self-timer

Start recording about ten seconds after the shutter-release button is pressed.  20

### Autofocus mode


Choose how the camera focuses during movie recording.  28

### Special effects

Shoot movies with special effects.  23

### Exposure comp.

Adjust exposure to make movies lighter or darker.  24

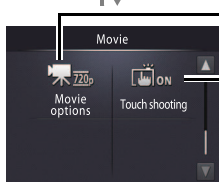

### Movie options

Choose a frame size.  29

### Touch shooting

Choose whether movies can be recorded by tapping the display.  26

## ■ Recording Movies

✓ The camera may record sounds made by camera controls or by the lens during focusing or when aperture is adjusted to reflect changes in the brightness of the subject. Digital zoom can be used, but footage shot with digital zoom will be noticeably “grainy” (📖 14); optical zoom is not available.

Depending on the zoom ratio and distance to the subject, “moiré” may be visible where the scene features regular repeating patterns. This is a naturally-occurring interference pattern arising from the interaction of the image sensor grid with a regular repeating grid pattern in the subject and does not indicate a malfunction. In addition, smear (📖 69) may be recorded when bright objects such as the sun, sunlight, or electric lights are in the frame; if possible, avoid framing bright light sources in the display.

🔒 **The temperature of the camera** may rise if it is used for extended periods or in hot environments. If there is risk of overheating during movie recording, a count-down timer will be displayed; recording will end automatically and the camera will turn off when the timer expires.





✓ **Autofocus:** When **Single AF** (the default setting; 📖 28) is selected for **Autofocus mode** in the movie menu, the camera will focus when the shutter-release button is pressed halfway and focus and exposure will lock during movie recording. If the camera fails to focus (📖 14), try the following method:

- 1 Select **Single AF** for **Autofocus mode** in the movie menu.
- 2 Find an object that is at the same distance from the camera as your subject and frame it in the center of the display.
- 3 Press the shutter-release button halfway to focus.
- 4 Keeping the button pressed halfway, recompose the shot with your original subject in the desired position.
- 5 Press the button the rest of the way down to start recording.

# More on Photography and Movie Recording

## The Self-Timer

Mode:  or 

Tap:  →  → Self-timer

Shutter release is delayed until about ten seconds after the shutter-release button is pressed.

 
### 1 Tap Self-timer.



### 2 Tap On.


### 3 Set focus and exposure.


Press the shutter-release button halfway.






### 4 Start the timer.

Press the shutter-release button all the way down.

 **While the timer counts down**, a count-down is displayed and the self-timer lamp flashes. The lamp stops flashing about a second before the shutter is released. To interrupt the timer before a picture is taken, press the shutter-release button again.

 The self-timer turns off when the shutter is released.

 If **Touch shooting** (📖 26) is on, the timer can be started by tapping the display.

 To exit without changing settings, tap .

## Choosing a Flash Mode

Mode: 




Tap:  →  → Flash mode

Choose a flash mode as follows:

### 1 Tap Flash mode.





### 2 Tap an option.




 <b>Auto</b> (default)	The flash fires automatically as required.
 <b>Off</b>	The flash does not fire.
 <b>Fill flash</b>	The flash fires with every shot.


 **The flash indicator** shows flash status when the shutter-release button is pressed halfway.




- **On:** The flash will fire when the picture is taken.
- **Flashing:** The flash is charging. No pictures can be taken.
- **Off:** The flash will not fire when the picture is taken.


 To exit without changing settings, tap .

 The camera automatically selects the  scene mode (📖 12) when  **Fill flash** is selected.

 The flash has a range of about 0.5–1.4 m (1 ft 8 in.–4 ft 7 in.) when the camera is zoomed all the way out, or 0.5–0.8 m (1 ft 8 in.–2 ft 7 in.) at maximum zoom.

 **Red-eye reduction:** A series of low-intensity “pre-flashes” are emitted before the main flash to reduce red-eye; if red-eye is detected after shooting, additional processing is performed to further reduce red-eye as the pictures are saved (*advanced red-eye reduction*). Note that the pre-flashes increase the delay between the shutter-release button being pressed and the shutter being released, and that the processing performed when red-eye is detected may slightly increase recording times. The desired results may not be achieved in all cases, and in rare instances red-eye reduction may be applied to areas of the image in which no red-eye occurs.

 **The  icon:** Flash mode options can also be displayed by tapping the  icon in the shooting mode display.

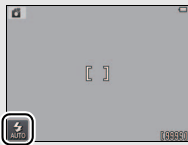



## Special Effects

Mode:  or 

Tap:  →  → **Special effects**


Record photos or movies with special effects.

### 1 Tap Special effects.





### 2 Select an option.

Tap an option and tap **OK**.



<b>SEPIA</b>	<b>Nostalgic sepia</b>	Sepia coloring and low contrast combine for an antique look.
	<b>High-contrast monochrome</b>	Shoot in high-contrast black and white.
<b>HI</b>	<b>High key</b>	Shoot photos or movies that are bright and filled with light.
<b>LO</b>	<b>Low key</b>	Shoot dark, somber photos or movies.

 **To resume normal shooting**, tap **OFF** and tap **OK**.

 **To exit without changing settings**, tap .

## Exposure Compensation

Mode:  or 



Tap:  →  → Exposure comp.




Adjust exposure to make pictures lighter or darker.

### 1 Tap Exposure comp.



### 2 Adjust exposure.

Tap  or  to adjust exposure.

 Tap  to make pictures brighter,  to make pictures darker. Exposure can also be adjusted by tapping the bar or dragging the slider.

 Tap  to exit.

### 3 Tap .

# Image Size

Mode: 

Tap:  →  →  → Image mode


Choose the size of photographs taken with the camera.



## 1 Tap Image mode.



## 2 Tap an option.


Option	No. of shots <sup>1,2</sup>	Size when printed at 300 dpi <sup>1,3</sup>
<b>10<sub>M</sub></b> 3648×2736 (default)	3000	31 × 23 cm/12 × 9 in.
<b>4<sub>M</sub></b> 2272×1704	7600	19 × 14 cm/7.5 × 5.5 in.
<b>2<sub>M</sub></b> 1600×1200	14500	14 × 10 cm/5.5 × 4 in.

 **Image mode** is not reset when the camera is turned off.

- 1 All figures are approximate.
  - 2 Number of shots that can be recorded before memory fills; amounts over 10,000 are shown as "9999". Due to JPEG compression, file size varies from shot to shot, producing large variations in number of shots that can be recorded.
  - 3 Calculated by dividing dimensions in pixels by printer resolution in dots per inch (dpi; 1 inch=2.54 cm).
-  To exit without changing settings, tap .


## Touch Shooting

Mode:  or 

Tap:  →  →  → Touch shooting

Choose whether photos can be taken and movies recorded by tapping the display.

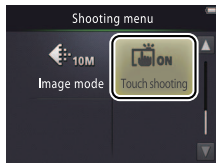

### 1 Tap Touch shooting.





 **Tapping too hard** may move the camera, blurring pictures.

 **The shutter-release button** can be used regardless of the option selected.

### 2 Tap an option.

<b>ON</b> <b>on</b> (default)	Tapping the display releases the shutter (  mode) or starts or ends movie recording (  mode).
<b>OFF</b> <b>off</b>	Tapping the display does not release the shutter or start or end movie recording.

 To exit without changing settings, tap .

📌 If a focus area (☐ ☐) appears when you tap the display, to shoot you must either tap inside the focus area or, if faces are detected, inside any of the square borders indicating faces.



📌 If **the self-timer** (📖 20) is on, tapping the display will lock focus and exposure and start the timer, and the shutter will be released after about ten seconds.

📌 The option selected does not change when the camera is turned off.

# Autofocus Mode


Mode: 

Tap:  →  → **Autofocus mode**

Choose how the camera focuses in movie mode.


## 1 Tap **Autofocus mode**.





 The option selected does not change when the camera is turned off.

## 2 Tap an option.




<b>AF-S Single AF</b> (default)	Choose if the distance to the subject will not change very much during recording. Focus locks when recording starts.
<b>AF-F Full-time AF</b>	Choose if the distance to the subject is likely to change during recording. Focus is adjusted during recording.

 Select **AF-S Single AF** to prevent sounds made by the camera focusing being recorded with movies.

 To exit without changing settings, tap .


# Movie Frame Size


Mode: 

Tap:  →  →  → **Movie options**



Choose a frame size for movies.
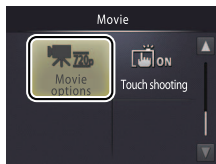
## 1 Tap Movie options.




 The option selected does not change when the camera is turned off.



## 2 Tap an option.

Option	Aspect ratio (width : height)	Bit rate <sup>1</sup>	Max. length <sup>1,2</sup>
 <b>HD 720p (1280×720)</b> (default)	16 : 9	9 Mbps	1 h 40 min
 <b>VGA (640×480)</b>	4 : 3	3 Mbps	3 h

<sup>1</sup> All figures are approximate. Bit rate and maximum length vary with the scene recorded.

<sup>2</sup> Total length that can be recorded before memory fills. Individual movies can be up to 29 minutes long. Note that at high ambient temperatures or if the camera has already been used for an extended period, recording may end before this limit is reached to prevent the camera overheating.






 The frame rate is approximately 30 fps for all options.


 To exit without changing settings, tap .


# View







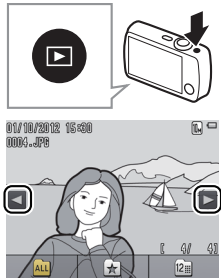


## Basic Playback


### Viewing Photographs Full Frame


Press the  button to view the most recent picture, then drag the picture left or right or tap  or  to view other images, or touch and hold  or  to scan rapidly through pictures.

To exit playback, press  again or press the shutter-release button halfway.






- ➔ Viewing movies.....  31
- ➔ Playback zoom.....  34
- ➔ Viewing multiple images.....  35
- ➔ Adding favorites.....  36
- ➔ Viewing favorites.....  38
- ➔ Viewing images by date.....  39
- ➔ Slide shows.....  40
- ➔ Filter effects.....  41
- ➔ Deleting pictures.....  43

 Images may briefly be shown in low resolution immediately after they are displayed.

 Pictures can also be viewed by tapping **Play** in the HOME display.



 




## Viewing Movies

To view movies, press  to view pictures and then scroll through images as described on page 30 until you find a picture marked with a  icon. Tap  to start playback.




## Movie Playback Controls

Tapping the monitor displays the following controls:

	<b>Pause:</b> Tap to pause playback.
	<b>Resume:</b> Tap to resume playback.
	<b>Rewind/advance:</b> Touch and hold to rewind or fast forward. If playback is paused, tap to rewind or advance a frame at a time.
	<b>Volume:</b> Tap to adjust volume.
	<b>End:</b> Tap to exit to full frame playback.



 Volume can also be adjusted using the zoom control.

## The Playback Display








**The indicators displayed** vary with the image type and camera settings. Some indicators only appear for a few seconds after an operation is performed. To display or hide indicators, tap the display.


When playback is restricted to favorites (36) or pictures taken on a selected date (39), **the total number of images** is the number of pictures available for viewing.

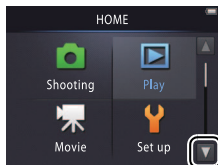1	Date/time of recording .....	57
2	Favorite .....	36, 38
3	Print order icon .....	51
4	Battery level.....	11
5	Image mode .....	25
	Movie options .....	29
6	Filter effect .....	41
7	Movie icon.....	31
8	Frame number/total number of images	
	Movie length	
9	File name .....	67

## The Playback Menu



The playback menu can be displayed by touching the  button during playback and tapping . Tap  or  to display the desired item and tap to view options.

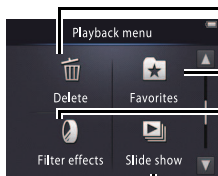

### Delete

Delete multiple pictures.

 45

### Favorites

Add pictures to favorites.

 37

### Filter effects


Create a retouched copy of the current picture.

 41

### Slide show

View a slide show. Pictures are played back one at a time in the order recorded.

 40

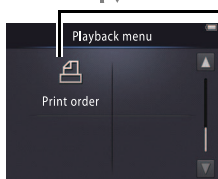

### Print order

Select pictures for printing and choose the number of copies.

 51


## More on Playback

### Playback Zoom

To zoom in on a picture in full-frame playback, double-tap the image or select **Q (T)** with the zoom control.

Use the zoom control to zoom in and out.

To scroll, drag the picture or tap **▲**, **▼**, **◀**, or **▶**. To cancel zoom, double-tap the image or tap **✕**.

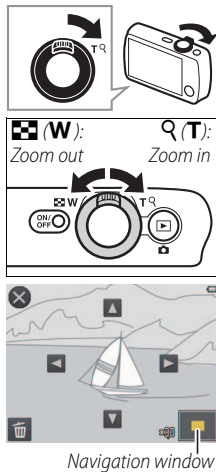

Playback zoom is not available with movies.


Playback zoom offers magnifications of up to 10×


If faces are detected, zoom will be centered on the closest face; to choose other faces, tap **☺** or **☺**.




To delete pictures, tap **🗑** and choose the desired option (45).




## Viewing Multiple Images (Thumbnail Playback)

 To view pictures in “contact sheets” of four, nine, or 16 images, select  (**W**) with the zoom control when a picture is displayed full frame.

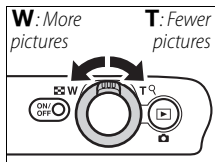

Use the zoom control to choose the number of pictures displayed.



To view additional pictures, drag the display up or down or tap  or . Tap a picture to view it full frame, or select  (**T**) with the zoom control when four pictures are displayed.



## Adding Pictures to Favorites

Add pictures to favorites for easy viewing (📖 38, 40) and to protect them from accidental deletion.

### ■ Adding a Picture to Favorites

To add individual pictures to favorites during playback:

#### 1 Display the picture.

Display the picture you want to add to favorites.




#### 2 Display the ★ icon.

Touch and hold the picture until the ★ icon is displayed.



#### 3 Tap ★.

Tap ★ or drag and drop the picture onto the ★ icon.

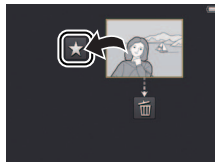

➔ Adding multiple pictures to favorites.....📖 37

📌 Note that **favorites will be deleted** when memory is formatted.



📌 The maximum number of favorites is 999.

📌 The ★ icon can not be displayed during **playback zoom**. Tap ✕ to cancel zoom before proceeding to Step 2.

📌 If the picture is already a favorite, tapping ★ will remove it from favorites.


## ■ Adding Multiple Pictures to Favorites



Mode: 



Tap:  →  → Favorites

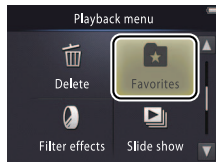Use the **Favorites** option in the playback menu to add multiple pictures to favorites.


### 1 Tap Favorites.




- ➔ Viewing favorites .....  38
- ➔ Adding the current picture to favorites .....  36

 To exit without adding pictures to favorites, tap .


### 2 Select pictures.

Tap pictures to add them to favorites. Selected pictures are indicated by  icons; tap again to deselect.

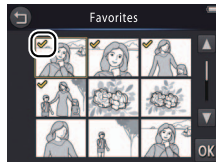



### 3 Tap **OK**.


## Viewing Favorites

To hide images not in the “favorites” list, tap .



*View favorites*

 Adding pictures to favorites.....  36

 To make all pictures available for viewing, tap **ALL**.



## Viewing Pictures by Date



Follow the steps below to restrict playback to pictures taken on a selected date.


**1** During playback, tap .




List by date

**2** Choose a date.


Tap  or  to scroll through dates and tap a date to select it.

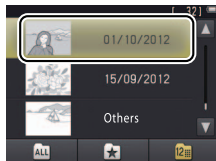

 Only the last 30 days of shooting are listed individually; other images are listed under **Others**.

 Only the last 9000 pictures recorded on the selected date are available for viewing.

 Pictures taken before the clock is set have a date stamp of January 1, 2012.

 To make all images available for viewing, tap **ALL**.


## Slide Shows

Mode: 


Tap:  →  →  → Slide show

View pictures as a slide show. Pictures will be displayed one at a time in the order recorded.

### 1 Tap Slide show.

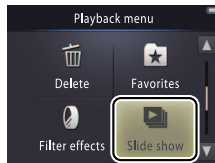


 


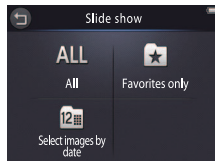

### 2 Choose the pictures shown.




### Slide Show Playback Controls



Tapping the monitor displays the following controls:


	<b>Pause:</b> Tap to pause the show.
	<b>Resume:</b> Tap to resume playback.
	<b>Skip back/skip ahead:</b> Tap to skip back or ahead one frame.
	<b>Volume:</b> Tap to adjust volume.
	<b>End:</b> Tap to end the show.

 Movie playback is not available during slide shows. Movies are shown by their first frame.

 Slide shows end automatically after 30 minutes.



 Tap **All** to view all pictures or **Favorites only** to view only favorites ( 38), or tap **Select images by date** and choose a date from a list to view only pictures taken on that date.

 Tap  to exit without starting the slide show.

 Volume can also be adjusted using the zoom control.


## Filter Effects

Mode: 

Tap:  →  → Filter effects


Apply filter effects to create retouched copies of pictures during playback:


### 1 Tap Filter effects.

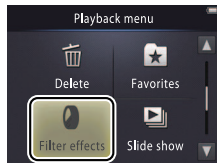





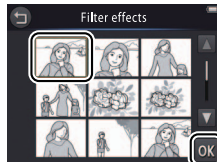

### 2 Select a picture.

Tap  or  to view pictures, then tap a picture and tap .






 




 **Filter effects** can not be applied to movies or to copies created with filter effects. Copies can only be created if there is sufficient memory remaining. Note that other cameras may be unable to display copies created with the COOLPIX S01 or upload them to a computer.

 **The original and copy** have the same date of creation but are independent files ( 67) that do not share favorite ( 36) or print order status ( 51).

 To exit without creating a retouched copy, tap .

### 3 Select a filter.

Tap a filter and tap **OK**.

	<b>Toy camera effect</b>	Vignetting and color are adjusted for a toy camera effect.
	<b>Soft</b>	Apply a soft-filter effect from the center of the image outwards and in the vicinity of faces detected by the camera.
	<b>Fisheye</b>	Create the effect of a picture shot with a fish-eye lens.
	<b>Miniature effect</b>	Real-life scenes take on the appearance of dioramas.
	<b>Vivid color</b>	Create a copy with vivid, saturated colors.
	<b>Black-and-white</b>	Create a black-and-white copy.
	<b>Sepia</b>	Create a sepia-toned monochrome copy.
	<b>Cyanotype</b>	Create a blue-and-white monochrome copy.

### 4 Tap Yes.



## Deleting Pictures

Delete pictures as described below. Note that once deleted, pictures can not be recovered.

### ■ ■ *Deleting Individual Pictures*


To delete individual pictures during playback:

#### 1 Display the picture.

Display the picture you want to delete.






#### 2 Display the icon.

Touch and hold the picture until the  icon is displayed.





#### 3 Tap .

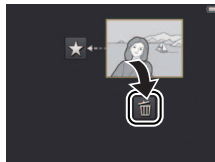Tap  or drag and drop the picture onto the .



➔ Deleting multiple pictures.....  45


 **Favorites** can not be deleted. Remove pictures from favorites before deleting them ( 36).

 Steps 2 and 3 can be omitted during **playback zoom**. Instead of touching and holding the picture, tap the  icon at the bottom of the display ( 34).

#### 4 Delete the picture.

A confirmation dialog will be displayed; tap **Yes**.



 To exit without deleting the picture, tap **No**.


## ■ ■ Deleting Multiple Pictures

Mode: 


Tap:  →  → Delete

Use the **Delete** option in the playback menu to delete multiple pictures.



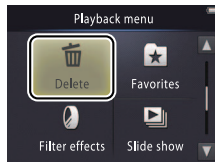




### 1 Tap Delete.




➔ Deleting individual pictures.....  43



 Some time may be required if the number of pictures affected is very large.

### 2 Tap an option.

 <b>Select images</b>	Delete selected images. Tap  or  to view images and tap to select or deselect. Selected images are indicated by  icons. Tap <b>OK</b> to proceed.
<b>ALL</b> All images	Delete all images.
 <b>Select images by date</b>	Delete all images taken on a selected date. Tap  or  to view the desired date and tap to select.

### 3 Tap Yes.

 Once deleted, pictures can not be recovered.

 **To exit without deleting pictures**, tap , or tap **No** in the confirmation dialog.

# Connect

## Copying Pictures to a Computer

### Installing ViewNX 2

Install ViewNX 2 to upload, view, edit, and share photos and movies. An Internet connection is required. For system requirements and other information, see the Nikon website for your region.

#### 1 Download the ViewNX 2 installer.


Start the computer and download the installer from:  
*<http://nikonimglib.com/nvnx/>*

#### 2 Double-click the downloaded file.

#### 3 Follow the on-screen instructions.

#### 4 Exit the installer.

Click **Yes** (Windows) or **OK** (Mac OS).

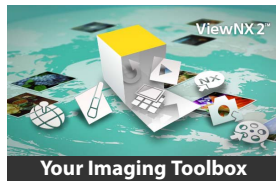

#### Your Imaging Toolbox

➔ Using ViewNX 2.....	📖 47
➔ Printing pictures.....	📖 48
➔ Print orders.....	📖 51
➔ Viewing pictures on TV .....	📖 53

🔗 For help installing ViewNX 2, click **Install Guide**.




## Using ViewNX 2: Downloading Pictures

**1** Turn the camera off.

**2** Connect the USB cable.

Connect the camera to the computer using the supplied USB cable. The camera will turn on and charging will start automatically (📖 63).

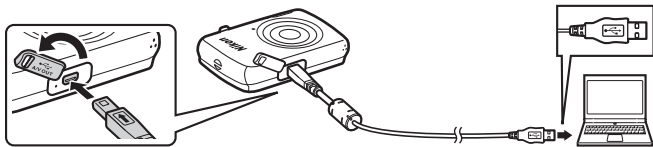

**3** Start Nikon Transfer 2 component of ViewNX 2.

**4** Click Start Transfer.

Pictures will be copied to the computer.

**5** Disconnect the camera.

Turn the camera off and disconnect the USB cable.



🔗 If prompted to choose a program, select Nikon Transfer 2. If **Windows 7** displays the following dialog, select Nikon Transfer 2 as described below.



**1** Under **Import pictures and videos**, click **Change program**. When prompted, select **Import File using Nikon Transfer 2** and click **OK**.

**2** Double-click **Import File**.

🔗 **To launch ViewNX 2 manually**, double-click the ViewNX 2 shortcut on the desktop (Windows) or click the ViewNX 2 icon in the Dock (Mac OS).

🔗 **For more information on using ViewNX 2**, see online help.

## Printing Photographs

Selected photos can be printed on a PictBridge printer connected directly to the camera.

### ■ Connecting the Camera




**1** Turn the camera off.

**2** Connect the USB cable.

Turn the printer on and connect it to the camera using the supplied USB cable. The camera will turn on automatically.

### ■ Printing Individual Pictures


**1** Select a picture.





Tap  or  to display the desired picture and tap .

**2** Adjust settings.

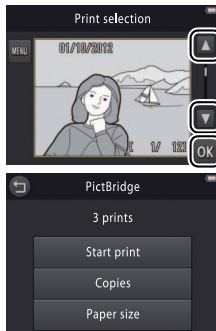When prompted, choose the number of copies (up to nine) and page size.



**3** Tap **Start print**.




-  PictBridge.....  82
-  Print orders .....  51

 **Be sure the camera is fully charged** to prevent it turning off unexpectedly.

 **Connect the camera directly to the printer**, not via a USB hub.


 The camera will not charge while connected to a printer. Note that some printers may fail to display the PictBridge dialog if **Auto** is selected for **Charge by computer** ( 63). If the PictBridge dialog is not displayed, turn the camera off, disconnect the USB cable, select **Off** for **Charge by computer**, and reconnect the camera.

 **To exit without printing pictures**, tap .

## ■ ■ Printing Multiple Pictures

1 Tap **MENU**.

2 Choose a page size.

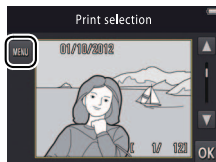

3 Tap an option.

- **Print selection:** Tap the **▲** and **▼** arrows on the right to display pictures and tap a picture to select, then tap the **▲** and **▼** arrows on the left to choose the number of copies (up to nine). A maximum of 99 pictures can be printed at a time; selected pictures are indicated by **✓** icons. To deselect a picture, tap **▼** until the number of copies is zero. To remove print marking from all pictures, tap **RESET**. When your selection is complete, tap **OK**. A confirmation dialog will be displayed; tap **Start print**.



- **Print all images:** Tap **Start print** to print one copy of all pictures in memory.
- **DPOF printing:** Tap **Start print** to print the pictures in the print order created with the **Print order** option in the playback menu. To view the print order, tap **View images**.


# Print Orders (DPOF)



Mode: 


Tap:  →  →  → **Print order**

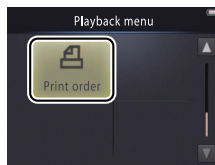

Create a digital “print order” for PictBridge printers and for devices that support DPOF.

## 1 Tap Print order.












➔ Printing pictures.....		48
➔ DPOF .....		82

 Some printers may not print the date or shooting information.

 To exit without modifying the print order, tap .

## 2 Select pictures.

Tap the  and  arrows on the right to display pictures and tap a picture to select, then tap the  and  arrows on the left to choose the number of copies (up to nine). A maximum of 99 pictures can be printed at a time; selected pictures are indicated by  icons. To deselect a picture, tap  until the number of copies is zero. To remove print marking from all pictures, tap . When your selection is complete, tap .

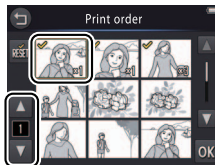

### 3 Select imprint options.

Tap the following options to select or deselect:

- **Date:** Print the date of recording on all pictures.
- **Info:** Print shooting information on all pictures.

### 4 Tap **OK**.


Tap **OK** to complete the print order.

✔ The **Date** and **Info** options are reset each time the print order menu is displayed. The date is the date recorded when the picture was taken and is not affected by later adjustments to the time zone or camera clock.


## Viewing Pictures on TV


To view pictures on a TV, connect the camera using an optional Audio Video Cable EG-CP14 and follow the steps below.

- 1 Turn the camera off.
- 2 Connect the A/V cable.

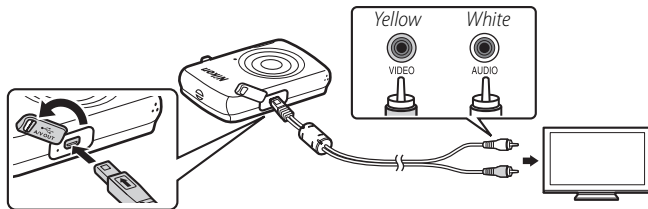



 
- 3 Tune the TV to the video channel.
- 4 Turn the camera on.


Press and hold the  button to turn the camera on. The camera monitor will remain off and pictures will be displayed on the TV.









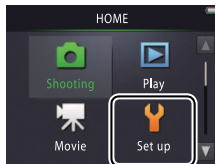



- ✔ **Always turn the camera off** before connecting or disconnecting the A/V cable.
- ✔ **The edges of images** may not be visible when viewed on the TV.
- 🔧 **If pictures are not displayed on the TV**, check that the correct option is selected for **Video mode** in the setup menu (📖 62).
- 🔧 **The controls on the camera** are used for playback. To view other pictures, drag a finger left or right over the monitor, or tap the monitor to view movies. While the monitor is in use, the monitor will turn on and TV playback will be interrupted; when the monitor is no longer in use, TV playback will resume automatically after a short pause. Note, however, that volume can only be adjusted using the controls on the TV.

# The Setup Menu

Use the setup menu to adjust basic camera settings. To display the setup menu, touch the  button and tap **Set up**. Tap  or  to display the desired item and tap to view options.



<b>Choose HOME display</b>	Choose the design of the HOME display.	 55
<b>Welcome screen</b>	Choose whether the camera displays a welcome message at startup.	 56
<b>Time zone and date</b>	Set the camera clock.	 57
<b>Sound settings</b>	Silence the beeps made by the camera.	 59
<b>Format memory</b>	Format camera memory.	 60
<b>Language</b>	Choose a language for the camera display.	 61
<b>Video mode</b>	Choose a video mode for connection to a TV or video device.	 62
<b>Charge by computer</b>	Choose whether the camera charges when connected to a computer.	 63
<b>Reset all</b>	Restore default settings.	 65
<b>Firmware version</b>	View the camera firmware version.	 66






## Choosing a HOME Design

Tap:  →  **Set up** → **Choose HOME display**

Choose the design of the HOME display.

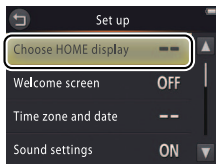
### 1 Tap **Choose HOME display**.




 To exit without changing settings, tap .

### 2 Select a design.


Tap an option and tap **OK**.

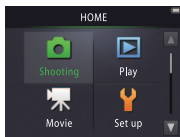


(Default)

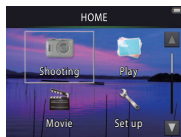

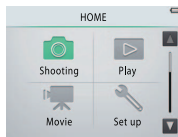

Wallpaper




 **Selecting Wallpaper** displays a list of pictures. Tap a picture and tap **OK** to select the picture as wallpaper for the HOME display. Choose **OFF** to use the default wallpaper.



# Welcome Screen

Tap:  →  **Set up** → **Welcome screen**

Choose whether the camera displays a welcome message when turned on.

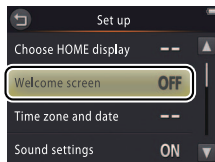
## 1 Tap **Welcome screen**.



 To exit without changing settings, tap .

## 2 Select an option.

Tap **On** or **Off** (default) and tap .

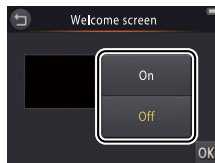




# Time Zone and Date

Tap:  →  **Set up** → **Time zone and date**

Set the clock, choose the order in which the date is displayed, and choose a time zone.
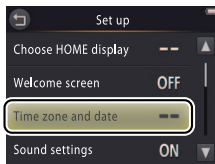
## 1 Tap Time zone and date.




 To exit without changing settings, tap .

## 2 Tap an option.

### Date and time


Tap items and tap  or  to edit. Tap  to save changes and exit.

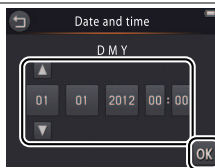

### Date format


Choose the order in which the year, month, and day are displayed.


### Time zone

Switch between your home time zone and the time zone in your travel destination, or turn daylight saving time on or off ( 58).


## ■ ■ Choosing a Travel Destination Time Zone

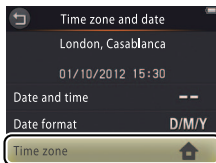

### 1 Tap Time zone.




To exit without changing settings, tap .
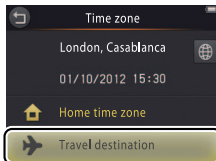
### 2 Tap Travel destination.






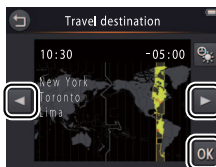
 appears in the shooting display when the travel destination time zone is selected. To display the time in your home zone, tap  **Home time zone**.
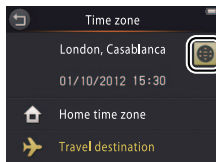
### 3 Tap .





### 4 Choose a time zone.

Tap  or  to highlight a time zone and tap  to select.




To turn **daylight saving time** on or off, tap .

# Sound Settings

Tap:  →  **Set up** → **Sound settings**


Choose whether the camera sounds a beep when an operation is performed.

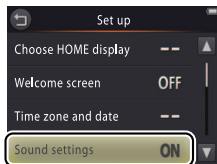

## 1 Tap Sound settings.





## 2 Select an option.

Tap **On** (default) or **Off**.

 **If On is selected**, a beep will sound when the shutter is released, the monitor is touched, the camera focuses, or the power is turned on. A beep will also sound to warn of errors and other potential problems.


 To exit without changing settings, tap .

# Formatting


Tap:  →  **Set up** → **Format memory**

Format camera memory. *Note that this permanently deletes all data in memory. Be sure to copy any pictures or other data you wish to keep to a computer before proceeding.*


## 1 Tap Format memory.

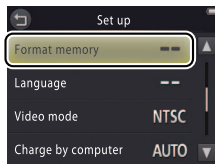


✓ Favorites (📖 36) are deleted when memory is formatted.

✎ To exit without changing settings, tap .

## 2 Tap Yes.

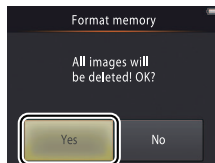

## 3 Tap OK.

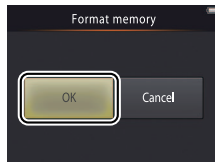


✓ Do not turn the camera off until formatting is complete and the setup menu is displayed.



## Choosing a Language

Tap:  →  Set up → Language

Choose a language for camera menus and displays.
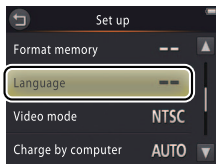
### 1 Tap Language.



 To exit without changing settings, tap .


### 2 Tap a language.



## Video Mode

Tap:  →  **Set up** → **Video mode**

Before connecting the camera to a TV, set the camera to the correct video standard.
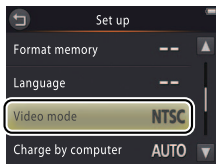
### 1 Tap Video mode.



 To exit without changing settings, tap .

### 2 Tap an option.

<b>NTSC</b>	Choose when connecting to NTSC devices.
<b>PAL</b>	Choose when connecting to PAL devices.





# Computer Charging



Tap:  →  **Set up** → **Charge by computer**

Choose whether the camera charges when connected to a computer.
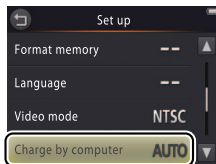
## 1 Tap Charge by computer.



→ The charging AC adapter  
.....  2

 To exit without changing settings, tap .

## 2 Tap an option.

<b>Auto</b> (default)	The camera charges automatically while the computer and camera are on.
<b>Off</b>	The camera does not charge while connected to a computer.

✔ A computer can not be used to charge the camera or download data from camera memory until the initial language selection has been completed and the camera clock is set (📖 3). Use the charging AC adapter (📖 2) when charging the camera for the first time after purchase or if the camera clock has been re-initialized. Note that depending on their specifications or settings, some computers may fail to supply power to the camera even after the language and clock are set.

The camera will not charge while off and may not charge while the computer is in sleep mode. While the computer is in sleep mode, the camera will continue run on battery power until turned off.

Turn the camera off before connecting or disconnecting the USB cable.

About three hours and 10 minutes are required to charge the battery by computer when no charge remains. Copying pictures to the computer increases the charging time; if you do not intend to transfer images, close Nikon Transfer 2 and any other image transfer software to reduce charging times. Once the battery is fully charged, the camera will turn off automatically if no data are exchanged with the computer for 30 minutes.


🔌 **The power-on lamp** shows camera status as follows:


- **Slow orange flash:** Camera charging
- **Off:** Charging not in progress or charging complete
- **Rapid orange flash:** Charging error. Ensure that the ambient temperature is in the correct range (5 °C–35 °C/41 °F–95 °F), the USB cable is correctly connected, and that the computer is not in sleep mode and is configured to supply power to the camera (note that depending on their specifications, some computers may be unable to supply power to the camera).

## Restoring Default Settings





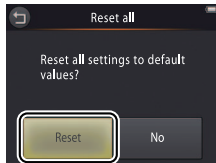





Tap:  →  **Set up** → **Reset all**






To restore camera settings to their default values, tap **Reset all**. A confirmation dialog will be displayed; tap **Reset**.



To exit without changing settings, tap  or **No**.



The following options are reset:

Option	Default
Mode  7	
Shooting/movie menu options	
<b>Self-timer</b>  20	Off
<b>Flash mode</b>  21	Auto
<b>Special effects</b>  23	Off
<b>Exposure comp.</b>  24	0
<b>Image mode</b>  25	3648 × 2736
<b>Touch shooting</b>  26	On
<b>Autofocus mode</b>  28	Single AF
<b>Movie options</b>  29	HD 720p (1280 × 720)

Option	Default
Setup menu options	
<b>Choose HOME display</b>  55	—
<b>Welcome screen</b>  56	Off
<b>Sound settings</b>  59	On
<b>Charge by computer</b>  63	Auto
PictBridge	
<b>Paper size</b>  48	Default

## Firmware Version

---

*Tap:*  →  **Set up** → **Firmware version**

View the camera firmware version.

 Tap  to exit.

# Technical Notes

## File and Folder Names

Image files created by the camera are named as follows:

**DSCN0001.JPG**

<b>DSCN</b>	Original photo or movie	<i>Four-digit file number (0001–9999) assigned in ascending order by camera</i>	<b>JPG</b>	Still image
<b>FSCN</b>	Copy created with filter effects		<b>MOV</b>	Movie

➔ Cleaning and storage	71
➔ Camera care	68
➔ Troubleshooting	72
➔ Error messages	77
➔ Specifications	80

Files are stored in **folders** created automatically by the camera using names beginning with a three-digit folder number followed by "NIKON" (e.g., "100NIKON"). If a picture is taken when the current folder contains 200 files or a file numbered 9999, the camera will create a new folder and name it by adding 1 to the current folder number (for example, the next folder created after "100NIKON" will be "101NIKON"). If the last file number was 9999, the first file in the new folder will be numbered 0001. If the current folder is numbered 999 and contains either 200 files or a file numbered 9999, no new pictures can be taken until memory is formatted (before formatting memory, be sure to copy to a computer any pictures you want to keep).

## Caring for the Camera: Cautions

To ensure continued enjoyment of your Nikon product, observe the precautions listed in this section and in “For Your Safety” (📖 iii–iv) when storing or using the device.

### ■ Camera Care

**Do not drop:** The product may malfunction if subjected to strong shocks or vibration. Do not touch or apply pressure to the lens.

**Keep dry:** This product is not waterproof, and may malfunction if immersed in water or exposed to high levels of humidity. Rusting of the internal mechanism can cause irreparable damage.

**Avoid sudden changes in temperature:** Sudden changes in temperature, such as those that occur when entering or leaving a heated building on a cold day, can cause condensation inside the device. To prevent condensation, place the device in a carrying case or plastic bag before exposing it to sudden changes in temperature.

**Keep away from strong magnetic fields:** Do not use or store this device in the vicinity of equipment that generates strong electromagnetic radiation or magnetic fields. Strong static charges or the magnetic fields produced by equipment such as radio transmitters could interfere with the displays, corrupt data, or affect the product's internal circuitry.

**Do not leave the lens pointed at the sun:** Do not leave the lens pointed at the sun or other strong light source for an extended period. Intense light may cause the image sensor to deteriorate or produce a white blur effect in photographs.

**Turn the product off before disconnecting the charging AC adapter:** Do not unplug the product while it is on or while images are being recorded or deleted. Forcibly cutting power in these circumstances could result in loss of data or in damage to product memory or internal circuitry.

**The monitor:** The monitor is constructed with extremely high precision; at least 99.99% of pixels are effective, with no more than 0.01% being missing or defective. Hence, while the monitor may contain pixels that are always lit (white, red, blue, or green) or always off (black), this is not a malfunction and has no effect on images recorded with the device.

Images in the monitor may be difficult to see in a bright light.

Do not apply pressure to the monitor, as this could cause damage or malfunction. Dust or lint on the displays can be removed with a blower. Stains can be removed by wiping lightly with a soft cloth or chamois leather. Should the monitor break, care should be taken to avoid injury from broken glass and to prevent liquid crystal from the display touching the skin or entering the eyes and mouth.

When bright subjects are framed in the monitor, white or colored streaks may appear in the display, sometimes in association with color shading. This phenomenon, known as “smear”, occurs when bright light strikes the image sensor and does not indicate a malfunction. Smear has no effect on photographs taken with the camera, but you should avoid shooting movies with the sun or other bright light sources in or near the frame.

## ■ ■ *The Camera Battery and Charging AC Adapter*

Do not use the camera at ambient temperatures below 0 °C (32 °F) or above 40 °C (104 °F); failure to observe this precaution could damage the camera battery or impair its performance. Battery capacity may be reduced at camera temperatures from 45 °C (113 °F) to 60 °C (140 °F).

Turning the camera on and off repeatedly when the battery is fully discharged will shorten battery life. If the camera battery is fully discharged, recharge the camera before use.

Battery capacity tends to decrease on cold days. Be sure the camera is fully charged before taking photographs outside in cold weather and keep the camera warm. Some of the capacity lost to cold may be regained when the camera warms again.

If the camera will not be used for some time, run the battery flat and store the camera in a location with an ambient temperature of 15 °C to 25 °C (59 °F to 77 °F; avoid hot or extremely cold locations). Repeat this process at least once every six months.

A marked drop in the time the camera retains its charge when used at room temperature indicates that the battery requires replacement. The battery is not user-serviceable but can be replaced, for a fee, by a Nikon-authorized service representative.

**Charging:** The camera is equipped with a built-in rechargeable Li-ion battery which is not charged at shipment; before use, charge the camera using the supplied charging AC adapter (📖 2). Charge at ambient temperatures between 5 °C (41 °F) and 35 °C (95 °F); at temperatures below 0 °C (32 °F) or above 60 °C (140 °F), the camera will not charge. Attempting to charge the camera while its internal temperature is elevated will impair performance, and the camera may not charge or charge only partially. Wait for the camera to cool before charging.

Continuing to charge the camera after it is fully charged can impair battery performance.

The temperature of the camera may rise during charging, but this does not indicate a malfunction.

**The charging AC adapter:** Use the EH-69P with compatible devices only. Do not attempt to charge the camera with other AC or USB-AC adapters. Failure to observe this precaution could damage the camera or cause it to overheat.

The EH-69P is for use in the country of purchase. Before visiting other countries, contact your travel agent for information on plug adapters.

## ■ ■ *Memory*

**Memory cards** can not be used.

**Formatting camera memory** permanently deletes all data it contains. Be sure to copy any pictures or other data you wish to keep to a computer prior to formatting.

Do not turn the camera off or disconnect the charging AC adapter while memory is being formatted, images are being recorded or deleted, or data are being copied to a computer. Failure to observe this precaution could result in loss of data or damage to the camera.

## ■ ■ *Disposal*

Nikon cameras with built-in batteries should be sent to a Nikon-authorized service center for disposal. Before disposing of the camera, be sure to delete all image data from the camera as described on page vii.



# Cleaning and Storage

## ■ ■ Cleaning

**Lens:** Avoid touching the glass with your fingers. Remove dust or lint with a *blower* (typically a small device with a rubber bulb on one end, which is pumped to produce a stream of air from the other). To remove fingerprints and other stains, wipe the lens with a soft cloth, working in a spiral from the center outward and applying lens cleaner (available from third-party suppliers) to the cloth if required.

**Monitor:** Remove dust or lint with a blower. To remove fingerprints and other stains, use a soft, dry cloth, being careful not to apply pressure.

**Body:** Use a blower to remove dust and lint, then wipe gently with a soft, dry cloth. After using the camera at the beach or seaside, use a cloth lightly dampened in fresh water to wipe off any sand or salt and then dry the camera thoroughly.

*Do not use alcohol, thinner, or other volatile chemicals.*

**Important:** Dust or other foreign matter inside the camera may cause damage not covered under warranty.

## ■ ■ Storage


Do not store the camera next to equipment that produces strong electromagnetic fields (such as televisions or radios) or in locations that are poorly ventilated, subject to humidities over 60%, or exposed to temperatures above 50 °C (122 °F) or below -10 °C (14 °F).


To prevent mold or mildew, take the camera out of storage at least once a month, turn it on, and release the shutter a few times before putting the camera away again.

## Troubleshooting


If the camera fails to function as expected, check this list of common problems before consulting your retailer or Nikon representative.


### ■ ■ Battery/Display/Setup

Problem	Cause/solution	
The camera is on but does not respond.	Wait for recording to end. If the problem persists, turn the camera off. If the camera does not turn off, press the reset button using a pointed object (📖 5). Note that although any data currently being recorded will be lost, data that have already been recorded will not be affected by pressing the reset button.	—
The camera does not charge.	<ul style="list-style-type: none"> <li>• If you are using the charging AC adapter, confirm that it is connected and plugged in.</li> <li>• If the camera is connected to a computer, confirm that:               <ul style="list-style-type: none"> <li>- <b>Auto</b> is selected for <b>Charge by computer</b> in the setup menu,</li> <li>- the USB cable is connected,</li> <li>- the camera is on, and</li> <li>- the computer is on and not in sleep mode.</li> </ul> </li> </ul> <p>Note that the charging AC adapter must be used the first time the camera is charged or when charging the camera after the clock has been re-initialized; if the clock is not set, the camera will not charge when connected to a computer. Depending on specifications or settings, some computers may not supply power to the camera even when the clock is set.</p>	2  63 47 64 64 2
The camera does not turn on.	The battery is exhausted.	2, 11


Problem	Cause/solution	
The camera turns off unexpectedly.	<ul style="list-style-type: none"> <li>• The battery is exhausted.</li> <li>• The camera is cold.</li> <li>• The charging AC adapter was connected while the camera was on.</li> <li>• The USB cable was disconnected while the camera was connected to a computer or printer. Reconnect the USB cable.</li> <li>• The camera's internal temperature is elevated. Wait for the camera to cool.</li> </ul>	2, 11 69 2 47 77
The monitor is blank.	<ul style="list-style-type: none"> <li>• The camera is off.</li> <li>• The camera is in sleep mode. Press the shutter-release button halfway.</li> <li>• The camera is connected to a computer or TV.</li> </ul>	5 15 47, 53
The monitor is hard to read.	The monitor is dirty.	71
The camera is warm to the touch.	The temperature of the camera may rise if it is used for extended periods or in warm environments. This is normal and does not indicate a malfunction.	—
The date and time are incorrect.	<ul style="list-style-type: none"> <li>• Check that the clock is set correctly. Note that the camera clock is less accurate than most household timepieces and must periodically be reset.</li> <li>• Photos taken while the "clock not set" icon flashes in the display have a time stamp of "0000/00/00 00:00", while movies have a time stamp of "2012/01/01 00:00".</li> </ul>	57 —
The camera prompts you to set the clock.	The clock battery is exhausted and settings have been reset.	3
Camera settings are reset.		
The monitor turns off and the power-on lamp flashes green.	The camera's internal temperature is elevated. Turn the camera off and wait for it to cool.	5



## ■■ Shooting

Problem	Cause/solution	
No pictures can be taken.	<ul style="list-style-type: none"> <li>• Pictures or menus are displayed: Press the shutter-release button to exit.</li> <li>• The battery is exhausted.</li> <li>• The flash indicator flashes: The flash is charging.</li> </ul>	9 2, 11 21
Shooting not available.	A USB or A/V cable is connected.	47, 48, 53
Pictures are out of focus.	<ul style="list-style-type: none"> <li>• The subject is too close to the camera.</li> <li>• The camera is unable to focus. Refocus or turn the camera off and then on again.</li> </ul>	80 5, 14
Pictures are blurred.	<ul style="list-style-type: none"> <li>• Turn the flash on.</li> <li>• Steady the camera using a bean bag or other similar object and use the self-timer.</li> </ul>	21 20
Bright spots appear in pictures taken with the flash.	The flash is reflecting from dust in the air. Turn the flash off.	21
The flash does not fire.	<ul style="list-style-type: none"> <li>• The flash is off.</li> <li>• The camera is in movie mode.</li> </ul>	21 —
The shutter is silent.	<ul style="list-style-type: none"> <li>• <b>Off</b> is selected for <b>Sound settings</b> in the setup menu.</li> <li>• The camera is in movie mode.</li> <li>• The speaker is covered.</li> </ul>	59 16 5
The AF-assist illuminator does not light.	The AF-assist illuminator may not light depending on the scene or the position of the subject in the frame.	14

Problem	Cause/solution	
Pictures are smudged.	The lens is dirty. Clean the lens.	71
Image “noise” appears in photos.	“Noise” (bright spots, randomly-spaced bright pixels, fog, or lines) may appear when the subject is poorly lit. Use the flash.	21
Pictures are dark.	<ul style="list-style-type: none"> <li>• The flash is off.</li> <li>• The flash window is obstructed.</li> <li>• The subject is too far away or backlit.</li> <li>• Exposure compensation is too low.</li> </ul>	21 9 22 24
Pictures are too bright.	Exposure compensation is too high.	24
Red-eye reduction is applied to areas with no red-eye.	Red-eye reduction may in very rare cases be applied to areas with no red-eye.	22
Recording is slow.	The camera is processing images to reduce noise or red-eye.	—
Ringed bands or rainbow stripes appear in photos.	The sun or other very bright light source is in the frame. Recompose the picture with the light source not in the frame or in another position.	—




## ■ Playback




Problem	Cause/solution	
Playback zoom is not available.	Playback zoom is not available with movies.	—

Problem	Cause/solution	
Filter effects are not available.	Confirm that the picture conforms to the requirements on page 41; note that filter effects are not available with movies.	41
Pictures are not displayed on TV.	<ul style="list-style-type: none"> <li>• The wrong <b>Video mode</b> is selected.</li> <li>• The camera contains no pictures.</li> </ul>	62 —
Pictures are unexpectedly removed from favorites.	The contents of camera memory have been modified by a computer.	—
Nikon Transfer 2 does not start when the camera is connected to a computer.	<ul style="list-style-type: none"> <li>• The camera is off.</li> </ul>	5
	<ul style="list-style-type: none"> <li>• The camera battery is exhausted.</li> <li>• The USB cable is not correctly connected or the computer has not detected the camera.</li> <li>• The computer does not satisfy the system requirements for ViewNX 2.</li> </ul> For more information, see the online help for ViewNX 2 (  47).	11 47 —
The PictBridge dialog is not displayed when the camera is connected to a printer	If <b>Auto</b> is selected for <b>Charge by computer</b> , select <b>Off</b> and reconnect the camera.	63
No pictures available for printing.	The camera contains no pictures.	—
Pictures do not print at the selected page size.	The printer does not support the page size selected with the camera or uses automatic page size selection. Use printer controls to choose the page size.	—


## Error Messages

This section lists the error messages that appear in the display.

Message	Cause/solution	
 (flashes)	The clock is not set. Set the camera clock.	57
<b>Battery exhausted.</b>	The camera battery is exhausted. Charge the camera.	2
<b>The camera will turn off to prevent overheating.</b>	The internal temperature of the camera is elevated. The power-on lamp will flash quickly to notify you that the camera will turn off automatically in five seconds. Wait for the camera to cool.	—
 (flashes red)	The camera is unable to focus. Try focusing again or focus on another subject at the same distance and recompose the picture using focus lock.	9, 14
<b>Please wait for the camera to finish recording.</b>	An image is being recorded. Wait for the camera to finish recording.	—
<b>Out of memory.</b>	Memory is full. Choose another image mode or delete pictures after copying any you want to keep to a computer.	25, 43, 47
<b>Image cannot be saved.</b>	An error occurred during recording or the camera has run out of file numbers: Format memory.	60
<b>Cannot record movie.</b>	Recording timed out before recording was complete.	—

Message	Cause/solution	
<b>Memory contains no images.</b>	<ul style="list-style-type: none"> <li>• Camera contains no images.</li> <li>• Favorites playback selected when favorites contains no images: Add images to favorites.</li> </ul>	— 36, 38
<b>File contains no image data.</b>	File is corrupt.	—
<b>All images are hidden.</b>	No pictures of the selected type are available for display in a slide show.	—
<b>Travel destination is in the current time zone.</b>	The time zone selected for the travel destination is the same as the home time zone.	—
<b>Album is full. No further pictures can be added.</b>	The maximum number of pictures in favorites is 999. Remove some of the existing pictures from favorites.	36
<b>Lens error</b>	A lens error has occurred. Turn the camera off and then on again. If the problem persists, press the reset button with a pointed object (  5). If the problem still persists, contact a Nikon-authorized service representative.	—
<b>Communications error</b>	An error occurred during printing. Turn the camera off and reconnect the USB cable.	48
<b>System error</b>	An error has occurred in the camera's internal circuitry. Turn the camera off and then on again. If the problem persists, press the reset button with a pointed object (  5). If the problem still persists, contact a Nikon-authorized service representative.	—



Message	Cause/solution	
<b>Printer error: check printer status</b>	An error occurred during printing. Check the printer to identify the issue * and tap <b>Resume</b> to continue printing once the problem is resolved.	—
<b>Printer error: check paper</b>	No paper of the selected size is loaded. Insert paper of the correct size * and tap <b>Resume</b> to continue printing.	—
<b>Printer error: paper jam</b>	Paper has jammed in the printer. Clear the jam * and tap <b>Resume</b> to continue printing.	—
<b>Printer error: out of paper</b>	The printer is out of paper. Insert paper of the correct size * and tap <b>Resume</b> to continue printing.	—
<b>Printer error: check ink</b>	Check the ink supply * and tap <b>Resume</b> to continue printing once the problem is resolved.	—
<b>Printer error: out of ink</b>	The printer is out of ink. Replace the ink * and tap <b>Resume</b> to continue printing.	—
<b>Printer error: file corrupt</b>	The current picture is corrupt. Tap <b>Cancel</b> to end printing.	—

\* See the printer manual for more information.

# Specifications

## ■ Nikon COOLPIX S01 Digital Camera

<b>Type</b>	Compact digital camera
<b>Number of effective pixels</b>	10.1 million
<b>Image sensor</b>	1/2.9-in. type CCD; total pixels: approx. 10.34 million
<b>Lens</b>	3× optical zoom, NIKKOR lens
<b>Focal length</b>	4.1–12.3 mm (angle of view equivalent to 29–87 mm lens in 35 mm [135] format)
<b>f/-number</b>	f/3.3–5.9
<b>Construction</b>	6 elements in 5 groups
<b>Digital zoom magnification</b>	Up to 4× (angle of view equivalent to approx. 348 mm lens in 35 mm [135] format)
<b>Vibration reduction</b>	Electronic VR (movies)
<b>Motion blur reduction</b>	Motion detection (still pictures)
<b>Autofocus (AF)</b>	Contrast-detect AF
<b>Focus range (measured from center of front surface of lens)</b>	Approx. 50 cm (1 ft 8 in.) – ∞; approx. 5 cm (2 in.) – ∞ ( <b>W</b> ) or approx. 50 cm (1 ft 8 in.) – ∞ ( <b>T</b> ) in macro close-up mode
<b>Focus-area selection</b>	Center, face priority, manual (tap to select)

<b>Monitor</b>	6.2 cm (2.5-in.), approx. 230k-dot touch screen TFT LCD
<b>Frame coverage (shooting)</b>	Approx. 96% vertical and horizontal
<b>Frame coverage (playback)</b>	Approx. 100% vertical and horizontal
<b>Storage</b>	
<b>Medium</b>	Internal memory (approx. 7.3 GB)
<b>File system</b>	DCF, Exif 2.3, DPOF-compliant
<b>File formats</b>	<ul style="list-style-type: none"> <li>• <b>Still pictures:</b> JPEG</li> <li>• <b>Movies:</b> MOV (H.264/MPEG-4 AVC with LPCM monaural sound)</li> </ul>
<b>Image size (pixels)</b>	<ul style="list-style-type: none"> <li>• <b>10 M</b> (3648 × 2736)</li> <li>• <b>4 M</b> (2272 × 1704)</li> <li>• <b>2 M</b> (1600 × 1200)</li> </ul>
<b>Movie frame size (pixels)</b>	<ul style="list-style-type: none"> <li>• <b>HD 720p</b> (1280 × 720)</li> <li>• <b>VGA</b> (640 × 480)</li> </ul>
<b>ISO sensitivity (standard output sensitivity)</b>	ISO 80–1600
<b>Exposure</b>	
<b>Metering mode</b>	256-segment matrix, center-weighted (at under 2× digital zoom), spot (at 2× digital zoom and up)
<b>Exposure control</b>	Programmed auto with exposure compensation (±2 EV in steps of 1/3 EV)

Shoot	View	Connect	The Setup Menu	Technical Notes
<b>Shutter</b>	Mechanical and charge-coupled electronic shutter			
<b>Speed</b>	1/2000 – 1 s			
<b>Aperture</b>	Electronically-selected neutral density (ND) filter (–3 AV)			
<b>Range</b>	2 positions (f/3.3 and f/9.3 [W])			
<b>Self-timer</b>	Approx. 10 seconds			
<b>Built-in flash</b>				
<b>Range (approx.; auto ISO)</b>	<ul style="list-style-type: none"> <li>• <b>W:</b> 0.5–1.4 m (1 ft 8 in.–4 ft 7 in.)</li> <li>• <b>T:</b> 0.5–0.8 m (1 ft 8 in.–2 ft 7 in.)</li> </ul>			
<b>Flash control</b>	TTL auto with monitor preflashes			
<b>Interface</b>	Hi-Speed USB			
<b>Data transfer protocols</b>	MTP, PTP			
<b>Video output</b>	NTSC, PAL			
<b>I/O terminal</b>	Audio video output/digital I/O (USB)			
<b>Supported languages</b>	Arabic, Bengali, Chinese (Simplified and Traditional), Czech, Danish, Dutch, English, Finnish, French, German, Greek, Hindi, Hungarian, Indonesian, Italian, Japanese, Korean, Norwegian, Polish, Portuguese (European and Brazilian), Romanian, Russian, Spanish, Swedish, Tamil, Thai, Turkish, Ukrainian, Vietnamese			
<b>Power sources</b>	Built-in rechargeable Li-ion battery			
<b>Charging time</b>	Approx. 2 h 50 min (using Charging AC Adapter EH-69P; battery fully discharged)			
<b>Battery life</b> <sup>1</sup>				
<b>Still pictures</b>	Approx. 190 (with built-in battery)			
<b>Movies (actual battery life for recording)</b> <sup>2</sup>	Approx. 1 h 10 min (with built-in battery)			
<b>Case (optional)</b>	CS-CP4-1 (with strap)			
<b>Dimensions (W × H × D)</b>	Approx. 77.0 × 51.2 × 17.2 mm (3.1 × 2.1 × 0.7 in.), excluding projections			
<b>Weight</b>	Approx. 96 g (3.4 oz)			
<b>Operating environment</b>				
<b>Temperature</b>	0 °C–40 °C (32 °F–104 °F)			
<b>Humidity</b>	85% or less (no condensation)			

Unless otherwise stated, all figures assume a fully-charged battery and an ambient temperature of 23 ± 3 °C (73.4 ± 5.4 °F) as specified by the Camera and Imaging Products Association (CIPA).

- Figures based on CIPA standards for measuring the endurance of camera batteries. Performance for still pictures measured under the following test conditions: **10M 3648 × 2736** selected for **Image mode**, zoom adjusted with each shot, and flash fired with every other shot. Movie recording time assumes a frame size of 1280 × 720. Figures may vary with use, the interval between shots, and the length of time menus and images are displayed.
- Individual movie files can not exceed 29 minutes in length. Recording may end before this limit is reached if camera temperature becomes elevated.

## ■ ■ Charging AC Adapter EH-69P

<b>Rated input</b>	AC 100–240 V, 50/60 Hz, 0.068–0.042 A
<b>Rated output</b>	DC 5.0 V, 550 mA
<b>Operating temperature</b>	0 °C–40 °C (32 °F–104 °F)
<b>Dimensions (W × H × D)</b>	Approx. 55 × 22 × 54 mm (2.2 × 0.9 × 2.2 in.), excluding plug adapter
<b>Weight</b>	Approx. 55 g (2.0 oz), excluding plug adapter

Specifications subject to change without notice. Nikon will not be held liable for damages that may result from any errors this manual may contain.

## ■ ■ Supported Standards

- **DCF:** The **D**esign **R**ule for **C**amera **F**ile **S**ystems (DCF) is a standard widely used in the digital camera industry to ensure compatibility among different makes of camera.
- **DPOF:** **D**igital **P**rint **O**rders **F**ormat (DPOF) is an industry-wide standard that allows pictures to be printed from print orders stored in memory.
- **Exif version 2.3:** The camera supports Exif (**E**xchangeable **I**mage **F**ile **F**ormat for Digital Still Cameras) version 2.3, a standard in which information stored with photographs is used for optimal color reproduction when the images are output on Exif-compliant printers.
- **PictBridge:** A standard developed cooperatively by the digital camera and printer industries, allowing photographs to be output directly to a printer without connecting the camera to a computer.

## ■ ■ AVC Patent Portfolio License

This product is licensed under the AVC patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC standard (“AVC video”) and/or (ii) decode AVC video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, L. L. C.

See <http://www.mpegla.com>

## ■ ■ **FreeType License (FreeType2)**

Portions of this software are copyright © 2012 The FreeType Project (<http://www.freetype.org>). All rights reserved.

## ■ ■ **MIT License (HarfBuzz)**







 




Portions of this software are copyright © 2012 The HarfBuzz Project (<http://www.freedesktop.org/wiki/Software/HarfBuzz>). All rights reserved.

## ■ ■ **Trademark Information**

Macintosh, Mac OS, and QuickTime are registered trademarks of Apple Inc. in the United States and/or other countries. Microsoft, Windows, and Windows Vista are either registered trademarks, or trademarks of Microsoft Corporation in the United States and/or other countries. The PictBridge logo is a trademark. Adobe and Acrobat are registered trademarks of Adobe Systems Inc. All other trade names mentioned in this manual or the other documentation provided with your Nikon product are trademarks or registered trademarks of their respective holders.

# Index

## Symbols

 (HOME) .....	7, 55
 (photo/shooting) .....	8
 (playback) .....	30
 (movie) .....	16, 31
 (setup) .....	54
 (view favorites) .....	38
 (list by date) .....	39
 (favorites) .....	36
 (delete) .....	43
 (playback zoom) .....	34
 (thumbnail playback) .....	35

## A

A/V cable .....	53
Auto flash .....	21
Autofocus .....	14, 19, 28
Autofocus mode .....	28

## B

Backlit subjects .....	12
Battery level .....	11
Black-and-white .....	42

## C

Charge by computer .....	63
Charging AC adapter .....	2

Charging the camera .....	2
Choose HOME display .....	55
Close-ups .....	12, 14
Computer .....	46
Connector cover .....	5
Cyanotype .....	42

## D

Date and time .....	57
Date format .....	57
Daylight saving time .....	58
Delete .....	43
Digital zoom .....	14
DPOF .....	51, 82
Drag .....	6
Drag and drop .....	6

## E

Exposure compensation .....	24
-----------------------------	----

## F

Face detection .....	11, 14
Favorites .....	36, 38
File names .....	67
Filter effects .....	41
Firmware version .....	66
Fisheye .....	42

Flash mode .....	21
Focus .....	9
Focus area .....	11
Format memory .....	60
Full-frame playback .....	30
Full-time AF .....	28

## H

High key .....	23
High-contrast monochrome .....	23
HOME display .....	7, 55

## I

Image mode .....	25
Image size .....	25

## J

JPG .....	67
-----------	----

## L

Landscapes .....	12
Language .....	61
Lens .....	5
List by date .....	39
Low key .....	23

## M

Menus .....	7
-------------	---

Shoot	View	Connect	The Setup Menu	Technical Notes	
Microphone .....	5	Press the shutter-release button halfway .....	9	Thumbnail playback .....	35
Miniature effect .....	42	Print order .....	51	Time available .....	17
Monitor .....	6, 11, 17, 32	Printing .....	48	Time zone .....	57
MOV .....	67	<b>R</b>		Time zone and date .....	57
Movie frame size .....	29	Red-eye reduction .....	22	Touch and hold .....	6
Movie menu .....	18	Reset all .....	65	Touch screen .....	6
Movie options .....	29	Reset button .....	5	Touch shooting .....	26
Movies .....	16, 31	<b>S</b>		Toy camera effect .....	42
<b>N</b>		Self-timer .....	20	<b>U</b>	
Night landscapes .....	12	Sepia .....	42	USB and audio/video connector ..	5, 47, 48, 53
Night portraits .....	12	Setup menu .....	54	USB cable .....	47, 48
Nikon Transfer 2 .....	47	Shoot .....	8	<b>V</b>	
Nostalgic sepia .....	23	Shooting menu .....	13	Video mode .....	62
Number of exposures remaining .....	11, 25	Shutter-release button .....	9	ViewNX 2 .....	46
<b>P</b>		Single AF .....	28	Vivid color .....	42
PictBridge .....	48, 82	Slide show .....	40	Volume .....	31, 40
Playback .....	30	Soft .....	42	<b>W</b>	
Playback button .....	5, 30	Sound settings .....	59	<b>W</b> (zoom out) .....	9
Playback menu .....	33	Speaker .....	5	Welcome screen .....	56
Playback zoom .....	34	Special effects .....	23	<b>Z</b>	
Portraits .....	12	Strap .....	1	Zoom .....	9
Power switch .....	5	<b>T</b>		Zoom control .....	9
Power-on lamp .....	2	<b>T</b> (zoom in) .....	9	Zoom in .....	9
Press the shutter-release button all the way down .....	9	Tap .....	6	Zoom out .....	9
		Television .....	53		

No reproduction in any form of this manual, in whole or in part (except for brief quotation in critical articles or reviews), may be made without written authorization from NIKON CORPORATION.

**NIKON CORPORATION**

© 2012 Nikon Corporation



SB2H01(11)  
6MNA9911-01