


OLYMPUS[®]

DIGITAL CAMERA

SP-820UZ

Instruction Manual

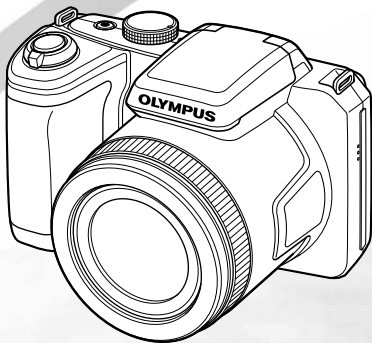

- Thank you for purchasing an Olympus digital camera. Before you start to use your new camera, please read these instructions carefully to enjoy optimum performance and a longer service life. Keep this manual in a safe place for future reference.
- We recommend that you take test shots to get accustomed to your camera before taking important photographs.
- In the interest of continually improving products, Olympus reserves the right to update or modify information contained in this manual.

Checking the contents of the box



Digital camera



Strap



Lens cap and lens cap strap



Four AA batteries





USB cable (CB-USB8)



OLYMPUS Setup CD-ROM

Other accessories not shown: Warranty card
Contents may vary depending on purchase location.

Names of Parts

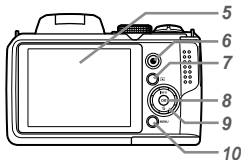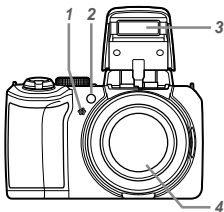

- 1 Microphone
- 2 AF illuminator/Self-timer lamp
- 3 Flash
- 4 Lens
- 5 Monitor
- 6 button (record movies)
- 7 button (switching between shooting and playback)
- 8 button (OK)
- 9 Arrow pad


INFO button
(changing information display)

 


button (erase)

- 10 **MENU** button

Arrow pad


For , use the arrow pad to navigate menus, etc.

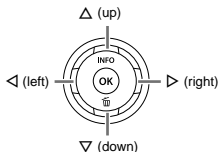

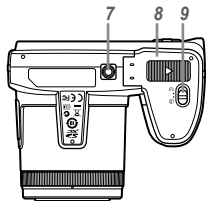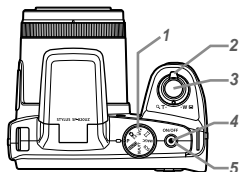


- 1 Mode dial
- 2 Zoom lever
- 3 Shutter button
- 4 Indicator lamp
- 5 ON/OFF button
- 6 Speaker
- 7 Tripod socket
- 8 Battery/card compartment cover
- 9 Battery/card compartment lock
- 10 Strap eyelet
- 11 Connector cover
- 12 Multi-connector
- 13 HDMI micro connector

Attaching the camera strap and lens cap

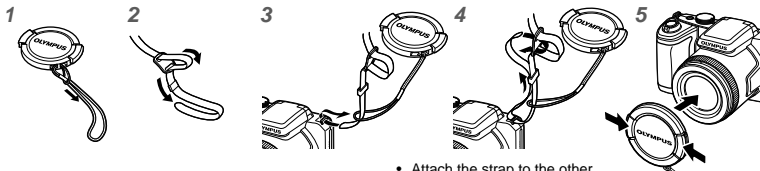


- Attach the strap to the other eyelet in the same manner.

 Pull the strap tight so that it does not come loose.


Inserting and removing the battery and card

1 Follow Steps ①, ② and ③ to open the battery/card compartment cover.

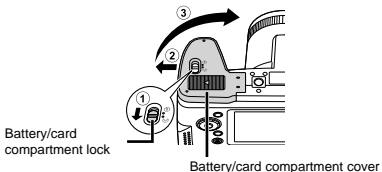

- ⚠ Turn off the camera before opening the battery/card compartment cover.

 
2 Insert the batteries.



- ⚠ When using the camera, be sure to close and lock the battery/card compartment cover.
- ⚠ For the types of batteries that can be used, see "Battery Handling Precautions" (p. 65) If using rechargeable batteries, charge the batteries.


3 Insert the card straight until it clicks into place.

Write-protect switch

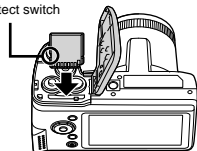


- ⚠ Always use SD/SDHC/SDXC cards or Eye-Fi card with this camera. Do not insert other types of memory cards. "Using the card" (p. 61)
- ⚠ Do not touch the metallic parts of the card directly.

To remove the card

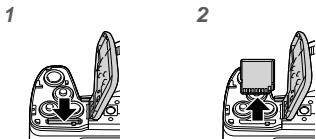

Press the card in until it clicks and comes out slightly, then remove the card.


4 Follow Steps ①, ② and ③ to close battery/
card compartment cover.

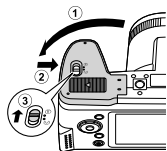

- ! Slide the battery/card compartment lock from ☞ to ☜ and ensure that the battery/card compartment cover is securely locked. Failure to do so may cause the battery/card compartment cover to open during shooting and the batteries to fall out, resulting in loss of image data.

When to replace the batteries

Replace the batteries when the error message shown below appears.

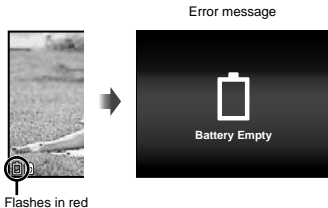


Turning on the camera and making the initial settings

When you turn on the camera for the first time, a screen appears enabling to set the language for the menus and messages displayed in the monitor, and the date and time.


- 1 After turning the camera on with the ON/OFF button, select a language using $\Delta \nabla \triangleleft \triangleright$ and press the OK button.

- 2 Use $\Delta \nabla$ to select the year for [Y].

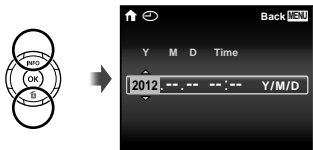

Date and time setting screen

- 3 Press \triangleright to save the setting for [Y].

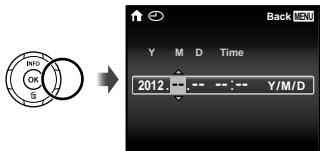

- 4 As in Steps 2 and 3, use $\Delta \nabla \triangleleft \triangleright$ to set [M] (month), [D] (day), [Time] (hours and minutes), and [Y/M/D] (date order), and then press the OK button.

- For precise time setting, press the OK button as the time signal strikes 00 seconds.

- 5 Use $\triangleleft \triangleright$ to select the [\uparrow] time zone and then press the OK button.

- Use $\Delta \nabla$ to turn daylight saving time ([Summer]) on or off.




Learning how to use the camera

- Press the **ON/OFF** button to turn on the camera and enter the standby mode. (Press the **ON/OFF** button again to turn off the camera.)
 - Select the shooting mode, and press the shutter button to shoot a still image.
 - To shoot a movie, press the **⊙** button.
 - Set the shooting functions using the function menu or the setup menu.
- To view images, press the **▶** button to switch to playback mode.
 - Set the playback functions using the setup menu.
 - To return to standby mode, press the **▶** button again, or press the shutter button halfway down and then release it.
- Press and hold the **▶** button while the camera is turned off to start up the camera in the playback mode.
 - In this case, pressing the **▶** button again sets the camera to the standby mode.


Shooting still images

- 1 Remove the lens cap.
- 2 Press the ON/OFF button to turn on the camera.
- 3 Select the shooting mode. (p. 11)
- 4 Hold the camera and compose the shot.

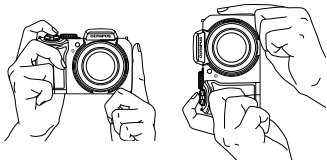


- ! When holding the camera, take care not to cover the flash, microphone or other important parts with your fingers, etc.

- 5 Press the shutter button halfway down to focus.

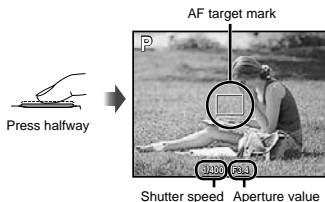

- ! The camera was unable to focus if the AF target mark flashes red. Try focusing again.

 - 6 To take the picture, gently press the shutter button all the way down while being careful not to shake the camera.



Using the zoom

Turning the zoom lever adjusts the shooting range.

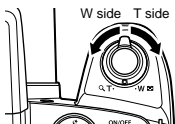


Image size	Zoom bar
14M/16:9L	 Optical zoom
Other	


*1 Due to increased processing of the pixel counts, the image quality will not degrade. The magnification ratio changes depending on the image size setting.

⚠ The zoom position is locked when [Super Macro] (p. 23) is selected.

Using the flash

The flash functions can be selected to best match the shooting conditions.


1 Lift up the flash unit manually.

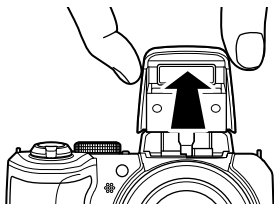

To turn off the flash

Press the flash down back into the camera.

Shooting screen displays

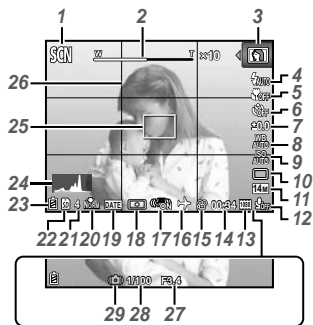

When the shutter button is pressed halfway down

Reading a histogram

If the peak fills too much of the frame, the image will appear mostly white.

If the peak fills too much of the frame, the image will appear mostly black.

The green section shows luminance distribution within the screen's center.



No.	Name	Normal	Detailed	No info.
1	Shooting mode	✓	✓	-
2	Zoom	✓	✓	-
3	Shooting submenu	✓	✓	-
4	Flash	✓	✓	-
5	Macro	✓	✓	-
6	Self-timer	✓	✓	-
7	Exposure compensation	✓	✓	-
8	White balance	✓	✓	-
9	ISO	✓	✓	-
10	Drive	✓	✓	-
11	Image size (still images)	✓	✓	-
12	Recording with sound/ Wind Noise Reduction	✓	✓	-
13	Image size (movies)	✓	✓	-
14	Movie recording length	✓	✓	-
15	Movie recording icon	✓	✓	-
16	World time	-	✓	-
17	Image stabilization	-	✓	-
18	Metering	-	✓	-
19	Date stamp	✓	✓	-
20	Compression	✓	✓	-
21	Number of storable still pictures	✓	✓	-
22	Current memory	✓	✓	-
23	Battery check	✓	✓	-
24	Histogram	-	✓	-
25	AF target mark	✓	✓	✓
26	Grid guide	-	✓	-
27	Aperture value	✓	✓	✓
28	Shutter speed	✓	✓	✓
29	Camera shake warning	✓	✓	✓

Selecting the shooting mode

- ! The default settings of the function are highlighted in .

Shooting mode	Submode
P (P mode)	—
IAUTO (IAUTO mode)	—
BEAUTY (BEAUTY mode)	Recommended/Set 1/Set 2/Set 3
SCN (SCN mode)	Portrait / Landscape / Night Scene / Night+Portrait / Sport / Indoor / Self Portrait / Sunset / Fireworks / Cuisine / Documents / Beach & Snow / Pet Mode - Cat / Pet Mode - Dog / Backlight HDR
MAGIC (MAGIC mode)	Pop Art/Pin Hole/Fish Eye/ Drawing/Soft Focus/Punk/ Sparkle/Watercolor/Reflection/ Miniature/Fragmented/Dramatic
(Panorama mode)	Auto/Manual/ PC
(Hand-Held Starlight)	—
(Photo with Clip)	73 / 53 / 83 / 70 / 50 / 80

- ! "List of settings available in each shooting mode" (p. 56), "List of **SCN** settings" (p. 57), "List of **MAGIC** settings" (p. 59)

1 Use the mode dial to select the shooting mode.

- ! In **BEAUTY**, **SCN**, **MAGIC**, or , press \triangleleft for the function menu, then \triangleleft / \triangleright for the sub menu, then press the button.



To select a submode



Icon indicating the submode that is set

P (*P mode*)

The camera will select the appropriate aperture value and shutter speed for the subject. Changes can also be made to various shooting settings, such as exposure compensation, as needed.

IAUTO (*IAUTO mode*)

The camera will automatically select the optimal shooting mode for the scene. The shooting condition is decided by the camera and settings cannot be changed, excepting some functions.

BEAUTY (*BEAUTY mode*)

You can shoot with Beauty Fix effects.

- 1 Point the camera toward the subject. Check the frame appearing around the face detected by the camera, and then press the shutter button to take the picture.
- 2 To save the image, select [OK] on the review screen and press the **OK** button. To retouch the image additionally, select [Beauty Fix].



Beauty Fix

- 1 Use $\Delta \nabla \triangleleft \triangleright$ to select a retouching item, and press the **OK** button.



- 2 Check the retouched effects on the review screen, then press the **OK** button to start the retouch process and save.
- Settings for Beauty Fix can be registered.
- 1 Depending on the picture, the editing may not be effective.
 - 1 After retouching, [Image Size] is limited to **[5M]** or smaller.

SCN (*SCN mode*)

You can shoot with the best mode for the subject and shooting scene. The best shooting settings for various scenes are pre-programmed as submodes. Note that functions may be limited in some modes.

Refer to the descriptions displayed on the submode selection screen, and select the desired submode.

MAGIC (MAGIC mode)

You can shoot with special effects.

Refer to the sample images displayed on the submenu selection screen, and select the desired submenu.

The best shooting settings for each effect are pre-programmed, so some function settings cannot be changed.

- ! Note that some effects may not be applied to movies.
- ! In [Miniature], camera does not record sound for movie files.

☞ (Panorama mode)

You can shoot and combine multiple images to create an image with a wide angle of view (panoramic image).

Submenu	Application
Auto	Panorama images are automatically combined just by swinging the camera in the shooting direction. Press the shutter button once to begin the sequence.
Manual	Three frames are taken and combined by the camera. The user composes the shots using the guide frame and manually releases the shutter.
PC	The frames that were taken are combined into a panorama image using the PC software.

- ! Move the camera so that it rotates horizontally around the center of the lens to take better panorama images.

Taking pictures with [Auto]

- 1 Select [Auto] in the submenu, and use \triangleleft and \triangleright to select the angle of view and then press the \odot button.
- 2 Point the camera to the start position.
- 3 Press the shutter button to begin shooting.




Guide

- 4 Start panning. When the arrow reaches the end of the guide, recording ends automatically.
 - The camera automatically processes the images and the combined panorama image is displayed.
 - To stop shooting in the middle, press the shutter button or \odot button. If the camera pauses for a while, shooting automatically finishes.
- ! If the message "Image was not created." is displayed, shoot again.
 - ! To cancel the panorama function, press the **MENU** button.
 - ! If the shutter does not automatically release, try [Manual] or [PC].

Taking pictures with [Manual]

- 1 Use $\Delta \nabla \langle \rangle$ to specify at which edge the next picture is to be connected.

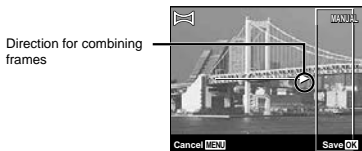

- 2 Press the shutter button to take the first frame.
 - 3 Compose the next shot so that the edge of the first frame displayed faintly on the screen overlaps the subject of the second frame, and press the shutter button.
- ! To combine only two frames, press the \odot button.
- 4 Repeat step 3 to take a third frame. The camera automatically combines the frames into a single panorama image.

Taking pictures with [PC]

- 1 Use $\Delta \nabla \langle \rangle$ to select the direction that the frames are combined.
- 2 Press the shutter button to take the first frame. The edge of the first frame is displayed faintly on the screen.
- 3 Compose the next shot so that the edge of the first frame displayed faintly on the screen overlaps the subject of the second frame, and press the shutter button.
- 4 Repeat step 3 until the desired number of frames are taken, and then press the \odot button or **MENU** button when finished.
Panorama shooting is possible for up to 10 frames.

The shot images are combined into a single panorama image by the PC software.

- ! For details on installing the PC software, refer to (p. 44). In addition, refer to the PC software help guide for details on how to make panorama images.

(Hand-Held Starlight)

Night scene pictures with less camera shake can be taken without using a tripod. Since there is less noise, it is suitable for shooting night scene.

(Photo with Clip)

When shooting a still image, a movie clip that includes before and after the shutter release is recorded simultaneously.

Submenu	Description
$\overline{7}3$	7 sec / 3 sec
$\overline{6}3$	5 sec / 3 sec
$\overline{5}3$	3 sec / 3 sec
$\overline{7}0$	7 sec / 0 sec
$\overline{6}0$	5 sec / 0 sec
$\overline{5}0$	3 sec / 0 sec

- ! Shooting may not be available in the following conditions; right after entering the shooting mode (such as right after turning power on) or right after a picture is shot.
- ! The image size of the movie is set to VGA or 360p.

Viewing images

1 Press the button.

Number of frames/
Total number of images



 


Playback image

- ! Camera displays images captured in sequential or **BEAUTY** modes in groups. Turn the zoom lever to the T side to play back the image in the group.

2 Use to select an image.




- ! Hold  to fast forward and hold  to reverse.
- ! Press the  button again to return to the shooting screen.


Index view and close-up view

Index view enables quick selection of a desired image. Close-up view (up to 10x magnification) allows checking of image details.

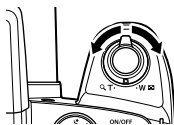



1 Turn the zoom lever.

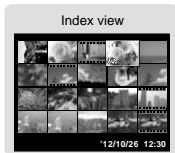


W ↓ ↑ T

 

To select an image in index view

Use    to select an image, and press the  button to display the selected image in single-image view.

To scroll an image in close-up view

Use    to move the viewing area.


Playing back panorama images

Panorama images that were combined together using [Auto] or [Manual] can be scrolled for viewing.

1 Select a panorama image during playback.




2 Press the button.

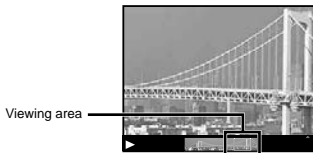
 




To control panorama image playback


Stop playback: Press the **MENU** button.

Pause: Press the  button.

Control while paused:








Press     to scroll the image in the direction of the pressed button.


Turn the zoom lever to enlarge/shrink the image.

Press the  button to restart scrolling.

Playing back grouped images

Depending on the settings, the taken images are displayed as a group during playback. Several operations are available for the grouped images; such as expanding to view or erase images respectively, or erasing the group or images collectively.

	<p>Expands.</p> <ul style="list-style-type: none">• Select the image and press the  button to display the images respectively.• Use   to view the previous/next frame.
	Playback/pauses playback.
 	Adjusts the volume when playing back images with sound.

-  If a group frame is erased, all images in that group are erased collectively. If the group includes images you want to keep, expand the group and protect them respectively.

Sequential images frame


- The sequentially shot images are played back automatically.
- Expand to view the images in index view.



Sequential images frame

(Photo with Clip) frame

- The movie clip and the still images are played back.

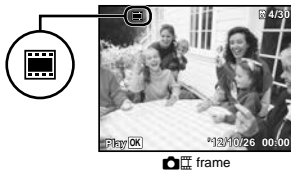


Playback mode display

• Normal



• Detailed

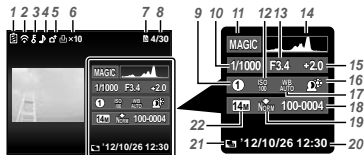

• No information



Switching the displays

The displays change in the order of Normal → Detailed → No info. each time **Δ (INFO)** is pressed.

No.	Name	Normal	Detailed	No info.
1	Battery check	-	✓	-
2	Eye-Fi transfer data	✓	✓	-
3	Protect	✓	✓	-
4	Adding sound	✓	✓	-
5	Upload order	✓	✓	-
6	Print reservation/ number of prints	✓	✓	-
7	Current memory	✓	✓	-
8	Frame number/total number of images	✓	✓	-
9	MAGIC mode	-	✓	-
10	Shutter speed	-	✓	-
11	Shooting mode	-	✓	-
12	ISO	-	✓	-
13	Aperture value	-	✓	-
14	Histogram	-	✓	-
15	Exposure compensation	-	✓	-
16	Shadow adjustment technology	-	✓	-
17	White balance	-	✓	-
18	File name	-	✓	-
19	Compression	-	✓	-
20	Recording date and time	✓	✓	-
21	Grouped Image	✓	✓	✓
22	Image size	-	✓	-

Erasing images during playback (Single image erase)

- 1 Display the image you want to erase and press ∇ (🗑️).




- 2 Press Δ ∇ to select [Erase], and press the OK button.

- ! Multiple images or all images can be erased at a time (p. 34).

Shooting movies

1 Press the **REC** button to start recording.

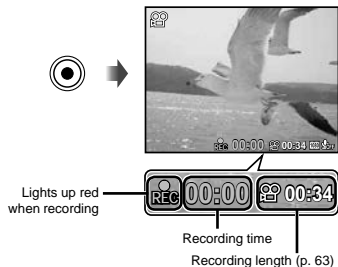

! The movie is shot in the set shooting mode. Note that the shooting mode effects may not be obtained for some shooting modes.

! Sound is also recorded.

2 Press the **REC** button again to stop recording.

Playing back movies

Select a movie, and press the **PLAY** button.




Movie

During playback

Pausing and restarting playback	Press the PLAY button to pause playback. During pause, fast forward or reverse, press the PLAY button to restart playback.
Fast forward	Press FF to fast forward. Press FF again to increase the fast forward speed.
Rewind	Press REW to rewind. Press REW again to increase the rewind speed.
Adjusting the volume	Use ▲ ▼ to adjust the volume.

Operations while playback is paused

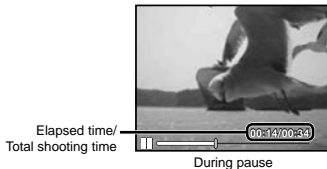

Cueing	Use Δ to display the first frame and press ∇ to display the last frame.
Advancing and rewinding one frame at a time	Press \triangleright or \triangleleft to advance or rewind one frame at a time. Hold \triangleright or \triangleleft pressed for continuous advance or rewind.
Resuming playback	Press the \odot button to resume playback.

To stop movie playback


Press the **MENU** button.

- ⚠ To play back movies on the computer, the included PC software is recommended. For the first use of the PC software, connect the camera to the computer, then launch the software (p. 43).

Menu settings

Some shooting menu functions cannot be set in certain shooting modes.

For details, refer to "List of settings available in each shooting mode" (p. 56).

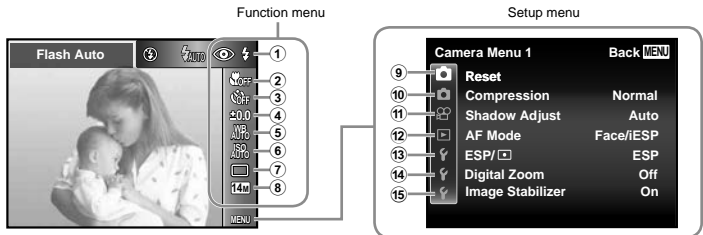

Function menu (p. 23)

1 Flash	3 Self-timer	5 White balance	7 Drive
2 Macro	4 Exposure compensation	6 ISO	8 Image Size


Setup menu

9 Camera Menu 1 p. 27 Reset Compression Shadow Adjust AF Mode ESP/ Digital Zoom Image Stabilizer	11 Movie Menu p. 31 Image Size IS Movie Mode (Movie sound recording) Wind Noise Reduction	Eye-Fi USB Connection Power On Sound Settings File Name
10 Camera Menu 2 p. 29 AF Illuminat. Rec View Pic Orientation Icon Guide Date Stamp Super-Res Zoom	12 Playback Menu p. 32 Slideshow Edit Erase Print Order (Protect) Upload Order	14 Settings Menu 2 p. 38 Pixel Mapping (Monitor) TV Out Power Save (Language) (Date/time) World Time
	13 Settings Menu 1 p. 36 Memory Format/Format Backup	15 Settings Menu 3 p. 42 Beauty Settings

Using the function menu

- 1 Press **◀** to display the function menu.
- 2 Press **△▽** to select the function to be set.
- 3 Press **◀▶** to select the setting value, and then press the **OK** button to enter the setting.

Example: Self-timer

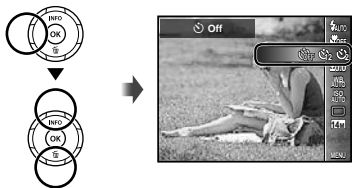

Flash^{1, 2}	Sets the flash firing method.	
Flash Auto		The flash fires automatically in low-light or backlight conditions.
Redeye		Pre-flashes are emitted to reduce the occurrence of red eye in your photos.
Fill In		The flash fires regardless of the available light.
Flash Off		The flash does not fire.
Macro	Sets the function for shooting subjects at close distances.	
Off		Macro mode is deactivated.
Macro		You can shoot the image at a range as close as 10 cm/3.9 in. (W) to 3.0 m/118.1 in. (T).
Super Macro		This enables shooting as close as 1 cm (0.4 in.) to the subject.
Self-timer	Sets the time after the shutter button is pressed until the picture is taken.	
Off		The self-timer is deactivated.
12 sec		The self-timer lamp turns on for approx. 10 seconds, then blinks for approx. 2 seconds, and then the picture is taken.
2 sec		The self-timer lamp blinks for approx. 2 seconds, then the picture is taken.
Auto Release		When your pet (cat or dog) turns its head towards the camera, its face is recognized and the picture is taken automatically.

 














 
Exposure compensation	Compensates the brightness (appropriate exposure) adjusted by the camera.	
 -2.0 to +2.0	Value	Set a larger negative (-) value to adjust darker, or a larger positive (+) value to adjust brighter.
White balance	Sets an appropriate color scheme for the light of the shooting scene.	
 WB AUTO	WB Auto	The camera automatically adjusts the white balance.
	Sunny	Suitable for shooting outdoors under a clear sky.
	Cloudy	Suitable for shooting outdoors under a cloudy sky.
	Incandescent	Suitable for shooting under tungsten lighting.
	Fluorescent	Suitable for shooting under white fluorescent lighting.
	One Touch 1	For manually adjusting the white balance according to the light when shooting. Set a piece of white paper or other white object so that it fills the entire screen, and press the MENU button to set the white balance.
	One Touch 2	
ISO³	Sets the ISO sensitivity.	
 ISO AUTO	ISO Auto	The camera automatically sets the sensitivity with priority on image quality.
 ISO HIGH	High ISO Auto	The camera automatically sets the sensitivity with priority on minimizing blur caused by a moving subject or by camera shake.
 ISO 80 to ISO 6400	Value	Set a smaller value to reduce noise in the picture, or a larger value to reduce blur.
Drive	Sets the sequential shooting function.	
	Single	One frame is shot each time the shutter button is pressed.
	Sequential 1	The camera takes sequential shots at approximately 1.5 frames/sec.
	Sequential 2	The camera takes up to 3 sequential shots at approximately 3 frames/sec.
	High-Speed 1	The camera takes up to 34 sequential shots at approximately 10 frames/sec.
	High-Speed 2	The camera takes up to 34 sequential shots at approximately 30 frames/sec.

Image size ⁴	Resolution	Sets the number of recording pixels.
14M	4288x3216	Suitable for printing pictures over A3 (11x17 in.).
8M	3264x2448	Suitable for printing pictures up to A3 (11x17 in.).
5M	2560x1920	Suitable for printing pictures up to A3 (11x17 in.).
3M	2048x1536	Suitable for printing pictures up to A4 size (8.5x11 in.).
2M	1600x1200	Suitable for printing pictures at A5 (5x7 in.).
1M	1280x960	Suitable for printing pictures at postcard size.
VGA	640x480	Suitable for using pictures on emails.
16:9L	4288x2416	Suitable for playing pictures on a TV (widescreen TV) and for printing on A3 (11x17 in.).
16:9S	1920x1080	Suitable for playing pictures on a TV (widescreen TV) and for printing on A5 (5x7 in.).

¹ Limited to [Flash Off] when [Macro] is set to [Super Macro].

² Limited to [Flash Off] when [Drive] is set to anything but [Single].

³ Limited to [ISO Auto] when [Drive] is set to high speed.

⁴ Limited to [3M] or smaller when [Drive] is set to high speed.

Registering one touch white balance

Select [One Touch 1] or [One Touch 2], face the camera toward a piece of white paper or other white object, and press the **MENU** button.

- The camera releases the shutter and the white balance is registered. When the white balance was previously registered, the registered data is updated.
 - The registered white balance data will not be cleared by turning off the power.
 - Perform this procedure under the light where the pictures will be actually taken.
 - When the camera settings are changed, the white balance must be registered again.
- ! When the white balance cannot be registered, check that the white paper fills the screen, and then perform the procedure again.


Using the setup menu

Press the **MENU** button during shooting or playback to display the setup menu.


The setup menu provides access to a variety of camera settings, such as shooting and playback functions, time and date settings, and display options.

1 Press the MENU button.


- The setup menu is displayed.

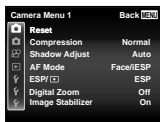

2 Press < to select the page tabs. Use > to select the desired page tab and press >.

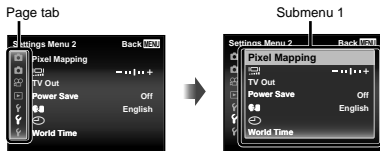

3 Use > to select the desired submenu 1 and then press the OK button.

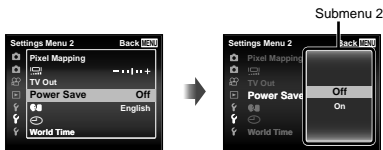

4 Use > to select the desired submenu 2 and then press the OK button.

- Once a setting is selected, the display returns to the Submenu 1.
- There may be additional operations.



5 Press the MENU button to complete the setting.

- ❗ The default settings of the function are highlighted in .
- ❗ For the operation method, refer to "Using the setup menu" (p. 26).

Camera Menu 1

Restoring the shooting functions to the default settings [Reset]

Submenu 2	Application
Yes	Restores the following menu functions to the default settings. <ul style="list-style-type: none"> • Shooting mode • Flash • Macro • Self-timer • Exposure compensation • White balance • ISO • Drive • Image Size (still images) • Camera Menu 1, Camera Menu 2 and Movie Menu Functions
No	The current settings will not be changed.

Selecting the image quality for still images [Compression]

Submenu 2	Application
Fine	Shooting at high quality.
Normal	Shooting at normal quality.

- ❗ "Number of storable pictures (still images)/Recording length (movies) in the internal memory and cards" (p. 62, 63)

Brightening the subject against backlight [Shadow Adjust]

Submenu 2	Application
Auto	Automatically On when a compatible shooting mode is selected.
Off	The effect is not applied.
On	Shoot with automatic adjustment to brighten an area that has become darker.

- ❗ When set to [Auto] or [On], [ESP/] is automatically fixed to [ESP].

Selecting the focusing area [AF Mode]

Submenu 2	Application
Face/iESP	The camera focuses automatically. (If a face is detected, it is shown by a white frame ¹ ; when the shutter button is pressed halfway and the camera focuses, the frame turns to green ² . If no face is detected, the camera chooses a subject in the frame and focuses automatically.)
Spot	The camera focuses on the subject located within the AF target mark.
AF Tracking	The camera tracks the subject movement automatically to focus on it continuously.

¹ For some subjects, the frame may not appear or may take some time to appear.

² If the frame blinks in red, the camera cannot focus. Try refocusing on the subject.

To focus on a moving subject continuously (AF Tracking)

- 1 Hold the camera to align the AF target mark on the subject and press the button.
 - 2 When the camera recognizes the subject, the AF target mark automatically tracks the subject movement to focus on it continuously.
 - 3 To cancel the tracking, press the button.
- Depending on the subjects or the shooting conditions, the camera may be unable to lock the focus or fail to track the subject movement.
- When the camera fails to track the subject movement, the AF target mark changes to red.

Selecting the method for measuring the brightness [ESP/

Submenu 2	Application
ESP	Shoots to obtain a balanced brightness over the entire screen (Meters the brightness at the center and surrounding areas of the screen separately).
(spot)	Shoots the subject at the center during backlighting (Meters the brightness at the center of the screen).

- When set to [ESP], the center may appear dark when shooting against strong backlighting.

Shooting at higher magnifications than optical zoom [Digital Zoom]

Submenu 2	Application
Off	Disable digital zoom.
On	Enable digital zoom.

- [Digital Zoom] is not available when [Super Macro] (p. 23) is selected.
- The option selected for [Digital Zoom] affects the appearance of the zoom bar.(p.30)


Reducing the blur caused by the camera shake when shooting [Image Stabilizer]


Submenu 2	Application
Off	The image stabilizer is deactivated. This is recommended for shooting when the camera is fixed in place on a tripod or other stable surface.
On	The image stabilizer is activated.
While Exposing	Image stabilization is activated when the shutter button is pressed all the way down.

- While [Image Stabilizer] is active, camera may sound during image stabilization.
- Images may not be stabilized if camera shake is too severe.
- When the shutter speed is extremely slow, such as when taking pictures at night, [Image Stabilizer] may not be as effective.


Using the assist lamp for shooting a dark subject  [AF Illuminat.]

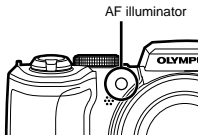

Submenu 2	Application
Off	The AF illuminator is not used.
On	When the shutter button is pressed halfway down, the AF illuminator turns on to aid focusing.



Viewing the image immediately after shooting  [Rec View]

Submenu 2	Application
Off	The image being recorded is not displayed. This allows the user to prepare for the next shot while following the subject in the monitor after shooting.
On	The image being recorded is displayed. This allows the user to make a brief check of the image that was just taken.


Automatically rotating images shot with the camera in a vertical position during playback  [Pic Orientation]

-  During shooting, the [] (p. 34) setting on the playback menu is set automatically.
-  This function may not work properly if the camera is facing up or down during shooting.

Submenu 2	Application
Off	Information about the vertical/horizontal orientation of the camera during shooting is not recorded with images. Images shot with the camera in a vertical position are not rotated during playback.
On	Information about the vertical/horizontal orientation of the camera during shooting is recorded with images. Images are automatically rotated during playback.

Displaying icon guides  [Icon Guide]

Submenu 2	Application
Off	No icon guide is displayed.
On	The explanation of the selected icon will be displayed when a shooting mode or function menu icon is selected (position the cursor on the icon for a while to display the explanation).

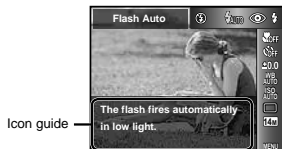

Imprinting the date of recording

[Date Stamp]





Submenu 2	Application
Off	Do not imprint the date.
On	Stamp new photographs with the date of recording.

- ⚠ When the date and time are not set, [Date Stamp] cannot be set. "Turning on the camera and making the initial settings" (p. 6)
- ⚠ The date stamp can not be deleted.
- ⚠ If [Drive] is set to anything other than Single camera cannot imprint date.

Shooting larger pictures than when using optical zoom with low degrading of image quality [Super-Res Zoom]

Submenu 2	Application
Off	Disable super-resolution zoom.
On	Enable super-resolution zoom.

  - ⚠ Available only if [**14M**] or [16:9 L] is selected for [Image Size].

Super-resolution zoom	Digital zoom	Image size	Zoom bar
On	Off	14M/ 16:9L	 Super-resolution zoom
Off	On	14M/ 16:9L	 Digital zoom
		Other	 *1
On	On	14M/ 16:9L	 Super-resolution zoom Digital zoom

- *1 Due to increased processing of the pixel counts, the image quality will not degrade. The magnification ratio changes depending on the image size setting.



- ⚠ Photographs taken with the zoom bar displayed in red may appear "grainy".

Selecting the image size for movies

[Image Size]

Submenu 2	Application
1080p 720p VGA (640x480) HS720 60fps ^{*1} HSVGA 120fps ^{*1} HSQVGA 240fps ^{*1}	Select the image quality based on the image size and frame rate.

^{*1} HS: Film quickly moving subjects for slow-motion playback.

-  In HS movie mode, shooting mode is automatically set to **P**.
-  "Number of storable pictures (still images)/Recording length (movies) in the internal memory and cards" (p. 62, 63)

Reducing the blur caused by the camera shake when shooting


[IS Movie Mode]

Submenu 2	Application
Off	The image stabilizer is deactivated. This is recommended for shooting when the camera is fixed in place on a tripod or other stable surface.
On	The image stabilizer is activated.

-  Images may not be stabilized if camera shake is too severe.

Recording sound when shooting movies [M]

Submenu 2	Application
Off	No sound is recorded.
On	Sound is recorded.

-  Sound is not recorded when an HS movie mode is selected.




Reduce wind noise in the recorded sound when recording movie [Wind Noise Reduction]

Submenu 2	Application
Off	Disable Wind Noise Reduction.
On	Uses Wind Noise Reduction.

Playing back pictures automatically

 
[Slideshow]






Submenu 2	Submenu 3	Application
BGM	Off/Cosmic/ Breeze/Mellow/ Dreamy/Urban	Selects the background music options.
Type	Normal/ Fader/ Zoom	Selects the type of transition effect used between slides.
Start	—	Starts the slideshow.

- ⓘ During a slideshow, press  to advance one frame,  to go back one frame.
- ⓘ Press the **MENU** button or the  button to stop the slideshow.

Changing the image size






 
This saves a high-resolution image as a separate image with a smaller size for use in e-mail attachments and other applications.


Submenu 1	Submenu 2	Submenu 3
Edit		<div style="border: 1px solid black; padding: 2px;"> (VGA) 640x480 </div> <div style="border: 1px solid black; padding: 2px;"> (QVGA) 320x240 </div>


- ① Use   to select an image.
- ② Use   to select an image size and press the  button.
 - The resized image is saved as a separate image.

Cropping image

Submenu 1	Submenu 2
Edit	

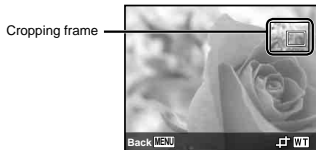

- ① Use   to select an image, and press the  button.
- ② Use the zoom lever to select the size of the cropping frame, and use    to move the frame.





- ③ Press the  button after you have selected the area to trim.
 - The edited image is saved as a separate image.

Adding sound to still images

Submenu 1	Submenu 2
Edit	

- 1 Use   to select an image.
- 2 Aim the microphone toward the sound source.

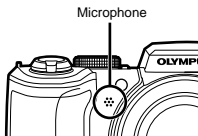








- 3 Press the  button.
 - Recording starts.
 - The camera adds (records) sound for approx. 4 seconds while playing back the image.

Retouching faces on still images

 [Beauty Fix]


Submenu 1	Submenu 2
Edit	Beauty Fix

- 1 Depending on the picture, the editing may not be effective.
- 1 Select a picture using   and press the  button.
- 2 Select an option using   and press the  button.
- 3 To save the image, select [OK] on the review screen and press the  button. To retouch the image additionally, select [Beauty Fix].
 - The retouched image is saved as a separate image.




- 1 After retouching, [Image Size] is limited to **[5M]** or smaller.

Beauty Fix

- 1 Select a retouching item, and press the  button.






- 2 Press the  button on the review screen.

Brightening areas that are dark due to backlight or other reasons

[Shadow Adj]




Submenu 1	Submenu 2
Edit	Shadow Adj

- 1 Use <> to select an image, and press the  button.
 - The edited image is saved as a separate image.
-  Depending on the picture, the editing may not be effective.
-  The retouching process may lower the image resolution.


Retouching red eyes in flash shooting



[Redeye Fix]

Submenu 1	Submenu 2
Edit	Redeye Fix

 - 1 Use <> to select an image, and press the  button.
 - The edited image is saved as a separate image.
-  Depending on the picture, the editing may not be effective.
-  The retouching process may lower the image resolution.



Rotating images

 Submenu 1	Submenu 2
Edit	

- 1 Use <> to select an image.
 - 2 Press the  button to rotate the image.
 - 3 If necessary, repeat Steps 1 and 2 to make settings for other images, and press the **MENU** button.
-  The new picture orientations will be saved even after the power is turned off.


Erasing images [Erase]

Submenu 2	Application
All Erase	All images in the internal memory or card will be erased.
Sel. Image	Images are individually selected and erased.
Erase	Deletes the image displayed.
Erase Group	All images in the group are erased (p. 16).

-  When erasing pictures in the internal memory, do not insert the card into the camera.
-  Protected images cannot be erased.

To individually select and erase images [Sel. Image]

- 1 Use $\Delta \nabla$ to select [Sel. Image], and press the \odot button.
- 2 Use $\Delta \nabla \langle \rangle$ to select the image to be erased, and press the \odot button to add a \checkmark mark to the image.
 - Turn to the T end to return to the single frame display.

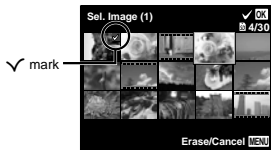

- 3 Repeat Step 2 to select the images to be erased, and then press the **MENU** button to erase the selected images.
- 4 Use $\Delta \nabla$ to select [Yes], and press the \odot button.
 - The images with a \checkmark mark are erased.

To erase all images [All Erase]

- 1 Use $\Delta \nabla$ to select [All Erase], and press the \odot button.
- 2 Use $\Delta \nabla$ to select [Yes], and press the \odot button.

Saving print settings to the image data \triangleright [Print Order]










- ! "Print Reservations" (p. 49)
- ! Print reservation can be set only for still images that are recorded to the card.

Protecting images \triangleright $\left[\frac{1}{5} \right]$

- ! Protected images cannot be erased by [Erase] (p. 19, 34), [Sel. Image] (p. 34), [Erase Group] (p. 34) or [All Erase] (p. 34), but all images are erased by [Memory Format]/[Format] (p. 36).
- 1 Use $\langle \rangle$ to select an image.
 - Turn the zoom lever to the W end to display an index view. Images can be quickly selected using the $\Delta \nabla \langle \rangle$ buttons.
 - 2 Press the \odot button.
 - Press the \odot button again to cancel the settings.
 - 3 If necessary, repeat Steps 1 and 2 to protect other images, and press the **MENU** button.

Setting images to upload to Internet using OLYMPUS Viewer 2




[Upload Order]

- Use  to select an image.
 - Turn the zoom lever to the W end to display an index view. Images can be quickly selected using the    buttons.
 - Press the  button.
 - Press the  button again to cancel the settings.
 - If necessary, repeat Steps ① and ② to make settings for other images, and press the **MENU** button.
-  Only JPEG files can be ordered.
-  For details on OLYMPUS Viewer 2, refer to "Installing the PC software and registering user" (p. 44).
-  For details on uploading images, refer to OLYMPUS Viewer 2 "Help".

Settings Menu 1

Erasing data completely

[Memory Format]/ [Format]

-  Before formatting, check that no important data is left in the internal memory or card.
-  Cards must be formatted with this camera before first use or after being used with other cameras or computers.
-  Be sure to remove the card before formatting the internal memory.

Submenu 2	Application
Yes	Completely erases the image data in the internal memory or card (including protected images).
No	Cancels formatting.

Copying images in the internal memory to the card [Backup]

Submenu 2	Application
Yes	Backs up image data in the internal memory to the card.
No	Cancels the backup.

Using an Eye-Fi card ¶ [Eye-Fi]

Submenu 2	Application
All	Transfers all images.
Sel. Image	Transfers only selected image.
Off	Disable Eye-Fi communication.


- ! When using an Eye-Fi card, read the Eye-Fi card instruction manual carefully, and comply with the instructions.
- ! Use the Eye-Fi card in compliance with the laws and regulations of the country where the camera is used.
- ! In locations such as on an airplane, where the Eye-Fi communication is prohibited, remove the Eye-Fi card from the camera, or set [Eye-Fi] to [Off].
- ! This camera does not support the Eye-Fi card's Endless mode.

Selecting a method for connecting the camera to other devices ¶ [USB Connection]


Submenu 2	Application
Auto	Set to select the connection method each time the camera is connected to another device.
Storage	Connect camera as a card reader.
MTP	For Windows Vista or Windows 7, connect camera as a portable device.
Print	Select when connecting to a PictBridge-compatible printer.

- ! When using the attached software, select [Storage].
- ! Refer to "Connecting with a computer" (p. 43) for the connection method with a computer.


Turning on the camera with the button ¶ [Power On]

Submenu 2	Application
No	The camera is not turned on. To turn on the camera, press the ON/OFF button.
Yes	Press and hold the  button to turn the camera on in the playback mode.

Selecting the camera sound and its volume ¶ [Sound Settings]

Submenu 2	Submenu 3	Application
Sound Type	1/2/3	Selects the camera sounds (operation sounds and shutter sound).
Volume	0/1/2/3/4/5	Select button response tone level and power on sound level.
 Volume	0/1/2/3/4/5	Selects the image playback volume.

Resetting the file names of pictures [File Name]

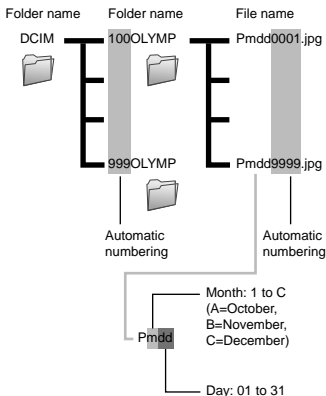

Submenu 2	Application
Reset	This resets the sequential number for the folder name and file name whenever a new card is inserted.*1 This is useful when grouping images on separate cards.
Auto	Even when a new card is inserted, this continues the numbering for the folder name and file name from the previous card. This is useful for managing all image folder names and files names with sequential numbers.

*1 The number for the folder name is reset to 100, and the one for the file name is reset to 0001.

Camera Menu 2

Adjusting the image processing function [Pixel Mapping]

- ⚠ This function has already been adjusted at factory shipping, and no adjustment is needed right after purchase. Approximately once a year is recommended.
- ⚠ For best results, wait at least one minute after taking or viewing pictures before performing pixel mapping. If the camera is turned off during pixel mapping, be sure to perform it again.

To adjust the image processing function


Press the button when [Start] (Submenu 2) is displayed.

- The check and adjustment of the image processing function starts.


Adjusting the brightness of the monitor [MON]

To adjust the monitor brightness

- ① Use to adjust the brightness while viewing the screen, and then press the button.

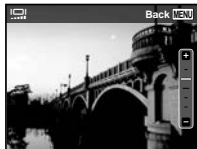

Playing back images on a TV *[TV Out]*

-  The TV video signal system varies depending on the countries and regions. Before viewing camera images on your TV, select the video output according to your TV's video signal type.

Submenu 2	Submenu 3	Application
NTSC/PAL	NTSC	Connecting the camera to a TV in North America, Taiwan, Korea, Japan, and so on.
	PAL	Connecting the camera to a TV in European countries, China, and so on.
HDMI Out	480p/576p 720p 1080i	Set the signal format to be given priority. If the TV setting does not match, it is changed automatically.
HDMI Control	Off	Operate with the camera.
	On	Operate with the TV remote control.


-  The factory default settings differ according to the region where the camera is sold.


To play back camera images on a TV

● Connection via AV cable

- ① Use the camera to select the same video signal system as the one of connected TV ([NTSC]/[PAL]).
- ② Connect the TV and camera.

● Connection via HDMI cable

- ① On the camera, select the digital signal format that will be connected ([480p/576p]/[720p]/[1080i]).
 - ② Connect the TV and camera.
 - ③ Turn on the TV, and change "INPUT" to "VIDEO (an input jack connected to the camera)".
 - ④ Turn on the camera, and use $\Delta \nabla \triangleleft \triangleright$ to select the image for playback.
-  When the camera is connected to the computer by the USB cable, do not connect the HDMI cable to the camera.

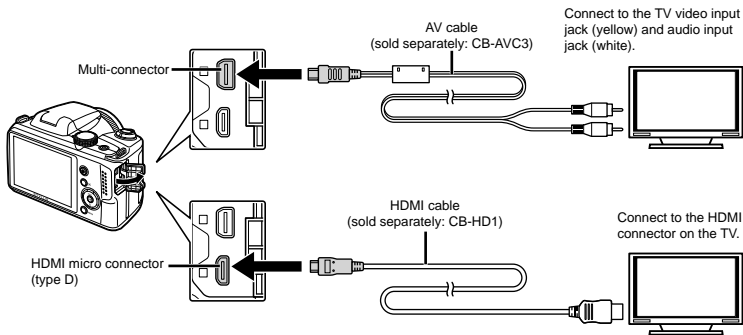

- ❗ For details on changing the input source of the TV, refer to the TV's instruction manual.
- ❗ When the camera and TV are connected by both an AV cable and an HDMI cable, the HDMI cable will take priority.
- ❗ Depending on the TV's settings, the displayed images and information may become cropped.

To operate images with the TV remote control

- ① Set [HDMI Control] to [On], and turn off the camera.
 - ② Connect the camera and TV with an HDMI cable. "Connection via HDMI cable" (p. 39)
 - ③ First turn on the TV, and then turn on the camera.
 - Operate by following the operation guide that is displayed on the TV.
- ❗ With some TVs, operations cannot be performed with the TV remote control even though the operation guide is displayed on the screen.
 - ❗ If operations cannot be performed with the TV remote control, set [HDMI Control] to [Off] and operate using the camera.

Saving battery power between shots Ÿ [Power Save]

Submenu 2	Application
Off	Cancels [Power Save].
On	When the camera is not being used for approx. 10 seconds, the monitor automatically turns off to save battery power.

To resume standby mode

Press any button.

Changing the display language Ÿ [🗨️]

Submenu 2	Application
Languages	The language for the menus and error messages displayed on the monitor is selected.


Setting the date and time Ÿ [🕒]

Set date and time

- ① Use Δ ∇ to select the year for [Y].
 - ② Press \triangleright to save the setting for [Y].
 - ③ As in Steps ① and ②, use Δ ∇ \langle \triangleright to set [M] (month), [D] (day), [Time] (hours and minutes), and [Y/M/D] (date order), and then press the \odot button.
- ⓘ For precise time setting, press the \odot button as the time signal strikes 00 seconds.

To select the date display order

- ① Press \triangleright after setting Minute, and use Δ ∇ to select the date display order.

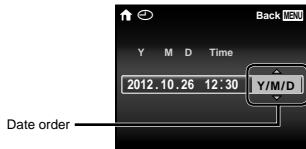

- ② Press the \odot button to set.

To check the date and time

Press the **INFO** button while the camera is turned off. The current time is displayed for approx. 3 seconds.

Choosing home and alternate time zones \int [World Time]

- !** You will not be able to select a time zone using [World Time] if the camera clock has not first been set using [E].

Submenu 2	Submenu 3	Application
Home/ Alternate	🏠	The time in the home time zone (the time zone selected for 🏠 in submenu 2).
	➔	The time in the travel destination time zone (the time zone selected for ➔ in submenu 2).
🏠 ^{*1}	—	Select the home time zone (🏠).
➔ ^{*1,2}	—	Select the travel destination time zone (➔).

- ^{*1} In areas where daylight saving time is in effect, use $\Delta \nabla$ to turn daylight saving time ((Summer)) on.
- ^{*2} When you select a time zone, the camera automatically calculates the time difference between the selected zone and the home time zone (🏠) to display the time in the travel destination time zone (➔).

\int Settings Menu 3

Registering the settings for Beauty Fix \int [Beauty Settings]

- !** Depending on the picture, the editing may not be effective.

- 1 Use $\Delta \nabla$ to select a retouching setting, and press the [OK] button.
- 2 Press the shutter button to take a portrait picture.




- !** The image is not saved.
- 3 Select a retouching item, and press the [OK] button.




- 4 Press the [OK] button on the review screen to save the image.
 - Registration is complete.

Set [USB Connection] in the setup menu of the camera beforehand. (p. 37)

Connecting the camera

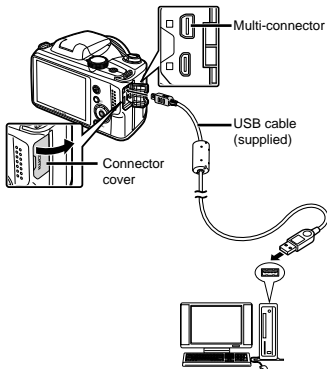

When [USB Connection] is set to [Auto], connect the camera and the computer, select [Storage] or [MTP] at the screen for selecting the connection method, and then press the  button.

System requirements

Windows : Windows XP Home Edition/
Professional (SP1 or later)/
Windows Vista/Windows 7

Macintosh : Mac OS X v10.3 or later

- ❗ When using another system other than Windows XP (SP2 or later)/Windows Vista/Windows 7, set to [Storage].
- ❗ Even if a computer has USB ports, proper operation is not guaranteed in the following cases:
 - Computers with USB ports installed using an expansion card, etc.
 - Computers without a factory-installed OS and home-built computers
- ❗ When the computer does not support SDXC cards, a message may appear urging to format the internal memory or card. (Formatting will completely erase all images, so do not format.)

Windows

1 Insert the supplied CD in a CD-ROM drive.

Windows XP

- A "Setup" dialog will be displayed.

Windows Vista/Windows 7

- An Autorun dialog will be displayed. Click "OLYMPUS Setup" to display the "Setup" dialog.



- ! If the "Setup" dialog is not displayed, select "My Computer" (Windows XP) or "Computer" (Windows Vista/Windows 7) from the start menu. Double-click the CD-ROM (OLYMPUS Setup) icon to open the "OLYMPUS Setup" window and then double-click "Launcher.exe".

- ! If a "User Account Control" dialog is displayed, click "Yes" or "Continue".
-

2 Register your Olympus product.

- Click the "Registration" button and follow the on-screen instructions.

- ! To register the camera must be connected to the computer. "Connecting the camera" (p. 43)

- ! If nothing is displayed on the camera screen even after connecting the camera to the computer, the battery may be exhausted. Disconnect and replace the battery with a new one or a charged battery, and then reconnect.
-

3 Install OLYMPUS Viewer 2.

- Check the system requirements before beginning installation.
- Click the "OLYMPUS Viewer 2" button and follow the on-screen instructions to install the software.

OLYMPUS Viewer 2

Operating System	Windows XP (Service Pack 2 or later)/ Windows Vista/Windows 7
Processor	Pentium 4 1.3 GHz or better (Core 2 Duo 2.13 GHz or better required for movies)
RAM	1 GB or more (2 GB or more recommended)
Free Hard Drive Space	1 GB or more
Monitor Settings	1024 x 768 pixels or more Minimum 65,536 colors (16,770,000 colors recommended)

! See online help for information on using the software.

4 Install the camera manual.

- Click the "Camera Instruction Manual" button and follow the on-screen instructions.

Macintosh

1 Insert the supplied CD in a CD-ROM drive.

- Double-click the CD (OLYMPUS Setup) icon on the desktop.
- Double-click the "Setup" icon to display the "Setup" dialog.



Setup



2 Install OLYMPUS Viewer 2.

- Check the system requirements before beginning installation.
- Click the "OLYMPUS Viewer 2" button and follow the on-screen instructions to install the software.



You can register via "Registration" in OLYMPUS Viewer 2 "Help".

OLYMPUS Viewer 2

Operating System	Mac OS X v10.4.11--v10.7
Processor	Intel Core Solo/Duo 1.5 GHz or better
RAM	1 GB or more (2 GB or more recommended)
Free Hard Drive Space	1 GB or more
Monitor Settings	1024 x 768 pixels or more Minimum 32,000 colors (16,770,000 colors recommended)



Other languages can be selected from the language combo box. For information on using the software, see online help.

3 Copy the camera manual.

- Click the "Camera Instruction Manual" button to open the folder containing the camera manuals. Copy the manual for your language to the computer.

Direct printing (PictBridge)

By connecting the camera to a PictBridge-compatible printer, you can print images directly without using a computer.

To find out if your printer supports PictBridge, refer to the printer's instruction manual.


- ! The printing modes, paper sizes, and other parameters that can be set with the camera vary depending on the printer that is used. For details, refer to the printer's instruction manual.
- ! For details on the available paper types, loading paper, and installing ink cassettes, refer to the printer's instruction manual.
- ! In the setup menu, set [USB Connection] to [Print]. [USB Connection] (p. 37)

Printing images at the printer's standard settings [Easy Print]


- 1 **Display the image to be printed on the monitor.**

- ! "Viewing images" (p. 15)

- 2 **Turn on the printer, and then connect the printer and camera.**

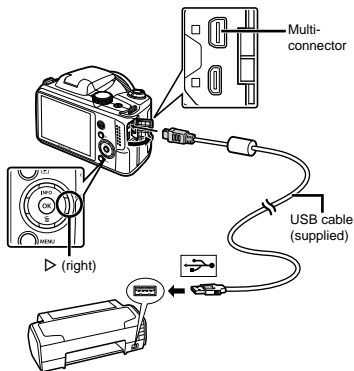

- 3 **Press ▶ to start printing.**

- 4 **To print another image, use ◀▶ to select an image, and press the  button.**

To exit printing

After a selected image is displayed on the screen, disconnect the USB cable from the camera and printer.

Changing the printer's settings for printing [Custom Print]

- 1 Display the image to be printed on the monitor.

! "Viewing images" (p. 15)

- 2 Turn on the printer, and then connect the printer and camera.

- 3 Press the **OK** button.

- 4 Use Δ / ∇ to select the print mode, and press the **OK** button.

Submenu 2	Application
Print	This prints the image selected in Step 8.
All Print	This prints all images stored in the internal memory or card.
Multi Print	This prints one image in a multiple layout format.
All Index	This prints an index of all images stored in the internal memory or card.
Print Order ^{*1}	This prints images based on the print reservation data on the card.

^{*1} [Print Order] is available only when print reservations have been made. "Print Reservations" (p. 49)

- 5 Use Δ / ∇ to select [Size] (Submenu 3), and press \triangleright .

! If the [Printpaper] screen is not displayed, the [Size], [Borderless], and [Pics/Sheet] are set to the printer's standard.



- 6 Use Δ / ∇ to select the [Borderless] or [Pics/Sheet] settings, and press the **OK** button.

Submenu 4	Application
Off/ On ^{*1}	The image is printed with a border around it ([Off]). The image is printed to fill the entire paper ([On]).
(The number of images per sheet varies depending on the printer.)	The number of images per sheet ([Pics/Sheet]) is selectable only when [Multi Print] is selected in Step 4.

^{*1} The available settings for [Borderless] vary depending on the printer.

! If [Standard] is selected in Steps 5 and 6, the image is printed at the printer's standard settings.

- 7 Use \triangleleft / \triangleright to select an image.

- 8 Press Δ to make a print reservation for the current image. Press ∇ to make the detailed printer settings for the current image.


To make the detailed printer settings

- 1 Use Δ ∇ \triangleleft \triangleright to select the setting, and press the \odot button.

Submenu 5	Submenu 6	Application
	0 to 10	This selects the number of prints.
Date	With/ Without	Selecting [With] prints the images with the date. Selecting [Without] prints the images without the date.
File Name	With/ Without	Selecting [With] prints the file name on the image. Selecting [Without] does not print any file name on the image.
	(Proceeds to the setting screen.)	This selects a portion of the image for printing.

To crop an image []


- 1 Use the zoom lever to select the size of the cropping frame, use Δ ∇ \triangleleft \triangleright to move the frame, and then press the \odot button.

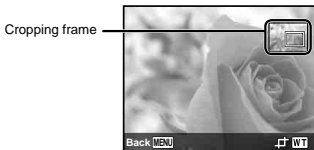

- 2 Use Δ ∇ to select [OK], and press the \odot button.


- 9 If necessary, repeat Steps 7 and 8 to select the image to be printed, make the detailed settings, and set [Single Print].

10 Press the \odot button.

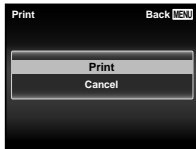

11 Use Δ ∇ to select [Print], and press the \odot button.

- Printing starts.
- When [Option Set] is selected in [All Print] mode, [Print Info] screen is displayed.
- When printing is finished, the [Print Mode Select] screen is displayed.

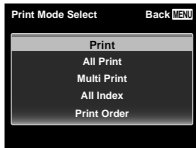

To cancel printing

- 1 Press the **MENU** button while [Do Not Remove USB Cable] is displayed.
- 2 Select [Cancel] using Δ ∇ and then press the \odot button.

12 Press the **MENU** button.

- 13 When the message [Remove USB Cable] is displayed, disconnect the USB cable from the camera and printer.

Print Reservations

In print reservations, the number of prints and date imprint option are saved in the image on the card. This enables easy printing at a printer or print shop supporting DPOF by using only the print reservations on the card without a computer or a camera.

- ! Print reservations can be set only for the images stored on the card.
- ! DPOF reservations set by another DPOF device cannot be changed by this camera. Make changes using the original device. Making new DPOF reservations with this camera will erase the reservations made by the other device.
- ! DPOF print reservations can be made for up to 999 images per card.

Single-frame print reservations [P]

- 1 **Display the setup menu.**
! "Using the setup menu" (p. 26)
- 2 **From the playback menu, select [Print Order] and then press the [OK] button.**
- 3 **Use Δ ∇ to select [P], and press the [OK] button.**



- 4 **Use \triangleleft \triangleright to select the image for print reservation. Use Δ ∇ to select the quantity. Press the [OK] button.**
- 5 **Use Δ ∇ to select the [Date] (date print) screen option, and press the [OK] button.**

Submenu 2	Application
No	This prints the image only.
Date	This prints the image with the shooting date.
Time	This prints the image with the shooting time.

- 6 **Use Δ ∇ to select [Set], and press the [OK] button.**

Reserving one print each of all images on the card [F4]

- 1 Follow Steps 1 and 2 in [F4] (p. 49).
- 2 Use $\Delta \nabla$ to select [F4], and press the OK button.
- 3 Follow Steps 5 and 6 in [F4].

Resetting all print reservation data

- 1 Follow Steps 1 and 2 in [F4] (p. 49).
- 2 Select either [F4] or [F4], and press the OK button.
- 3 Use $\Delta \nabla$ to select [Reset], and press the OK button.

Resetting the print reservation data for selected images

- 1 Follow Steps 1 and 2 in [F4] (p. 49).
- 2 Use $\Delta \nabla$ to select [F4], and press the OK button.
- 3 Use $\Delta \nabla$ to select [Keep] and press the OK button.
- 4 Use $\triangleleft \triangleright$ to select the image with the print reservation you want to cancel. Use $\Delta \nabla$ to set the print quantity to "0".
- 5 If necessary, repeat Step 4, and then press the OK button when finished.
- 6 Use $\Delta \nabla$ to select the [☺] (date print) screen option, and press the OK button.
 - The settings are applied to the remaining images with the print reservation data.
- 7 Use $\Delta \nabla$ to select [Set], and press the OK button.

Usage Tips

If the camera does not work as intended, or if an error message is displayed on the screen, and you are unsure of what to do, refer to the information below to fix the problem(s).

Troubleshooting

Battery

“The camera does not work even when batteries are installed”.

- Insert a new battery.
- Recharge the battery if it is rechargeable.
“Inserting and removing the battery and card” (p. 4)
- Battery performance may have been reduced temporarily due to low temperature. Take the batteries out of the camera, and warm them by putting them in your pocket for a while.



Card/Internal memory

“An error message is displayed”.

“Error message” (p. 52)

Shutter button

“No picture is taken when the shutter button is pressed”.

- Cancel sleep mode.
To save battery power, the camera automatically goes into sleep mode and the monitor turns off if there is no operation for 3 minutes when the camera is turned on. No picture is taken even if the shutter button is fully pressed in this mode. Operate the zoom lever or other buttons to restore the camera from sleep mode before taking a picture. If the camera is left for another 12 minutes, it automatically turns off. Press the **ON/OFF** button to turn the camera on.
- Press the  button to switch to the shooting mode.
- Wait until  (flash charge) stops blinking before taking pictures.

- With prolonged camera use, the internal temperature may increase, resulting in automatic shutdown. If this occurs, remove the battery from the camera and wait until the camera has sufficiently cooled.
The camera's external temperature may also increase during use, however this is normal and does not indicate malfunction.

Monitor

“Difficult to see”.

- Condensation may have occurred. Turn off the power, and wait for the camera body to become acclimated to the surrounding temperature and dry out before taking pictures.

“The light is caught in the picture”.

- Shooting with flash in dark situations results in an image with many flash reflections on dust in the air.

Date and time function

“Date and time settings return to the default setting”.

- If the batteries are removed and left out of the camera for about 3 days¹, the date and time settings return to the default setting, and must be reset.
¹ The time until the date and time settings return to the default setting varies depending on how long the batteries have been loaded.

“Turning on the camera and making the initial settings” (p. 6)





 
 


Miscellaneous









“The camera makes a noise when taking pictures”.

- The camera may activate the lens and make a noise even if no operation is performed. This is because the camera automatically performs actions of auto focus as far as it is ready to shoot.

Error message

When one of the messages below is displayed on the monitor, check the corrective action.

Error message	Corrective action
 Card Error	Card problem Insert a new card.
 Write Protect	Card problem The card write-protect switch is set to the "LOCK" side. Release the switch.
 Memory Full	Internal memory problem <ul style="list-style-type: none"> • Insert a card. • Erase unwanted images.¹
 Card Full	Card problem <ul style="list-style-type: none"> • Replace the card. • Erase unwanted images.¹
	Card problem Use $\Delta \nabla$ to select [Format], and press the \odot button. Next, use $\Delta \nabla$ to select [Yes], and press the \odot button. ²
	Internal memory problem Use $\Delta \nabla$ to select [Memory Format], and press the \odot button. Next, use $\Delta \nabla$ to select [Yes], and press the \odot button. ²
 No Picture	Internal memory/Card problem Take pictures before viewing them.
 Picture Error	Problem with selected image Use photo retouch software, etc. to view the image on a computer. If the image still cannot be viewed, the image file is corrupted.

Error message	Corrective action
 The Image Cannot Be Edited	Problem with selected image Use photo retouch software, etc. to edit the image on a computer.
 Battery Empty	Battery problem <ul style="list-style-type: none"> • Insert new batteries. • If using rechargeable batteries, charge the batteries.
 No Connection	Connection problem Connect the camera and computer or printer correctly.
 No Paper	Printer problem Load paper into the printer.
 No Ink	Printer problem Refill the ink in the printer.
 Jammed	Printer problem Remove the jammed paper.
Settings Changed³	Printer problem Return to the status where the printer can be used.
 Print Error	Printer problem Turn off the camera and printer, check the printer for any problems, and then turn the power on again.
 Cannot Print⁴	Problem with selected image Use a computer to print.

¹ Before erasing important images, download them to a computer.

² All data will be erased.

³ This is displayed, for instance, when the printer's paper tray has been removed. Do not operate the printer while making the print settings on the camera.

⁴ This camera may be unable to print images taken by other cameras.

Shooting tips

When you are unsure of how to take a picture that you envision, refer to the information below.

Focusing



“Focusing on the subject”

- **Taking a picture of a subject not in the center of the monitor**

After focusing on an object at the same distance as the subject, compose the shot, and take the picture.

Pressing the shutter button halfway (p. 8)

- **Set [AF Mode] (p. 27) to [Face/ESP]**
- **Taking a picture in [AF Tracking] mode (p. 27)**

The camera tracks the subject movement automatically to focus on it continuously.

- **Taking a picture of a shadowy subject**
Using the AF illuminator makes focusing easier. [AF Illuminat.] (p. 29)

 
- **Taking a picture of subjects where autofocus is difficult**

In the following cases, after focusing on an object (by pressing the shutter button halfway down) with high contrast at the same distance as the subject, compose the shot, and take the picture.


Subjects with low contrast



When extremely bright objects appear in the center of the monitor



Object with no vertical lines*

 


- * It is also effective to compose the shot by holding the camera vertically to focus, and then returning to the horizontal position to take the picture.

When objects are at different distances



 Fast-moving object



The subject is not in the center of the frame



Camera shake



“Taking pictures without camera shake”

- **Taking pictures using [Image Stabilizer] (p. 28)**

The image pickup device shifts to correct for camera shake even if the ISO sensitivity is not increased. This function is also effective when taking pictures at a high zoom magnification.

- **Shooting movies using [IS Movie Mode] (p. 31)**

The [Sport] mode uses a fast shutter speed and can reduce the blur incurred by a moving subject.

- **Taking pictures at a high ISO sensitivity**

If a high ISO sensitivity is selected, pictures can be taken at a high shutter speed even at locations where a flash cannot be used.

“ISO” (p. 24)

Exposure (brightness)



“Taking pictures with the right brightness”

- **Taking pictures of a subject against a backlight**

Faces or backgrounds are bright even when shot against backlight.

[Shadow Adjust] (p. 27)

- **Taking pictures using [Face/ESP] (p. 27)**

Appropriate exposure is obtained for a face against backlight, and the face is brightened.

- **Taking pictures using [] for [ESP/] (p. 28)**

Brightness is matched with a subject in the center of the screen and the image is not affected by background light.

- **Taking pictures using [Fill In] (p. 23) flash**

A subject against backlight is brightened.

- **Taking pictures of a white beach or snow scene**

Select [Beach & Snow] in the scene mode (p. 11).

- **Taking pictures using exposure compensation (p. 24)**

Adjust the brightness while viewing the screen for taking the picture. Normally, taking pictures of white subjects (such as snow) results in images that are darker than the actual subject. Use the exposure compensation to adjust in the positive (+) direction to express whites as they appear. When taking pictures of black subjects, on the other hand, it is effective to adjust in the negative (-) direction.

Color hue



“Taking pictures with colors at the same shade as they appear”

- **Taking pictures by selecting white balance (p. 24)**

Best results in most environments can normally be obtained with the [WB Auto] setting, but for some subjects, you should try experimenting with different settings. (This is especially true for sunshade under a clear sky, mixed natural and artificial light settings, and so on.)

Image quality



“Taking sharper pictures”

- **Taking pictures with the optical zoom or super-resolution zoom**

Avoid using digital zoom (p. 28) to take pictures.

- **Taking pictures at a low ISO sensitivity**

If the picture is taken with a high ISO sensitivity, noise (small colored spots and color unevenness that were not in the original image) can occur, and the image can appear grainy.

“ISO” (p. 24)

Batteries



“Making batteries last longer”

- **Avoid any of the following operations when not actually taking pictures because they deplete the battery power**
 - Repeatedly pressing the shutter button halfway.
 - Repeatedly using the zoom.
- **Set [Power Save] (p. 41) to [On]**

Playback/Editing tips

Playback



“Playing images in the internal memory and card”

- **Remove the card and display the images in internal memory**
 - “Inserting and removing the battery and card” (p. 4)

“Viewing images with high picture quality on a high-definition TV”

- **Connect the camera to the TV using an HDMI cable (sold separately)**
 - “Playing back images on a TV ♪ [TV Out]” (p. 39)

Editing



“Erasing the sound recorded to a still image”

- **Record over the sound with silence when playing back the image**
- “Adding sound to still images [▶] [🔊]” (p. 33)

List of settings available in each shooting mode

For details on **SCN**, refer to "List of **SCN** settings" (p. 57).

For details on shaded areas, refer to "List of **MAGIC** settings" (p. 59).

	P	IAUTO	BEAUTY	MAGIC			
Zoom	✓	✓	✓	✓	*1	✓	✓
Flash	✓	*2	*3	✓	-	-	✓
Macro	✓	-	-	✓	-	-	✓
Self-timer	✓	✓	✓	✓	✓	✓	✓
Exposure compensation	✓	-	-		✓	-	✓
White balance	✓	-	-		✓	-	✓
ISO	✓	-	-	-	-	-	✓
Drive	✓	-	-	-	-	-	-
Image Size	✓	✓	✓		*4	✓	✓
Reset	✓	✓	✓	✓	✓	✓	✓
Compression	✓	✓	✓	✓	✓	✓	✓
Shadow Adjust	✓	-	✓	-	-	-	✓
AF Mode	✓	-	-	-	*5	-	-
ESP/ 	✓	-	-	✓	✓	-	✓
Digital Zoom	✓	-	✓	-	-	-	-
Image Stabilizer	✓	✓	✓	✓	✓	-	✓
AF Illuminat.	✓	-	✓	✓	-	✓	✓
Rec View	✓	✓	✓	✓	✓	✓	✓
Pic Orientation	✓	✓	✓	✓	✓	✓	✓
Icon Guide	✓	✓	✓	✓	✓	✓	✓
Date Stamp	✓	✓	✓	✓	-	✓	✓
Super-Res Zoom	✓	-	-	-	-	-	-

*1 When set to [Auto], zoom is fixed to W-side.

*2 [ Redeye] and [ Fill In] cannot be set.

*3 [ Fill In] cannot be set.

*4 When set to [Auto] or [Manual], [Image Size] is fixed to [**2M**]. For [PC], [**16:9L**] changes to [**14M**] and [**16:9S**] changes to [**2M**].

*5 [AF Tracking] cannot be set.

List of **SCN** settings

Zoom	✓	✓	✓	✓	✓	✓	–	✓	✓	
Flash	*1	–	–	*2	*3	*3	*1	–	–	
Macro	–	–	–	–	–	–	–	–	–	
Self-timer	*4	*4	*4	*4	*4	*4	*4	*4	*4	
Exposure compensation	–	–	–	–	–	–	–	–	–	
White balance	–	–	–	–	–	–	–	–	–	
ISO	–	–	–	–	–	–	–	–	–	
Drive	–	–	–	–	–	–	–	–	–	
Image Size	✓	✓	✓	✓	✓	✓	✓	✓	✓	
Reset	✓	✓	✓	✓	✓	✓	✓	✓	✓	
Compression	✓	✓	✓	✓	✓	✓	✓	✓	✓	
Shadow Adjust	✓	✓	–	–	✓	✓	✓	✓	–	
AF Mode	✓	✓	✓	✓	✓	✓	–	✓	–	
ESP/	✓	✓	✓	✓	✓	✓	–	✓	✓	
Digital Zoom	✓	✓	✓	✓	✓	✓	–	✓	✓	
Image Stabilizer	✓	✓	✓	✓	✓	✓	✓	✓	✓	
AF Illuminat.	✓	✓	✓	✓	✓	✓	✓	✓	–	
Rec View	✓	✓	✓	✓	✓	✓	✓	✓	✓	
Pic Orientation	✓	✓	✓	✓	✓	✓	✓	✓	✓	
Icon Guide	✓	✓	✓	✓	✓	✓	✓	✓	✓	
Date Stamp	✓	✓	✓	✓	✓	✓	✓	✓	✓	
Super-Res Zoom	–	–	–	–	–	–	–	–	–	

*1[Fill In] cannot be set.

*2[Flash Auto] and [Fill In] cannot be set.

*3[Redeye] and [Fill In] cannot be set.

*4[Auto Release] cannot be set.

Zoom	✓	✓	✓	✓	✓	✓
Flash	*3	-	*3	-	-	-
Macro	-	-	-	-	-	-
Self-timer	*4	*4	*4	✓	✓	*4
Exposure compensation	-	-	-	-	-	-
White balance	-	-	-	-	-	-
ISO	-	-	-	-	-	-
Drive	-	-	-	-	-	-
Image Size	✓	✓	✓	✓	✓	✓
Reset	✓	✓	✓	✓	✓	✓
Compression	✓	✓	✓	✓	✓	✓
Shadow Adjust	✓	✓	✓	✓	✓	-
AF Mode	✓	✓	✓	-	-	✓
ESP/	✓	✓	✓	✓	✓	✓
Digital Zoom	✓	✓	✓	✓	✓	-
Image Stabilizer	✓	✓	✓	✓	✓	✓
AF Illuminat.	✓	✓	✓	-	-	✓
Rec View	✓	✓	✓	✓	✓	✓
Pic Orientation	✓	✓	✓	✓	✓	✓
Icon Guide	✓	✓	✓	✓	✓	✓
Date Stamp	✓	✓	✓	✓	✓	✓
Super-Res Zoom	-	-	-	-	-	-

*3[Redeye] and [Fill In] cannot be set.

*4[Auto Release] cannot be set.

List of **MAGIC** settings

	Pop Art	Pin Hole	Fish Eye	Drawing	Soft Focus	Punk
Exposure compensation	✓	✓	–	–	✓	✓
White balance	✓	✓	–	–	✓	–
Image Size	✓	✓	✓	*1	*1	✓

	Sparkle	Watercolor	Reflection	Miniature	Fragmented	Dramatic
Exposure compensation	✓	✓	✓	✓	✓	✓
White balance	✓	✓	✓	✓	✓	✓
Image Size	*1	*1	✓	*1	✓	*1

*1 Changes to [16:9] when [Image Size] is set to [16:9]. Limited to [5m] or smaller when set to anything but [16:9].

Appendix

Camera care

Exterior

- Wipe gently with a soft cloth. If the camera is very dirty, soak the cloth in mild soapy water and wring well. Wipe the camera with the damp cloth and then dry it with a dry cloth. If you have used the camera at the beach, use a cloth soaked in clean water and wrung well.

Monitor

- Wipe gently with a soft cloth.

Lens

- Blow dust off the lens with a commercial blower, then wipe gently with a lens cleaner.

- ❗ Do not use strong solvents such as benzene or alcohol, or chemically treated cloth.
- ❗ Mold may form on the lens surface if the lens is left dirty.

Storage

- When storing the camera for extended periods, remove the battery, USB-AC adapter and card, and keep in a cool, dry place that is well ventilated.
- Periodically insert the battery and test the camera functions.
- ❗ Avoid leaving the camera in places where chemical products are handled since this may result in corrosion.

Using a separately sold USB-AC adapter

The USB-AC adapter F-3AC (sold separately) can be used with this camera. Do not use any AC adapter other than the dedicated one. When using F-3AC, be sure to use the USB cable included with this camera. Do not use any other AC adapter with this camera.

Using your USB-AC adapter abroad

- USB-AC adapter is compatible with most AC100 - 240V 50/60Hz household outlets worldwide. However, depending on the country or area you are in, the AC wall outlet may be shaped differently and the USB-AC adapter may require a plug adapter to match the wall outlet. For details, ask at your local electrical shop or travel agent.
- Retail travel converters may damage USB-AC adapter, so do not use them.

Using the card

Cards compatible with this camera

SD/SDHC/SDXC/Eye-Fi card (commercially available) (for compatibility card details, visit the Olympus website.)



- ! This camera can be used without a card by storing images in its internal memory.

Eye-Fi card

- ! The Eye-Fi card may become hot during use.
- ! When using an Eye-Fi card, the battery may run out faster.
- ! When using an Eye-Fi card, the camera may function more slowly.

SD/SDHC/SDXC card write-protect switch

The SD/SDHC/SDXC card body has a write-protect switch.

If you set the switch to the "LOCK" side, you will not be able to write to the card, delete data or format. Return the switch to enable writing.



Format card

Cards must be formatted with this camera before first use or after being used with other cameras or computers.

Checking the image saving location

The memory indicator shows whether the internal memory or card is being used during shooting and playback.

Current memory indicator

: Internal memory is being used


: Card is being used

- ! Performing [Memory Format]/[Format], [Erase], [Sel. Image], [All Erase], or [Erase Group] may not completely erase all card data. When disposing of the card, damage the card to prevent the disclosure of personal data.

Readout/recording process of the card

During shooting, the current memory indicator lights up in red while the camera is writing data. Never open the battery/card compartment cover or unplug the USB cable. This can not only damage the image data but also render the internal memory or card unusable.

Number of storable pictures (still images)/Recording length (movies) in the internal memory and cards

 The figures in the following tables are quoted only as a rough guideline. The actual number of storable pictures or recording lengths will differ according to the shooting conditions and memory cards used.

Still pictures


IMAGE SIZE	COMPRESSION	Number of storable still pictures	
		Internal memory	SD/SDHC/SDXC card (4GB)
14M 4288 x 3216	FINE	5	563
	NORM	11	1,107
8M 3264 x 2448	FINE	10	965
	NORM	19	1,885
5M 2560 x 1920	FINE	16	1,547
	NORM	31	2,943
3M 2048 x 1536	FINE	25	2,463
	NORM	51	4,827
2M 1600 x 1200	FINE	41	4,023
	NORM	81	7,543
1M 1280 x 960	FINE	64	6,034
	NORM	125	12,069
VGA 640 x 480	FINE	228	20,115
	NORM	419	40,230
16.9L 4288 x 2416	FINE	7	749
	NORM	15	1,471
16.9S 1920 x 1080	FINE	38	3,657
	NORM	76	7,099

Movies

IMAGE SIZE	Recording length			
	Internal memory		SD/SDHC/SDXC card (4GB)	
	With sound	Without sound	With sound	Without sound
<small>1080</small> 1920 x 1080 ¹	15 sec.	16 sec.	28 min. 17 sec.	29 min. 06 sec.
<small>720</small> 1280 x 720 ¹	45 sec.	49 sec.	80 min. 19 sec.	87 min. 20 sec.
<small>VGA</small> 640 x 480	1 min. 23 sec.	1 min. 38 sec.	143 min. 26 sec.	167 min. 23 sec.
<small>HS 720</small> 1280 x 720 ²	—	16 sec.	—	29 min. 06 sec.
<small>HS VGA</small> 640 x 480 ²	—	24 sec.	—	43 min. 40 sec.
<small>HS QVGA</small> 320 x 240 ²	—	57 sec.	—	100 min. 26 sec.

¹ The recording length is up to 29 minutes in the HD quality specified.



² The recording length is up to 20 sec. in the HS quality specified.


 The maximum file size of a single movie is 4 GB, regardless of the capacity of the card.


Increasing the number of pictures that can be taken


Either erase unwanted images, or connect the camera to a computer or other device to save the images, and then erase the images in the internal memory or card. [Erase] (p. 19, 34), [Sel. Image] (p. 34), [Erase Group] (p. 34), [All Erase] (p. 34), [Memory Format]/[Format] (p. 36)


SAFETY PRECAUTIONS

	CAUTION RISK OF ELECTRICAL SHOCK DO NOT OPEN	
<p>CAUTION: TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED OLYMPUS SERVICE PERSONNEL.</p>		

 An exclamation mark enclosed in a triangle alerts you to important operating and maintenance instructions in the documentation provided with the product.

 **DANGER** If the product is used without observing the information given under this symbol, serious injury or death may result.

 **WARNING** If the product is used without observing the information given under this symbol, injury or death may result.

 **CAUTION** If the product is used without observing the information given under this symbol, minor personal injury, damage to the equipment, or loss of valuable data may result.

WARNING!
TO AVOID THE RISK OF FIRE OR ELECTRICAL SHOCK, NEVER DISASSEMBLE, EXPOSE THIS PRODUCT TO WATER OR OPERATE IN A HIGH HUMIDITY ENVIRONMENT.

General Precautions

Read All Instructions — Before you use the product, read all operating instructions. Save all manuals and documentation for future reference.

Cleaning — Always unplug this product from the wall outlet before cleaning. Use only a damp cloth for cleaning. Never use any type of liquid or aerosol cleaner, or any type of organic solvent to clean this product.

Attachments — For your safety, and to avoid damaging the product, use only accessories recommended by Olympus.

Water and Moisture — For precautions on products with weatherproof designs, read the weatherproofing sections.

Location — To avoid damage to the product, mount the product securely on a stable tripod, stand, or bracket.

Power Source — Connect this product only to the power source described on the product label.

Lightning — If a lightning storm occurs while using a USB-AC adapter, remove it from the wall outlet immediately.

Foreign Objects — To avoid personal injury, never insert a metal object into the product.

Heat — Never use or store this product near any heat source such as a radiator, heat register, stove, or any type of equipment or appliance that generates heat, including stereo amplifiers.

Handling the Camera

WARNING

- Do not use the camera near flammable or explosive gases.
- Do not use the flash and LED (including AF illuminator) on people (infants, small children, etc.) at close range.
 - You must be at least 1 m (3 ft.) away from the faces of your subjects. Firing the flash too close to the subject's eyes could cause a momentary loss of vision.
- Keep young children and infants away from the camera.
 - Always use and store the camera out of the reach of young children and infants to prevent the following dangerous situations which could cause serious injury:
 - Becoming entangled in the camera strap, causing strangulation.
 - Accidentally swallowing the battery, cards or other small parts.
 - Accidentally firing the flash into their own eyes or those of another child.
 - Accidentally being injured by the moving parts of the camera.
- Do not look at the sun or strong lights with the camera.
- Do not use or store the camera in dusty or humid places.
- Do not cover the flash with a hand while firing.
- Use SD/SDHC/SDXC memory cards or Eye-Fi cards only. Never use other types of cards.

If you accidentally insert another type of card into the camera, contact an authorized distributor or service center. Do not try to remove the card by force.

- If you find that the USB-AC adapter is extremely hot or notice any unusual odors, noise, or smoke around it, unplug the power plug from wall outlet immediately and stop using it. Then, contact an authorized distributor or service center.

CAUTION

- Stop using the camera immediately if you notice any unusual odors, noise, or smoke around it.
- Never remove the batteries with bare hands, which may cause a fire or burn your hands.
- Never hold or operate the camera with wet hands.
- Do not leave the camera in places where it may be subject to extremely high temperatures.
 - Doing so may cause parts to deteriorate and, in some circumstances, cause the camera to catch fire. Do not use the USB-AC adapter if it is covered (such as a blanket). This could cause overheating, resulting in fire.
- Handle the camera with care to avoid getting a low-temperature burn.
 - When the camera contains metal parts, overheating can result in a low-temperature burn. Pay attention to the following:
 - When used for a long period, the camera will get hot. If you hold on to the camera in this state, a low-temperature burn may be caused.
 - In places subject to extremely cold temperatures, the temperature of the camera's body may be lower than the environmental temperature. If possible, wear gloves when handling the camera in cold temperatures.
- Be careful with the strap.
 - Be careful with the strap when you carry the camera. It could easily catch on stray objects and cause serious damage.
- To protect the high-precision technology contained in this product, never leave the camera in the places listed below, no matter if in use or storage:
 - Places where temperatures and/or humidity are high or go through extreme changes. Direct sunlight, beaches, locked cars, or near other heat sources (stove, radiator, etc.) or humidifiers.
 - In sandy or dusty environments.
 - Near flammable items or explosives.
 - In wet places, such as bathrooms or in the rain. When using products with weatherproof designs, read their manuals as well.

- In places prone to strong vibrations.
 - Never drop the camera or subject it to severe shocks or vibrations.
 - When attaching the camera to or removing it from a tripod, rotate the tripod screw, not the camera.
 - Before transporting the camera, remove a tripod and all other non-OLYMPUS accessories.
 - Do not touch electric contacts on cameras.
 - Do not leave the camera pointed directly at the sun. This may cause lens or shutter curtain damage, color failure, ghosting on the image pickup device, or may possibly cause fires.
 - Do not push or pull severely on the lens.
 - Before storing the camera for a long period, remove the batteries. Select a cool, dry location for storage to prevent condensation or mold from forming inside the camera. After storage, test the camera by turning it on and pressing the shutter button to make sure that it is operating normally.
 - The camera may malfunction if it is used in a location where it is subject to a magnetic/electromagnetic field, radio waves, or high voltage, such as near a TV set, microwave, video game, loud speakers, large monitor unit, TV/radio tower, or transmission towers. In such cases, turn the camera off and on again before further operation.
 - Always observe the operating environment restrictions described in the camera's manual.
- If battery fluid gets into your eyes, flush your eyes immediately with clear, cold running water and seek medical attention immediately.
 - Always store batteries out of the reach of small children. If a child accidentally swallows a battery, seek medical attention immediately.
 - If you cannot remove the battery from the camera, contact an authorized distributor or service center. Do not try to remove the battery by force. Damage to the battery exterior (scratches, etc.) may produce heat or an explosion.

WARNING

- Keep batteries dry at all times.
- To prevent batteries from leaking, overheating, or causing a fire or explosion, use only batteries recommended for use with this product.
- Insert the battery carefully as described in the operating instructions.
- Do not use a battery if it is cracked or broken.
- If a battery leaks, becomes discolored or deformed, or becomes abnormal in any other way during operation, stop using the camera.
- If a battery leaks fluid onto your clothing or skin, remove the clothing and flush the affected area with clean, running cold water immediately. If the fluid burns your skin, seek medical attention immediately.
- Never subject batteries to strong shocks or continuous vibration.
- Never mix batteries (old and new batteries, charged and uncharged batteries, batteries of different manufacture or capacity, etc.).
- Do not use batteries if their body is not covered by the insulating sheet or if the sheet is torn, as this may cause fluid leaks, fire or injury.

 
Battery Handling Precautions

Follow these important guidelines to prevent batteries from leaking, overheating, burning, exploding, or causing electrical shocks or burns.

DANGER

- Never heat or incinerate batteries.
- Take precautions when carrying or storing batteries to prevent them from coming into contact with any metal objects such as jewelry, pins, fasteners, etc.
- Never store batteries where they will be exposed to direct sunlight, or subjected to high temperatures in a hot vehicle, near a heat source, etc.
- To prevent causing battery leaks or damaging their terminals, carefully follow all instructions regarding the use of batteries. Never attempt to disassemble a battery or modify it in any way, solder, etc.


The following AA (R6) batteries cannot be used.



Batteries whose bodies are only partially or not at all covered by an insulating sheet.



 Batteries whose \ominus terminals are raised, but not covered by an insulating sheet.



Batteries whose \ominus terminals are flat and not completely covered by an insulating sheet. (Such batteries cannot be used even if the \ominus terminals are partially covered.)



Caution:

There is a risk of explosion if the battery is replaced with the incorrect battery type.

Dispose of the used battery following the instructions.

• **The following types of batteries cannot be used:**

Lithium battery pack (CR-V3)/AA (R6) manganese (zinc-carbon) batteries/AA (R6) oxyride batteries/AA (R6) lithium batteries

- Power consumption by the camera varies depending on which functions are used.
- During the conditions described below, power is consumed continuously and the battery becomes exhausted quickly.
 - The zoom is used repeatedly.
 - The shutter button is pressed halfway repeatedly in shooting mode, activating the auto focus.
 - A picture is displayed on the monitor for an extended period of time.
 - The camera is connected to a printer.
- Using an exhausted battery may cause the camera to turn off without displaying the battery level warning.
- Battery life varies depending on the type of battery, manufacturer, shooting conditions, etc. Similarly, the camera may turn off without displaying the battery level warning or may display the battery level warning more quickly.
- Using an exhausted battery may cause the camera to turn off without displaying the battery level warning.
- Always charge NiMH batteries before using them for the first time, or if they have not been used for a long period.
- In some cases, alkaline batteries may have a shorter service life than NiMH. Alkaline battery performance is limited, especially at low temperatures. The use of NiMH batteries is recommended.
- When operating the camera with battery power at low temperatures, try to keep the camera and spare battery as warm as possible. A battery that has run down at low temperatures may be restored after it is warmed at room temperature.
- Before going on a long trip, and especially before traveling abroad, purchase extra batteries. A recommended battery may be difficult to obtain while traveling.
- Using, charging or storing the batteries outside these ranges could shorten battery life or affect battery performance. Always unload the batteries from the camera before storing the camera for a long period.
- Before using NiMH batteries, always read the provided instructions.

⚠ CAUTION

- Before loading, always inspect the battery carefully for leaks, discoloration, warping, or any other abnormality.
- The battery may become hot during prolonged use. To avoid minor burns, do not remove it immediately after using the camera.
- Always unload the battery from the camera before storing the camera for a long period.

AA alkaline batteries

The number of pictures that you can take may vary considerably depending on the battery manufacturer and shooting conditions.

AA NiMH batteries (rechargeable batteries)

- The number of pictures you can take may vary depending on the shooting conditions or batteries.
- Please recycle batteries to help save our planet's resources. When you throw away dead batteries, be sure to cover their terminals and always observe local laws and regulations.

Monitor

- Do not push the monitor forcibly; otherwise the image may become vague, resulting in a playback mode failure or damage to the monitor.
- A strip of light may appear on the top/bottom of the monitor, but this is not a malfunction.
- When a subject is viewed diagonally in the camera, the edges may appear zigzagged on the monitor. This is not a malfunction; it will be less noticeable in playback mode.
- In places subject to low temperatures, the monitor may take a long time to turn on or its color may change temporarily. When using the camera in extremely cold places, it is a good idea to occasionally place it in a warm place. The monitor exhibiting poor performance due to low temperatures will recover in normal temperatures.
- The monitor of this product is manufactured with high-quality accuracy, however, there may be a stuck or dead pixel on the monitor. These pixels do not have any influence on the image to be saved. Because of the characteristics, the unevenness of the color or brightness may also be found depending on the angle, but this is due to the structure of the monitor. This is not a malfunction.

Legal and Other Notices

- Olympus makes no representations or warranties regarding any damages, or benefit expected by using this unit lawfully, or any request from a third person, which are caused by the inappropriate use of this product.
- Olympus makes no representations or warranties regarding any damages or any benefit expected by using this unit lawfully which are caused by erasing picture data.

Disclaimer of Warranty

- Olympus makes no representations or warranties, either expressed or implied, by or concerning any content of these written materials or software, and in no event shall be liable for any implied warranty of merchantability or fitness for any particular purpose or for any consequential, incidental or indirect damages (including but not limited to damages for loss of business profits, business interruption and loss of business information) arising from the use or inability to use these written materials or software or equipment. Some countries do not allow the exclusion or limitation of liability for consequential or incidental damages or of the implied warranty, so the above limitations may not apply to you.
- Olympus reserves all rights to this manual.

Warning

Unauthorized photographing or use of copyrighted material may violate applicable copyright laws. Olympus assumes no responsibility for unauthorized photographing, use or other acts that infringe upon the rights of copyright owners.

Copyright Notice

All rights reserved. No part of these written materials or this software may be reproduced or used in any form or by any means, electronic or mechanical, including photocopying and recording or the use of any type of information storage and retrieval system, without the prior written permission of Olympus. No liability is assumed with respect to the use of the information contained in these written materials or software, or for damages resulting from the use of the information contained therein. Olympus reserves the right to alter the features and contents of this publication or software without obligation or advance notice.

FCC Notice

- Radio and Television Interference
- Changes or modifications not expressly approved by the manufacturer may void the user's authority to operate this equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

- This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
- However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Adjust or relocate the receiving antenna.
 - Increase the distance between the camera and receiver.
 - Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
 - Consult your dealer or an experienced radio/TV technician for help. Only the OLYMPUS-supplied USB cable should be used to connect the camera to USB enabled personal computers (PC).

Any unauthorized changes or modifications to this equipment would void the user's authority to operate it.

For customers in North and South America

For customers in USA

Declaration of Conformity

Model Number: SP-820UZ

Trade Name: OLYMPUS

Responsible Party:

OLYMPUS IMAGING AMERICA INC.

Address: 3500 Corporate Parkway, P.O. Box 610,
Center Valley, PA 18034-0610, U.S.A.

Telephone Number: 484-896-5000

Tested To Comply With FCC Standards

FOR HOME OR OFFICE USE

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

For customers in CANADA

This Class B digital apparatus complies with Canadian ICES-003.

OLYMPUS WORLDWIDE LIMITED WARRANTY - IMAGING PRODUCTS

Olympus warrants that the enclosed Olympus® imaging product(s) and related Olympus® accessories (individually a "Product" and collectively the "Products") will be free from defects in materials and workmanship under normal use and service for a period of one (1) year from the date of purchase.

If any Product proves to be defective within the one-year warranty period, the customer must return the defective Product to any of Olympus Service Centers, following the procedure set forth below (See "WHAT TO DO WHEN SERVICE IS NEEDED").

Olympus, at its sole discretion, will repair, replace, or adjust the defective Product, provided that Olympus investigation and factory inspection disclose that (a) such defect developed under normal and proper use and (b) the Product is covered under this limited warranty.

Repair, replacement, or adjustment of defective Products shall be Olympus's sole obligation and the customer's sole remedy hereunder.

The customer is liable and shall pay for shipment of the Products to the Olympus Service Center.

Olympus shall not be obligated to perform preventive maintenance, installation, deinstallation, or maintenance.

Olympus reserves the right to (i) use reconditioned, refurbished, and/or serviceable used parts (that meet Olympus's quality assurance standards) for warranty or any other repairs and (ii) make any internal or external design and/or feature changes on or to its products without any liability to incorporate such changes on or to the Products.

WHAT IS NOT COVERED BY THIS LIMITED WARRANTY

Excluded from this limited warranty and not warranted by Olympus in any fashion, either express, implied, or by statute, are:

- (a) products and accessories not manufactured by Olympus and/or not bearing the "OLYMPUS" brand label (the warranty coverage for products and accessories of other manufacturers, which may be distributed by Olympus, is the responsibility of the manufacturers of such products and accessories in accordance with the terms and duration of such manufacturers' warranties);

- (b) any Product which has been disassembled, repaired, tampered with, altered, changed, or modified by persons other than Olympus's own authorized service personnel unless repair by others is made with the written consent of Olympus;
- (c) defects or damage to the Products resulting from wear, tear, misuse, abuse, negligence, sand, liquids, impact, improper storage, nonperformance of scheduled operator and maintenance items, battery leakage, use of non-"OLYMPUS" brand accessories, consumables, or supplies, or use of the Products in combination with non-compatible devices;
- (d) software programs;
- (e) supplies and consumables (including but not limited to lamps, ink, paper, film, prints, negatives, cables and batteries); and/or
- (f) Products which do not contain a validly placed and recorded Olympus serial number, unless they are a model on which Olympus does not place and record serial numbers.

EXCEPT FOR THE LIMITED WARRANTY SET FORTH ABOVE, OLYMPUS MAKES NO AND DISCLAIMS ALL OTHER REPRESENTATIONS, GUARANTIES, CONDITIONS, AND WARRANTIES CONCERNING THE PRODUCTS, WHETHER DIRECT OR INDIRECT, EXPRESS OR IMPLIED, OR ARISING UNDER ANY STATUTE, ORDINANCE, COMMERCIAL USAGE OR OTHERWISE, INCLUDING BUT NOT LIMITED TO ANY WARRANTY OR REPRESENTATION AS TO THE SUITABILITY, DURABILITY, DESIGN, OPERATION, OR CONDITION OF THE PRODUCTS (OR ANY PART THEREOF) OR THE MERCHANTABILITY OF THE PRODUCTS OR THEIR FITNESS FOR A PARTICULAR PURPOSE, OR RELATING TO THE INFRINGEMENT OF ANY PATENT, COPYRIGHT, OR OTHER PROPRIETARY RIGHT USED OR INCLUDED THEREIN.

IF ANY IMPLIED WARRANTIES APPLY AS A MATTER OF LAW, THEY ARE LIMITED IN DURATION TO THE LENGTH OF THIS LIMITED WARRANTY.

SOME STATES MAY NOT RECOGNIZE A DISCLAIMER OR LIMITATION OF WARRANTIES AND/OR LIMITATION OF LIABILITY SO THE ABOVE DISCLAIMERS AND EXCLUSIONS MAY NOT APPLY.

THE CUSTOMER MAY ALSO HAVE DIFFERENT AND/OR ADDITIONAL RIGHTS AND REMEDIES THAT VARY FROM STATE TO STATE.

THE CUSTOMER ACKNOWLEDGES AND AGREES THAT OLYMPUS SHALL NOT BE RESPONSIBLE FOR ANY DAMAGES THAT THE CUSTOMER MAY INCUR FROM DELAYED SHIPMENT, PRODUCT FAILURE, PRODUCT DESIGN, SELECTION, OR PRODUCTION, IMAGE OR DATA LOSS OR IMPAIRMENT OR FROM ANY OTHER CAUSE, WHETHER LIABILITY IS ASSERTED IN CONTRACT, TORT (INCLUDING NEGLIGENCE AND STRICT PRODUCT LIABILITY) OR OTHERWISE. IN NO EVENT SHALL OLYMPUS BE LIABLE FOR ANY INDIRECT, INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES OF ANY KIND (INCLUDING WITHOUT LIMITATION LOSS OF PROFITS OR LOSS OF USE), WHETHER OR NOT OLYMPUS SHALL BE OR SHOULD BE AWARE OF THE POSSIBILITY OF SUCH POTENTIAL LOSS OR DAMAGE.

Representations and warranties made by any person, including but not limited to dealers, representatives, salespersons, or agents of Olympus, which are inconsistent or in conflict with or in addition to the terms of this limited warranty, shall not be binding upon Olympus unless reduced to writing and approved by an expressly authorized officer of Olympus.

This limited warranty is the complete and exclusive statement of warranty which Olympus agrees to provide with respect to the Products and it shall supersede all prior and contemporaneous oral or written agreements, understandings, proposals, and communications pertaining to the subject matter hereof.

This limited warranty is exclusively for the benefit of the original customer and cannot be transferred or assigned.

WHAT TO DO WHEN SERVICE IS NEEDED

The customer must transfer any image or other data saved on a Product to another image or data storage medium and/or remove any film from the Product prior to sending the Product to Olympus for service.

IN NO EVENT SHALL OLYMPUS BE RESPONSIBLE FOR SAVING, KEEPING OR MAINTAINING ANY IMAGE OR DATA SAVED ON A PRODUCT RECEIVED BY IT FOR SERVICE, OR ON ANY FILM CONTAINED WITHIN A PRODUCT RECEIVED BY IT FOR SERVICE, NOR SHALL OLYMPUS BE RESPONSIBLE FOR ANY DAMAGES IN THE EVENT ANY IMAGE OR DATA IS LOST OR IMPAIRED WHILE SERVICE IS BEING PERFORMED (INCLUDING, WITHOUT LIMITATION, DIRECT, INDIRECT, INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES, LOSS OF PROFITS OR LOSS OF USE), WHETHER OR NOT OLYMPUS SHALL BE OR SHOULD BE AWARE OF THE POSSIBILITY OF SUCH POTENTIAL LOSS OR IMPAIRMENT.

Package the Product carefully using ample padding material to prevent damage in transit and either deliver it to the Authorized Olympus Dealer that sold you the Product or ship it postage prepaid and insured to any of our Olympus Service Centers.

When returning Products for service, your package should include the following:

- 1 Sales receipt showing date and place of purchase.
- 2 Copy of this limited warranty **bearing the Product serial number corresponding to the serial number on the Product** (unless it is a model on which Olympus does not place and record serial numbers).
- 3 A detailed description of the problem.
- 4 Sample prints, negatives, digital prints (or files on disk) if available and related to the problem.

When service is completed, the Product will be returned to you postage prepaid.

WHERE TO SEND PRODUCT FOR SERVICE

See "WORLDWIDE WARRANTY" for the nearest service center.

INTERNATIONAL WARRANTY SERVICE

International warranty service is available under this warranty.

For customers in Europe



"CE" mark indicates that this product complies with the European requirements for safety, health, environment and customer protection. "CE" mark cameras are intended for sales in Europe.



This symbol [crossed-out wheeled bin WEEE Annex IV] indicates separate collection of waste electrical and electronic equipment in the EU countries.

Please do not throw the equipment into the domestic refuse.

Please use the return and collection systems available in your country for the disposal of this product.



This symbol [crossed-out wheeled bin Directive 2006/66/EC Annex II] indicates separate collection of waste batteries in the EU countries.

Please do not throw the batteries into the domestic refuse. Please use the return and collection systems available in your country for the disposal of the waste batteries.

Provisions of warranty

- 1 If this product proves to be defective, although it has been used properly (in accordance with the written Handling Care and Operating instructions supplied with it), during the applicable national warranty period and has been purchased from an authorized Olympus distributor within the business area of Olympus Europa Holding GmbH as stipulated on the website: <http://www.olympus.com> this product will be repaired, or at Olympus's option replaced, free of charge. To claim under this warranty the customer must take the product before the end of the applicable national warranty period to the dealer where the product was purchased or any other Olympus service station within the business area of Olympus Europa Holding GmbH as stipulated on the website: <http://www.olympus.com>.

During the one year period of the World Wide Guarantee the customer may turn the product in at any Olympus service station. Please notice that not in all countries such Olympus service station exists.

- 2 The customer shall transport the product to the dealer or Olympus authorized service station at his own risk and shall be responsible for any costs incurred in transporting the product.

Provisions of Guarantee

- 1 *OLYMPUS IMAGING CORP., Shinjuku Monolith, 2-3-1 Nishi-Shinjuku, Shinjuku-ku, Tokyo 163-0914, Japan grants one year World Wide Guarantee. This worldwide Guarantee must be presented at an Olympus authorized repair service station before any repair can be made under conditions of this Guarantee. This Guarantee is valid only if the Guarantee Certificate and proof of purchase are presented at the Olympus repair service station. Please note that this Guarantee is in addition to and does not affect the customer's legal warranty rights under the applicable national legislation governing the sale of consumer goods mentioned above.
- 2 This Guarantee does not cover the following and the customer will be required to pay repair charge, even for defects occurring within the Guarantee period referred to above.
- Any defect that occurs due to mishandling (such as an operation performed that is not mentioned in the Handling Care or other sections of the instructions, etc.)
 - Any defect that occurs due to repair, modification, cleaning, etc. performed by anyone other than Olympus or an Olympus authorized service station.
 - Any defect or damage that occurs due to transport, a fall, shock, etc. after purchase of the product.
 - Any defect or damage that occurs due to fire, earthquake, flood damage, thunderbolt, other natural disasters, environmental pollution and irregular voltage sources.
 - Any defect that occurs due to careless or improper storage (such as keeping the product under conditions of high temperature and humidity, near insect repellents such as naphthalene or harmful drugs, etc.), improper maintenance, etc.
 - Any defect that occurs due to exhausted batteries, etc.
 - Any defect that occurs due to sand, mud, etc. entering the inside of the product casing.
 - When the Guarantee Certificate is not returned with the product.
 - When any alterations whatsoever are made to the Guarantee Certificate regarding the year, month and date of purchase, the customer's name, the dealer's name, and the serial number.
 - When proof of purchase is not presented with this Guarantee Certificate.

- 3 This Guarantee applies to the product only; the Guarantee does not apply to any other accessory equipment, such as the case, strap, lens cap and batteries.

- 4 Olympus's sole liability under this Guarantee shall be limited to repairing or replacing the product. Any liability under the Guarantee for indirect or consequential loss or damage of any kind incurred or suffered by the customer due to a defect of the product, and in particular any loss or damage caused to any lenses, films, other equipment or accessories used with the product or for any loss resulting from a delay in repair or loss of data, is excluded. Compelling regulations by law remain unaffected by this.

Notes regarding Guarantee maintenance

- 1 This Guarantee will only be valid if the Guarantee Certificate is duly completed by Olympus or an authorized dealer or other documents contain sufficient proof. Therefore, please make sure that your name, the name of the dealer, the serial number and the year, month and date of purchase are all completed or the original invoice or the sales receipt (indicating the dealer's name, the date of purchase and product type) is attached to this Guarantee Certificate. Olympus reserves the right to refuse free-of-charge service if neither Guarantee Certificate is completed nor the above document is attached or if the information contained in it is incomplete or illegible.
- 2 Since this Guarantee Certificate will not be re-issued, keep it in a safe place.
- * Please refer to the list on the web site: <http://www.olympus.com> for the authorized international Olympus service network.

For customers in Asia

Provisions of warranty

- 1 If this product proves to be defective, although it has been used properly (in accordance with the written Handling Care and Operating instructions supplied with it), during a period of up to one year from the date of purchase this product will be repaired, or at Olympus's option replaced, free of charge. To claim under warranty the customer must take the product and this Warranty certificate before the end of the one year warranty period to the dealer where the product was purchased or any Olympus authorized service station listed in the instructions and request the necessary repairs.
- 2 The customer shall transport the product to the dealer or Olympus authorized service station at his own risk and shall be responsible for any costs incurred in transporting the product.

- 3 This warranty does not cover the following and the customer will be required to pay repair charge, even for defects occurring within the one year period referred to above.
- Any defect that occurs due to mishandling (such as an operation performed that is not mentioned in the Handling Care or other sections of the instructions, etc.)
 - Any defect that occurs due to repair, modification, cleaning, etc. performed by anyone other than Olympus or an Olympus authorized service station.
 - Any defect or damage that occurs due to transport, a fall, shock, etc. after purchase of the product.
 - Any defect or damage that occurs due to fire, earthquake, flood damage, thunderbolt, other natural disasters, environmental pollution and irregular voltage sources.
 - Any defect that occurs due to careless or improper storage (such as keeping the product under conditions of high temperature and humidity, near insect repellents such as naphthalene or harmful drugs, etc.), improper maintenance, etc.
 - Any defect that occurs due to exhausted batteries, etc.
 - Any defect that occurs due to sand, mud, etc. entering the inside of the product casing.
 - When this Warranty Certificate is not returned with the product.
 - When any alterations whatsoever are made to the Warranty Certificate regarding the year, month and date of purchase, the customer's name, the dealer's name, and the serial number.
 - When proof of purchase is not presented with this Warranty Certificate.
- 4 This Warranty applies to the product only; the Warranty does not apply to any other accessory equipment, such as the case, strap, lens cap and batteries.
- 5 Olympus' sole liability under this warranty shall be limited to repairing or replacing the product and any liability for indirect or consequential loss or damage of any kind incurred or suffered by the customer due to a defect in the product, and in particular any loss or damage caused to any film or lenses or other equipment or accessories used with the product or for any loss resulting from delay in repair, is excluded.

Notes;

- This Warranty is in addition to and does not affect the customer's statutory right.
- If you have any queries regarding this Warranty, call any of the Olympus authorized service stations listed in the instructions.

Notes regarding warranty maintenance

- This Warranty will only be valid if the Warranty Certificate is duly completed by Olympus or the dealer. Make sure that your name, the name of the dealer, the serial number and the year, month and date of purchase are all completed.
- Since this Warranty Certificate will not be re-issued, keep it in a safe place.
- Any request for repair by a customer in same country where the product was purchased shall be subject to the terms of the warranty issued by the Olympus distributor in that country. Where the local Olympus distributor does not issue a separate warranty or where the customer is not in the country where the product was purchased the terms of this worldwide warranty shall apply.
- Where applicable, this Warranty is valid worldwide. The Olympus authorized service stations listed in this Warranty will gladly honor it.
 - Please refer to the appended list for the authorized international Olympus service network.

Disclaimer of Warranty

Olympus makes no representations or warranties, either expressed or implied, by or concerning any content if these written materials or software, and in no event shall be liable for any implied warranty of merchantability or fitness for any particular purpose or for any consequential, incidental or indirect damages (including but not limited to damages for loss of business profits, business interruption and loss of business information) arising from the use of inability to use these written materials or software. Some states do not allow the exclusion or limitation of liability for consequential or incidental damages, so the above limitations may not apply to you.

Trademarks

- Microsoft and Windows are registered trademarks of Microsoft Corporation.
- Macintosh is a trademark of Apple Inc.
- SDXC logo is a trademark of SD-3C, LLC.
- Eye-Fi is a registered trademark of Eye-Fi, Inc.
- Powered by ARCSOFT.
- All other company and product names are registered trademarks and/or trademarks of their respective owners.

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NONCOMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTP://WWW.MPEGLA.COM](http://WWW.MPEGLA.COM)

The software in this camera may include third party software. Any third party software is subject to the terms and conditions, imposed by the owners or licensors of that software, under which software is provided to you.

Those terms and other third party software notices, if any, may be found in the software notice PDF file stored within the accompanying CD-ROM or at <http://www.olympus.co.jp/en/support/msgs/digicamera/download/notice/notice.cfm>

- The standards for camera file systems referred to in this manual are the "Design rule for Camera File system/DCF" standards stipulated by the Japan Electronics and Information Technology Industries Association (JEITA).

SPECIFICATIONS

Camera

Product type	: Digital camera (for shooting and displaying)
Recording system	
Still pictures	: Digital recording, JPEG (in accordance with Design rule for Camera File system (DCF))
Applicable standards	: Exif 2.3, Digital Print Order Format (DPOF), PRINT Image Matching III, PictBridge
Sound with still pictures	: Wave format
Movie	: MOV H.264 Linear PCM
Memory	: Internal memory, SD/SDHC/SDXC card (supports UHS-I), Eye-Fi card
No. of effective pixels	: 14,000,000 pixels
Image pickup device	: 1/2.3" CMOS (primary color filter)
Lens	: Olympus lens 4.0 to 160.0 mm, f3.4 to 5.7 (Equivalent to 22.4 to 896 mm on a 35 mm film)
Photometric system	: Digital ESP metering, spot metering system
Shutter speed	: 4 to 1/2000 sec.
Shooting range	: 0.1 m (0.3 ft.) to ∞ (W), 3.0 m (9.8 ft.) to ∞ (T) (Normal/Macro) 0.01 m (0.03 ft.) to ∞ (super macro mode)
Monitor	: 3.0" TFT color LCD display, 460,000 dots
Connector	: DC-IN jack, USB connector, A/V OUT jack (Multi-connector)/ HDMI micro connector (type D)
Automatic calendar system	: 2000 up to 2099
Operating environment	
Temperature	: 0 °C to 40 °C (32 °F to 104 °F) (operation)/ -20 °C to 60 °C (-4 °F to 140 °F) (storage)
Humidity	: 30 % to 90 % (operation)/10 % to 90 % (storage)
Power supply	: AA alkaline/NiMH battery (four) or separately sold USB-AC adapter
Dimensions	: 116.9 mm (W) x 78.0 mm (H) x 93.2 mm (D) (4.6 x 3.1 x 3.7 in.) (excluding protrusions)
Weight	: 485 g (17.1 oz) (including battery and card)

Design and specifications subject to change without notice.

HDMI, the HDMI Logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

OLYMPUS KOREA CO., LTD.

10F, Olympus Tower A, 114-9, Samsung-dong, Gangnam-gu, Seoul, Korea. 135-090
<http://www.olympus.co.kr> Tel. 1544-3200

OLYMPUS (MALAYSIA) SDN. BHD.

10-8, Menara 1 MK, Kompleks '1 Mont Kiara', No.1, Jalan Kiara, Mont Kiara, 50480
Kuala Lumpur, Malaysia.
Tel:+603-6411 0000/Fax:+603-6411 0003

BRANCHES:

PENANG OFFICE

Suite 3A-6, Level 3A, Wisma Great Eastern
No.25, Lebu Light, 10200 Penang
Tel:+604 262 2832/ Fax:+604 262 5832

KUCHING OFFICE

Level 6-5A, 6th Floor Menara MAA,
Lot 86, Section 53,
Jalan Central Timur,
93300 Kuching, Sarawak
Tel:+6082 253 885/ Fax:+6082 256 885

<http://www.olympus.com.my>

OLYMPUS

<http://www.olympus.com/>

OLYMPUS IMAGING CORP.

Shinjuku Monolith, 3-1 Nishi-Shinjuku 2-chome, Shinjuku-ku, Tokyo, Japan

OLYMPUS IMAGING AMERICA INC.

3500 Corporate Parkway, P.O. Box 610, Center Valley, PA 18034-0610, U.S.A. Tel. 484-896-5000

Technical Support (USA)

24/7 online automated help:

<http://www.olympusamerica.com/support>

Phone customer support: Tel. 1-888-553-4448 (Toll-free)

Our phone customer support is available from 9 am to 9 pm
(Monday to Friday) ET

<http://olympusamerica.com/contactus>

Olympus software updates can be obtained at:

<http://www.olympusamerica.com/digital>

OLYMPUS EUROPA HOLDING GMBH

Premises: Wendenstrasse 14-18, 20097 Hamburg, Germany
Tel: +49 40-23 77 3-0 / Fax: +49 40-23 07 61

Goods delivery: Modul H, Willi-Bleicher Str. 36, 52353 Düren, Germany
Letters: Postfach 10 49 08, 20034 Hamburg, Germany

European Technical Customer Support:

Please visit our homepage <http://www.olympus-europa.com> or call our TOLL FREE NUMBER* : **00800 - 67 10 83 00**
for Austria, Belgium, Denmark, Finland, France, Germany, Italy, Luxembourg, Netherlands, Norway, Portugal, Spain, Sweden, Switzerland, United Kingdom
* Please note some (mobile) phone services providers do not permit access or request an additional prefix to +800 numbers.

For all European Countries not listed and in case that you can't get connected to the above mentioned number, please make use of the following
CHARGED NUMBERS: **+49 180 5 - 67 10 83** or **+49 40 - 237 73 4899**

Our Technical Customer Support is available from 9 am to 6 pm MET (Monday to Friday)

OLYMPUS IMAGING CHINA CO.,LTD.

Customer Support: 400-650-0303 Homepage: <http://www.olympus.com.cn>

Customer Service Center:

A8F, Ping An International Financial Center, No. 1-3,
Xinyuan South Road, Chaoyang District, Beijing
Tel: +86-10-58199199 Fax: +86-10-59761360 Zip: 100027

A,32F Shanghai Industrial Investment Building 18
Cao Xi Road(N), Xuhui District, Shanghai
Tel: +86-21-60823500 Fax: +86-21-60823100 Zip: 200030

Rm.1605-1608, Guangzhou International Electronic tower, No403,
Huan Shi East Road, Guang Zhou
Tel: +86-20-61227111 Fax: +86-20-61227120 Zip: 510095

16F Huamin Hanzun Internation Plaza, No.1, Fuxing Street,
Chengdu
Tel: +86-28-86703531 Fax: +86-28-86703532 Zip: 610016

OLYMPUS HONG KONG AND CHINA LIMITED

Digital Camera Repair Centre
L4207, Office Tower, Langham Place, 8 Argyle Street, Mongkok, Kowloon, Hong Kong
Customer Hotline: +852-2376-2150 Fax: +852-2375-0630
<http://www.olympus.com.hk>