


Panasonic®

Basic Owner's Manual Digital Camera

Model No. **DMC-FZ47**

LUMIX

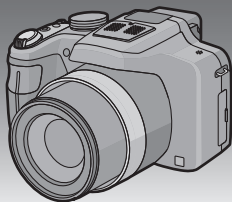

Before connecting, operating or adjusting this product,
please read the instructions completely.



More detailed instructions on the operation of this camera are contained in "Owner's Manual for advanced features (PDF format)" in the supplied CD-ROM. Install it on your PC to read it.



For USA and Puerto Rico assistance, please call: 1-800-211-PANA(7262) or,
contact us via the web at: <http://www.panasonic.com/contactinfo>

**Dear Customer,
Thank you for choosing Panasonic!**

You have purchased one of the most sophisticated and reliable products on the market today. Used properly, we're sure it will bring you and your family years of enjoyment. Please take time to fill in the information on the below. The serial number is on the tag located on the underside of your camera. Be sure to **retain this manual** as your convenient camera information source.

| | |
|-----------------------|------------------|
| Date of Purchase | Dealer Phone No. |
| Dealer Purchased From | Model No. |
| Dealer Address | Serial No. |

Please note that the actual controls and components, menu items, etc. of your Digital Camera may look somewhat different from those shown in the illustrations in this Owner's Manual.

Carefully observe copyright laws.

- Recording of pre-recorded tapes or discs or other published or broadcast material for purposes other than your own private use may infringe copyright laws. Even for the purpose of private use, recording of certain material may be restricted.



A lithium ion battery that is recyclable powers the product you have purchased. Please call 1-800-8-BATTERY for information on how to recycle this battery.

Information for Your Safety

WARNING:

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE,

- **DO NOT EXPOSE THIS APPARATUS TO RAIN, MOISTURE, DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.**
- **USE ONLY THE RECOMMENDED ACCESSORIES.**
- **DO NOT REMOVE THE COVER (OR BACK); THERE ARE NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**

THE SOCKET OUTLET SHALL BE INSTALLED NEAR THE EQUIPMENT AND SHALL BE EASILY ACCESSIBLE.

■ Product identification marking

| Product | Location |
|-----------------|----------|
| Digital Camera | Bottom |
| Battery charger | Bottom |

FCC Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: To assure continued compliance, follow the attached installation instructions and use only shielded interface cables with ferrite core when connecting to computer or peripheral devices.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Declaration of Conformity

Trade Name: Panasonic

Model No.: DMC-FZ47

Responsible party: Panasonic Corporation of North America
One Panasonic Way, Secaucus, NJ 07094

Support Contact: Panasonic Consumer Electronics Company
1-800-211-PANA (7262)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

■ About the battery pack

CAUTION

Battery pack (Lithium ion battery pack)

- Use the specified unit to recharge the battery pack.
- Do not use the battery pack with equipment other than the specified unit.
- Do not get dirt, sand, liquids, or other foreign matter on the terminals.
- Do not touch the plug terminals (+ and -) with metal objects.
- Do not disassemble, remodel, heat or throw into fire.

If any electrolyte should come into contact with your hands or clothes, wash it off thoroughly with water.

If any electrolyte should come into contact with your eyes, never rub the eyes. Rinse eyes thoroughly with water, and then consult a doctor.

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

- Do not heat or expose to flame.
- Do not leave the battery(ies) in an automobile exposed to direct sunlight for a long period of time with doors and windows closed.

Warning

Risk of fire, explosion and burns. Do not disassemble, heat above 60 °C (140 °F) or incinerate.

■ About the battery charger

CAUTION!

DO NOT INSTALL OR PLACE THIS UNIT IN A BOOKCASE, BUILT-IN CABINET OR IN ANOTHER CONFINED SPACE. ENSURE THE UNIT IS WELL VENTILATED. TO PREVENT RISK OF ELECTRIC SHOCK OR FIRE HAZARD DUE TO OVERHEATING, ENSURE THAT CURTAINS AND ANY OTHER MATERIALS DO NOT OBSTRUCT THE VENTILATION VENTS.

Battery charger

This battery charger operates on AC between 110 V and 240 V.

But

- In the U.S.A. and Canada, the battery charger must be connected to a 120 V AC power supply only.
- When connecting to an AC supply outside of the U.S.A. or Canada, use a plug adaptor to suit the AC outlet configuration.

■ Cautions for Use

- Always use a genuine Panasonic AV cable (DMW-AVC1; optional).
- Always use a genuine Panasonic HDMI mini cable (RP-CDHM15, RP-CDHM30; optional).
Part numbers: RP-CDHM15 (1.5 m) (5 feet), RP-CDHM30 (3.0 m) (10 feet)
- Do not use any other USB connection cables except the supplied one.

Keep this unit as far away as possible from electromagnetic equipment (such as microwave ovens, TVs, video games etc.).

- If you use this unit on top of or near a TV, the pictures and/or sound on this unit may be disrupted by electromagnetic wave radiation.
- Do not use this unit near cell phones because doing so may result in noise adversely affecting the pictures and/or sound.
- Recorded data may be damaged, or pictures may be distorted, by strong magnetic fields created by speakers or large motors.
- Electromagnetic wave radiation generated by microprocessors may adversely affect this unit, disturbing the pictures and/or sound.
- If this unit is adversely affected by electromagnetic equipment and stops functioning properly, turn this unit off and remove the battery or disconnect AC adaptor (DMW-AC8PP; optional). Then reinsert the battery or reconnect AC adaptor and turn this unit on.

Do not use this unit near radio transmitters or high-voltage lines.

- If you record near radio transmitters or high-voltage lines, the recorded pictures and/or sound may be adversely affected.

-If you see this symbol-

Information on Disposal in other Countries outside the European Union

This symbol is only valid in the European Union.
If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.



Contents

| | |
|----------------------------------------------------------------------------|----|
| Information for Your Safety | 3 |
| Care of the camera | 9 |
| Standard Accessories | 10 |
| Names and Functions of Components | 11 |
| Charging the Battery | 14 |
| • Charging | 14 |
| • Approximate operating time and number of recordable pictures | 16 |
| About the Built-in Memory/the Card | 17 |
| Inserting and Removing the Card (optional)/the Battery | 18 |
| Setting Date/Time (Clock Set) | 19 |
| • Changing the clock setting | 19 |
| Selecting the Recording Mode | 20 |
| Taking Pictures with Your Favorite Settings (Program AE Mode) | 22 |
| • Program Shift | 23 |
| Taking Pictures Using the Automatic Function (Intelligent Auto Mode) | 24 |
| Recording Motion Pictures | 26 |
| Playing Back Pictures ([NORMAL PLAY]) | 27 |
| Deleting Pictures | 27 |
| Setting the Menu | 28 |
| Compensating the Exposure | 29 |
| Taking Pictures by Specifying the Aperture/Shutter Speed | 30 |
| • Aperture-Priority AE | 30 |
| • Shutter-Priority AE | 30 |
| • Manual Exposure Mode | 31 |
| Reading the Owner's Manual (PDF format) | 32 |
| Specifications | 34 |
| Digital Camera Accessory System | 38 |
| Digital Camera Accessory Order Form | 39 |
| Limited Warranty (ONLY FOR U.S.A. AND PUERTO RICO) | 40 |

Care of the camera


Do not subject to strong vibration, shock, or pressure.

- The lens, LCD monitor, or external case may be damaged if used in following conditions. It may also malfunction or image may not be recorded.
 - Drop or hit the camera.
 - Press hard on the lens or the LCD monitor.
- **When carrying or using the playback feature, ensure that the lens is in the stored position.**
- **There are times when rattling sounds or vibrations will come from the camera, but these are due to the motion of the aperture, the zoom and the motor and do not indicate a defect.**

This camera is not dust/drip/water proof.

Avoid using the camera at location with a lot of dust, water, sand, etc.

- Liquids, sand and other foreign material may get into the space around the lens, buttons, etc. Be particularly careful since it may not just cause malfunctions, but it may become unrepairable.
 - Places with a lot of sand or dust.
 - Places where water can come into contact with this unit such as when using it on a rainy day or on a beach.

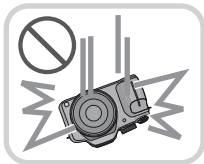

Standard Accessories

Check that all the accessories are supplied before using the camera.
Product numbers correct as of August 2011. These may be subject to change.

- 1 Battery Pack
(Indicated as **battery pack** or **battery** in the text)
Charge the battery before use.
- 2 Battery Charger
(Indicated as **battery charger** or **charger** in the text)
- 3 USB Connection Cable
- 4 CD-ROM
 - Software:
Use it to install the software to your PC.
 - Owner's Manual
- 5 Shoulder Strap
- 6 Lens Cap/Lens Cap String
- 7 Lens Hood


• SD Memory Card, SDHC Memory Card and SDXC Memory Card are indicated as **card** in the text.

• **The card is optional.**

You can record or play back pictures on the built-in memory when you are not using a card.


• For information about optional accessories, refer to the "Digital Camera Accessory System".

• If any accessories are lost, customers should contact Panasonic's parts department at 1 800 833-9626 for further information about obtaining replacement parts.

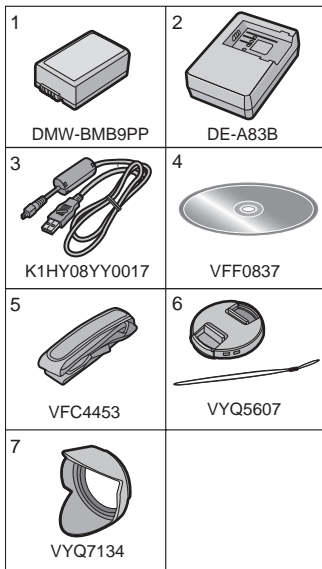


Names and Functions of Components

- 1 Lens
- 2 Self-timer indicator
AF Assist Lamp
- 3 Flash

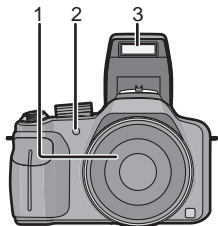

- 4 Flash open button
- 5 Diopter adjustment dial
- 6 Viewfinder
- 7 [EVF/LCD] button
- 8 [AF/AE LOCK] button
- 9 Rear dial
- 10 [AF/AF-LOCK/MF] button
- 11 Playback button
- 12 [MENU/SET] button

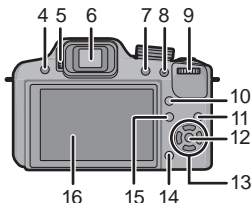

- 13 Cursor buttons


- ▲/ Exposure compensation/
Auto Bracket/Flash output adjustment
- ◀/ Self-timer button
- ▶/ ISO
- ▼/ Function button

The following menus can be assigned.

[PHOTO STYLE]/[ASPECT RATIO]/[QUALITY]/[METERING MODE]/
[WHITE BALANCE]/[I.DYNAMIC]/[GUIDE LINE]/[REC AREA]/
[REMAINING DISP.]


- 14 [Q.MENU] button/Delete button
- 15 [DISPLAY] button
- 16 LCD monitor

- 17 Stereo microphone
- 18 Zoom lever
- 19 Shutter button
- 20 Motion picture button
- 21 [FOCUS] button
- 22 Power lamp
- 23 Camera ON/OFF switch
- 24 Mode dial
- 25 Speaker

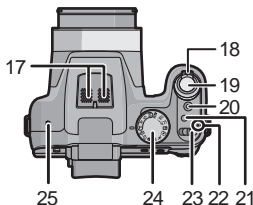


- Do not cover the speaker with your fingers.

- 26 Shoulder strap eyelet
- 27 [HDMI] socket
- 28 [AV OUT/DIGITAL] socket
- 29 Terminal door
- 30 Lens barrel

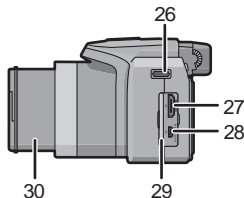

- 31 Tripod receptacle
- 32 Release lever
- 33 Card/Battery door
- 34 DC coupler cover

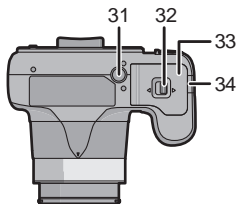

- When using an AC adaptor, ensure that the Panasonic DC coupler (DMW-DCC6; optional) and AC adaptor (DMW-AC8PP; optional) are used.
- Always use a genuine Panasonic AC adaptor (DMW-AC8PP; optional).
- It is recommended to use a fully charged battery or AC adaptor when recording motion pictures.
- If while recording motion pictures using the AC adaptor and the power supply is cut off due to a power outage or if the AC adaptor is disconnected etc., the motion picture being recorded will not be recorded.

Cursor buttons/[MENU/SET] button

This document expresses the up, down, left, and right of the cursor button as follows, or as ▲/▼/◀/▶.

Cursor button:

Selection of items or setting of values etc., is performed.

[MENU/SET] button:

Confirmation of setting contents, etc., is performed.

e.g.: When you press the ▼ (down) button



or

Press ▼

Rear Dial

There are 2 ways to operate the rear dial, rotating left or right, and deciding by pressing.

Rotating:

Selection of items or setting of values is performed during the various settings.

Pressing:

Operations that are the same as [MENU/SET] button, such as determine settings, etc., are performed during the various settings.

- Rear dial is described as follows in this Owner's Manual.

e.g.: Rotating left or right



e.g.: Pressing the rear dial



Charging the Battery

■ About batteries that you can use with this unit

The battery that can be used with this unit is DMW-BMB9PP.

It has been found that counterfeit battery packs which look very similar to the genuine product are made available to purchase in some markets. Some of these battery packs are not adequately protected with internal protection to meet the requirements of appropriate safety standards. There is a possibility that these battery packs may lead to fire or explosion. Please be advised that we are not liable for any accident or failure occurring as a result of use of a counterfeit battery pack. To ensure that safe products are used we would recommend that a genuine Panasonic battery pack is used.


- Use the dedicated charger and battery.

Charging

- The battery is not charged when the camera is shipped. Charge the battery before use.
- Charge the battery with the charger indoors.

1


Attach the battery paying attention to the direction of the battery.

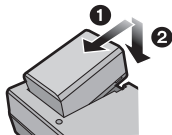

2

Connect the charger to the electrical outlet.

- The [CHARGE] indicator (A) lights up and charging begins.

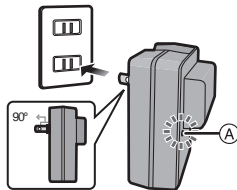

■ About the [CHARGE] indicator

The [CHARGE] indicator turns on:

The [CHARGE] indicator is turned on during charging.

The [CHARGE] indicator turns off:

The [CHARGE] indicator will turn off once the charging has completed without any problem. (Disconnect the charger from the electrical socket and detach the battery after charging is completed.)

• When the [CHARGE] indicator flashes

- The battery temperature is too high or too low. It is recommended to charge the battery again in an ambient temperature of between 10 °C and 30 °C (50 °F and 86 °F).
- The terminals of the charger or the battery are dirty. In this case, wipe them with a dry cloth.

■ Charging time

| | |
|----------------------|------------------------|
| Charging time | Approx. 155 min |
|----------------------|------------------------|

Approximate operating time and number of recordable pictures

| | |
|--------------------------------------|-----------------------------|
| Number of recordable pictures | Approx. 400 pictures |
| Recording time | Approx. 200 min |

Recording conditions by CIPA standard

- CIPA is an abbreviation of [Camera & Imaging Products Association].
- Program AE Mode
- Temperature: 23 °C (73.4 °F)/Humidity: 50%RH when LCD monitor is on.
- Using a Panasonic SD Memory Card (32 MB).
- Using the supplied battery.
- Starting recording 30 seconds after the camera is turned on. (When the Optical Image Stabilizer function is set to [ON].)
- **Recording once every 30 seconds** with full flash every second recording.
- Rotating the zoom lever from Tele to Wide or vice versa in every recording.
- Turning the camera off every 10 recordings and leaving it until the temperature of the battery decreases.

| | |
|----------------------|------------------------|
| Playback time | Approx. 330 min |
|----------------------|------------------------|

About the Built-in Memory/the Card

Built-in Memory

- **Memory size: Approx. 70 MB**
- The access time for the built-in memory may be longer than the access time for a card.

Card

The following cards which conform to the SD video standard can be used with this unit.

(These cards are indicated as **card** in the text.)

| | Remarks |
|-------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SD Memory Card (8 MB to 2 GB) | <ul style="list-style-type: none">• Use a card with SD Speed Class* with “Class 4” or higher when recording motion pictures.• SDHC Memory Card can be used with SDHC Memory Card or SDXC Memory Card compatible equipment.• SDXC Memory Card can only be used with SDXC Memory Card compatible equipment.• Check that the PC and other equipment are compatible when using the SDXC Memory Cards. http://panasonic.net/avc/sdcard/information/SDXC.html• Only the cards with capacity listed left can be used. |
| SDHC Memory Card (4 GB to 32 GB) | |
| SDXC Memory Card (48 GB, 64 GB) | |

- * SD Speed Class is the speed standard regarding continuous writing. Check via the label on the card, etc.

e.g.:

CLASS 



- Please confirm the latest information on the following website.

<http://panasonic.jp/support/global/cs/dsc/>

(This Site is English only.)



Note


- Keep the Memory Card out of reach of children to prevent swallowing.

Inserting and Removing the Card (optional)/the Battery

- Turn the power switch to [OFF] and confirm that the lens barrel is retracted.
- We recommend using a Panasonic card.

1 Slide the release lever in the direction of the arrow and open the card/battery door.

- Always use genuine Panasonic batteries (DMW-BMB9PP).
- If you use other batteries, we cannot guarantee the quality of this product.

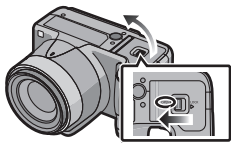


2 **Battery:** Being careful about the battery orientation, insert all the way until you hear a locking sound and then check that it is locked by lever (A).

Pull the lever (A) in the direction of the arrow to remove the battery.

Card: Push it securely all the way until you hear a “click” while being careful about the direction in which you insert it.


To remove the card, push the card until it clicks, then pull the card out upright.

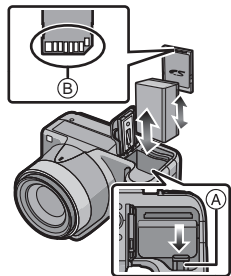

(B): Do not touch the connection terminals of the card.

3 **1:** Close the card/battery door.

2: Slide the release lever in the direction of the arrow.

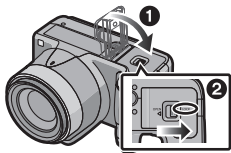


Setting Date/Time (Clock Set)

- The clock is not set when the camera is shipped.

1 Turn the camera on.

- The power lamp **1** lights when you turn this unit on.

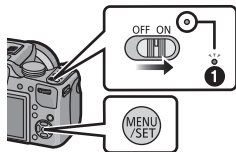

2 Press [MENU/SET].



3 Press ◀/▶ to select the items (year, month, day, hour, minute, display sequence or time display format), and press ▲/▼ to set.



4 Press [MENU/SET] to set.

5 Press [MENU/SET].

Changing the clock setting

Select [CLOCK SET] in the [REC] or [SETUP] menu, and press ▶.


- It can be changed in steps **3** and **4** to set the clock.

Selecting the Recording Mode

Switching the mode by rotating the mode dial.

Align a desired mode with part (A).

- Rotate the mode dial slowly and surely to adjust to each mode.

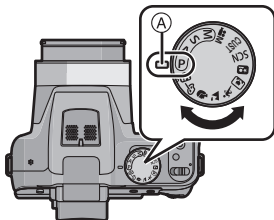

■ Basic



P Program AE Mode

The subjects are recorded using your own settings.






iA Intelligent Auto Mode

The subjects are recorded using settings automatically selected by the camera.

■ Advanced

| | |
|---------------------------------------------------------------------------------------------------|----------------------------------|
| A | Aperture-Priority AE Mode |
| The shutter speed is automatically determined by the aperture value you set. | |
| S | Shutter-Priority AE Mode |
| The aperture value is automatically determined by the shutter speed you set. | |
| M | Manual Exposure Mode |
| The exposure is adjusted by the aperture value and the shutter speed which are manually adjusted. | |
|  M | Creative Video Mode |
| Record motion picture with manual settings. | |
| CUST | Custom Mode |
| Use this mode to take pictures with previously registered settings. | |
| SCN | Scene Mode |
| This allows you to take pictures that match the scene being recorded. | |
|  | Creative Control Mode |
| Record while checking the image effect. | |

■ Advanced Scene Mode


| | |
|---------------------------------------------------------------------------------------|----------------------------|
|  | Portrait Mode |
| Use this mode to take pictures of people. | |
|  | Scenery Mode |
| Use this mode to take pictures of scenery. | |
|  | Sports Mode |
| Use this mode to take pictures of sporting events, etc. | |
|  | Close-up Mode |
| Use this mode to take pictures of a close-by subject. | |
|  | Night Portrait Mode |
| Use this mode to take pictures of night scenes and people against night time scenery. | |

Taking Pictures with Your Favorite Settings (Program AE Mode)

The camera automatically sets the shutter speed and the aperture value according to the brightness of the subject.

You can take pictures with greater freedom by changing various settings in [REC] menu.

1 Set the mode dial to [P].

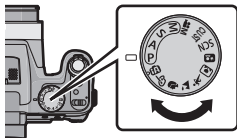


2 Aim the AF area at the point you want to focus on.

3 Press the shutter button halfway to focus.

- (A) Aperture value
- (B) Shutter speed
- (C) ISO sensitivity

- The focus indication (D) (green) lights when the subject is focused.

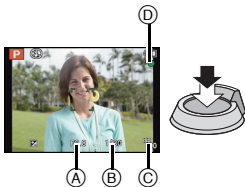

4 Press the shutter button fully (push it in further), and take the picture.



Program Shift

In Program AE Mode, you can change the preset aperture value and shutter speed without changing the exposure. This is called Program Shift. You can make the background more blurred by decreasing the aperture value or record a moving subject more dynamically by slowing the shutter speed when taking a picture in Program AE Mode.

1 Press the shutter button halfway and display the aperture value and shutter speed value on the screen.

2 While the values are displayed (about 10 seconds), perform the Program Shift by rotating the rear dial.




- The Program Shift indication (A) appears on the screen when Program Shift is activated.
- Program Shift is canceled if the camera is turned off or the rear dial is rotated until the Program Shift indication disappears.

Example of Program Shift

(A): Aperture value

(B): Shutter speed

- 1** Program Shift amount
- 2** Program Shift line chart
- 3** Program Shift limit

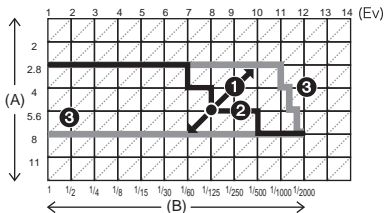


Applicable modes:  P A S M       

Taking Pictures Using the Automatic Function (Intelligent Auto Mode)

The camera will set the most appropriate settings to match the subject and the recording conditions so we recommend this mode for beginners or those who want to leave the settings to the camera and take pictures easily.


1 Set the mode dial to [IA].

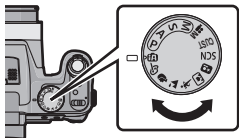

2 Press the shutter button halfway to focus and then press it fully to take the picture.





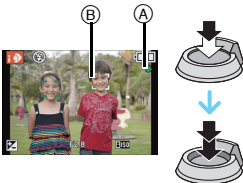


(A) Focus indication

- The AF area (B) is displayed around the subject's face by the Face Detection function. In other cases, it is displayed at the point on the subject which is in focus.



Scene Detection

When the camera identifies the optimum scene, the icon of the scene concerned is displayed in blue for 2 seconds, after which its color changes to the usual red.

| | | |
|------|-----------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|
| iA → |  [i- PORTRAIT] |  [i- SCENERY] |
| |  [i- MACRO] |  [i- NIGHT PORTRAIT]* ¹ |
| |  [i- NIGHT SCENERY] |  [i- SUNSET] |
| |  [i- BABY]* ² | |
| | | |

*1 Only when [i⚡A] is selected.

*2 When [FACE RECOG.] is set to [ON], [i👤] will be displayed for birthdays of registered faces already set only when the face of a person 3 years old or younger is detected.

- [iA] is set if none of the scenes are applicable, and the standard settings are set.
- When [i👤], [i👤] or [i👤] is selected, the camera automatically detects a person's face, and it will adjust the focus and exposure. **(Face Detection)**



Recording Motion Pictures

This unit can record motion pictures in either AVCHD or MP4 formats.

1 Start recording by pressing the motion picture button.

- (A) Available recording time
- (B) Elapsed recording time

- You can record motion pictures fitting each Recording Mode.
- Release the motion picture button right after you press it.
- The recording state indicator (red) © will flash while recording motion pictures.

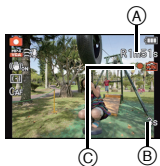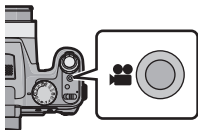


2 Stop the recording by pressing the motion picture button again.

Note

- Maximum time to record motion pictures continuously with [MP4] is 29 minutes 59 seconds or up to 4 GB.

Playing Back Pictures ([NORMAL PLAY])

1 Press [▶].

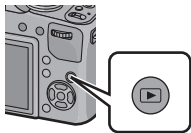

2 Press ◀ or ▶.

- After selecting the motion picture, press ▲ to start playback.



Deleting Pictures


Once deleted, pictures cannot be recovered.

- Pictures on the built-in memory or the card, which are being played back will be deleted.

1 Press [▶].

2 Select the picture to be deleted, and then press [🗑].

- Confirmation screen is displayed.
Picture is deleted by selecting [YES].

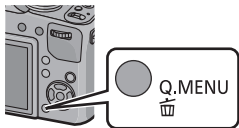

Setting the Menu

Example: In the [REC] menu, change [AF MODE] from [□] (1-area-focusing) to [👤] (Face Detection)

1 Press [MENU/SET].

2 Press ▲/▼ or rotate the rear dial to select the menu item.



3 Press ► or the rear dial.

- Depending on the menu item, its setting may not appear or it may be displayed in a different way.

4 Press ▲/▼ or rotate the rear dial to select the settings.



5 Press [MENU/SET] or the rear dial to set.

■ Close the menu

Press [MENU/SET] or press the shutter button halfway.

■ Switching to other menus

e.g.: Switching to the [SETUP] menu from [REC] Mode menu

 
1 Press [MENU/SET].

2 Press ◀.

3 Press ▼ or rotate the rear dial to select the [SETUP] menu icon [🔧].

4 Press ► or the rear dial.

- Select a menu item next and set it.






Applicable modes:            

Compensating the Exposure

Use this function when you cannot achieve appropriate exposure due to the difference in brightness between the subject and the background.

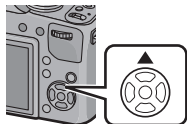- 1** Press  until [EXPOSURE] appears.




- 2** Press   to compensate the exposure and then press [MENU/SET].



- The exposure compensation value appears on the screen.
- Select [0 EV] to return to the original exposure.

■ Operate with the rear dial

- 1** Press the rear dial and enable .
- 2** Rotate the rear dial to compensate the exposure.

- (A) Exposure compensation value



Taking Pictures by Specifying the Aperture/Shutter Speed

Aperture-Priority AE

Set the aperture value to a higher number when you want a sharp focus background. Set the aperture value to a lower number when you want a soft focus background.

1 Set the mode dial to [**A**].

2 Rotate the rear dial to set the aperture value.

A Aperture Value

- It will switch between aperture setting operation and Exposure Compensation operation every time the rear dial is pressed.



Shutter-Priority AE


Set with a faster shutter speed when you want to take a sharp picture of a fast moving subject. Set to a slower shutter speed when you want to create a trail effect.

1 Set the mode dial to [**S**].

2 Rotate the rear dial to set the shutter speed.

B Shutter Speed

- It will switch between shutter speed setting operation and Exposure Compensation operation every time the rear dial is pressed.

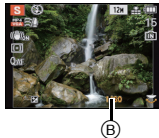

Manual Exposure Mode

Determine the exposure by manually setting the aperture value and the shutter speed.

The Manual Exposure Assistance appears on the lower portion of the screen to indicate the exposure.

1 Set the mode dial to [M].

2 Rotate the rear dial to set the aperture and shutter speed.

Ⓒ Manual Exposure Assistance

- It will switch between aperture setting operation and shutter speed setting operation every time the rear dial is pressed.



Manual Exposure Assistance

| | |
|---------------------------------------------------------|--------------------------------------------------------|
| A scale from -2 to +2 with a circle around the 0 mark. | The exposure is adequate. |
| A scale from -2 to +2 with a circle around the +1 mark. | Set to faster shutter speed or larger aperture value. |
| A scale from -2 to +2 with a circle around the -1 mark. | Set to slower shutter speed or smaller aperture value. |

- The Manual Exposure Assistance is an approximation. We recommend checking the pictures on the playback screen.

Reading the Owner's Manual (PDF format)

More detailed instructions on the operation of this camera are contained in "Owner's Manual for advanced features (PDF format)" in the supplied CD-ROM. Install it on your PC to read it.

■ For Windows


1 Turn the PC on and insert the CD-ROM containing the Owner's Manual (supplied).

2 Click the [Owner's Manual].

3 Select the desired language and then click [Owner's Manual] to install.


Ⓐ To return to the install menu.

4 Double click the "Owner's Manual" shortcut icon on the desktop.

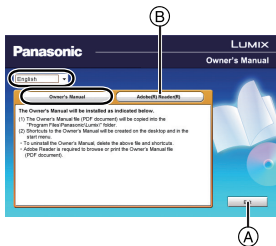

■ When the Owner's Manual (PDF format) will not open

You will need Adobe Acrobat Reader 5.0 or later or Adobe Reader 7.0 or later to browse or print the Owner's Manual (PDF format).

Insert the CD-ROM containing the Owner's Manual (supplied), click  and then follow the messages on the screen to install.

(Compatible OS: Windows XP SP3/Windows Vista SP2/Windows 7)

- You can download and install a version of Adobe Reader that you can use with your OS from the following Web Site.

<http://get.adobe.com/reader/otherversions>

■ To uninstall the Owner's Manual (PDF format)

Delete the PDF file from the "Program Files\Panasonic\Lumix\" folder.

■ For Mac

1

Turn the PC on and insert the CD-ROM containing the Owner's Manual (supplied).

2

Open the "Manual" folder in the CD-ROM and then copy the PDF file with the desired language inside the folder.

3

Double click the PDF file to open it.

Specifications

Digital Camera:

Information for your safety

| | |
|---------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Power Source: | DC 8.4 V |
| Power Consumption: | 1.7 W (When recording with LCD Monitor) 1.5 W (When recording with Viewfinder) 1.0 W (When playing back with LCD Monitor) 0.7 W (When playing back with Viewfinder) |

| | | |
|---------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------|
| Camera effective pixels | 12,100,000 pixels | |
| Image sensor | 1/2.33" CCD, total pixel number 12,500,000 pixels, Primary color filter | |
| Lens [NANO SURFACE COATING] | Optical 24× zoom, f = 4.5 mm to 108 mm (35 mm film camera equivalent: 25 mm to 600 mm) Wide end: F2.8 to F8.0 (when recording motion pictures: F2.8 to F11) Tele end: F5.2 to F8.0 (when recording motion pictures: F5.2 to F11) | |
| Digital zoom | Max. 4× | |
| Extended optical zoom | Max. 46.9× (When set to 3,000,000 pixels [3M] or less) | |
| Focus range | AF | 30 cm (0.99 feet) (Wide)/ 2 m (6.57 feet) (Tele) to ∞ |
| | AF Macro/MF/ Intelligent Auto/ Motion Picture | 1 cm (0.04 feet) (Wide)/ 1 m (3.28 feet) (Tele) to ∞ |
| | Scene Mode | There may be differences in the above settings. |

| | |
|--------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Shutter system | Electronic shutter+Mechanical shutter |
| Burst recording | |
| Burst speed | Approx. 3.7 pictures/second |
| Number of recordable pictures | Max. 7 pictures |
| Hi-speed burst | |
| Burst speed | Approx. 10 pictures/second (Speed priority) Approx. 7 pictures/second (Image priority) [3M (4:3), 2.5M (3:2), 2M (16:9) or 2.5M (1:1) is selected as the picture size.] |
| Number of recordable pictures | Approx. 15 to 100 pictures |
| Minimum Illumination | Approx. 9 lx (when i-low light is used, the shutter speed is 1/30th of a second) |
| Shutter speed | |
| Still picture | 60 seconds to 1/2000th of a second [STARRY SKY] Mode: 15 seconds, 30 seconds, 60 seconds |
| Motion pictures | 1/30 to 1/20000th of a second Creative Video Mode (Manual Exposure/Manual Focus): 1/8 to 1/20000th of a second |

| | | |
|-----------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|----------|
| Exposure (AE) | Program AE (P)/Aperture-Priority AE (A)/ Shutter-Priority AE (S)/Manual Exposure (M) Exposure compensation (1/3 EV Step, -3 EV to +3 EV) | |
| Metering mode | Multiple/Center weighted/Spot | |
| LCD monitor | 3.0" TFT LCD (3:2) (Approx. 461,000 dots) (field of view ratio about 100%) | |
| Viewfinder | Color LCD Viewfinder (Approx. 202,000 dots) (field of view ratio about 100%) (with diopter adjustment -4 to +4 diopter) | |
| Flash | Built-in pop up flash | |
| | Flash range: Approx. 30 cm (0.99 feet) to 9.5 m (31.16 feet) (Wide, [ISO AUTO] is set) | |
| Microphone | Stereo | |
| Speaker | Monaural | |
| Recording media | Built-in Memory (Approx. 70 MB)/SD Memory Card/ SDHC Memory Card/SDXC Memory Card | |
| Recording file format | | |
| Still Picture | JPEG (based on "Design rule for Camera File system", based on "Exif 2.3" standard, DPOF corresponding)/ MPO | |
| Motion pictures | AVCHD/MP4 | |
| Audio compression | AVCHD | AC3/2 ch |
| | MP4 | AAC/2 ch |
| Interface | | |
| Digital | "USB 2.0" (High Speed) | |
| Analog video Audio | NTSC Audio line output (monaural) | |

| | |
|----------------------------------------------------------|-----------------------------------------------------------------------------------------------------|
| Terminal | |
| [AV OUT/ DIGITAL] | Dedicated jack (8 pin) |
| [HDMI] | MiniHDMI TypeC |
| Dimensions (excluding the projecting parts) | Approx. 120.3 mm (W)×79.8 mm (H)×91.9 mm (D) [4.74"(W)×3.14"(H)×3.62"(D)] |
| Mass (weight) | Approx. 498 g/1.10 lb (with card and battery) Approx. 454 g/1.00 lb (excluding card and battery) |
| Operating temperature | 0 °C to 40 °C (32 °F to 104 °F) |
| Operating humidity | 10%RH to 80%RH |
| Language select | [ENGLISH]/[ESPAÑOL] |

Battery Charger (Panasonic DE-A83B):

Information for your safety

| | |
|----------------|------------------------------------|
| Input: | ~ 110 V to 240 V, 50/60 Hz, 0.15 A |
| Output: | === 8.4 V, 0.43 A |

Equipment mobility:

Movable

Battery Pack (lithium-ion) (Panasonic DMW-BMB9PP):

Information for your safety

| | |
|--------------------------|---------------|
| Voltage/capacity: | 7.2 V/895 mAh |
|--------------------------|---------------|

Digital Camera Accessory System

| Description | Accessory# |
|------------------------------------|----------------------|
| Lithium Ion Battery | DMW-BMB9 |
| AC Adaptor* ¹ | DMW-AC8 |
| DC Coupler* ¹ | DMW-DCC6 |
| MC Protector | DMW-LMC52 |
| ND Filter | DMW-LND52 |
| PL Filter (Circular Type) | DMW-LPL52 |
| Tele Conversion Lens* ² | DMW-LT55 |
| Close-up Lens* ² | DMW-LC55 |
| Lens Adapter | DMW-LA5 |
| AV Cable | DMW-AVC1 |
| HDMI mini Cable | RP-CDHM15, RP-CDHM30 |
| Class 10 64 GB SDXC Memory Card | RP-SDU64GE1K |
| Class 10 32 GB SDHC Memory Card | RP-SDU32GU1K |
| Class 10 16 GB SDHC Memory Card | RP-SDU16GU1K |
| Class 10 8 GB SDHC Memory Card | RP-SDU08GU1K |
| Class 10 4 GB SDHC Memory Card | RP-SDU04GU1K |
| Class 4 16 GB SDHC Memory Card | RP-SDL16GU1K |
| Class 4 8 GB SDHC Memory Card | RP-SDL08GU1K |
| Class 4 4 GB SDHC Memory Card | RP-SDL04GU1K |
| Class 4 2 GB SD Memory Card | RP-SDL02GU1K |

Product numbers correct as of August 2011. These may be subject to change.

*1 The AC Adaptor (optional) can only be used with the designated Panasonic DC Coupler (optional). The AC adaptor (optional) cannot be used by itself.

*2 The lens adapter (optional) is necessary to attach a tele conversion lens or close-up lens.

•NOTE: Accessories and/or model numbers may vary between countries. Consult your local dealer.

Digital Camera Accessory Order Form

Please photocopy this form when placing an order.

1. Digital Camera Model # _____

2. Items Ordered

| Accessory # | Description | Price Each | Quantity | Total Price |
|------------------------------|-------------|------------|----------|-------------|
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| Subtotal | | | | |
| Your State & Local Sales Tax | | | | |
| Shipping & Handling | | | | 6.95 |
| Total Enclosed | | | | |

3. Method of payment (check one)

- Check of Money Order enclosed (NO C.O.D.SHIPMENTS)
- VISA Credit Card # _____
- MasterCard Expiration Date _____
- Discover Customer Signature _____

Make Check or Money Order to: PANASONIC ACCESSORIES

(Please do not send cash)

4. Shipping information (UPS delivery requires complete street address)

Ship To:

Mr.

Mrs.

Ms.

First _____ Last _____

Phone#:

Day () _____

Street Address _____

Night () _____

City _____ State _____ Zip _____

TO OBTAIN ANY OF OUR DIGITAL CAMERA ACCESSORIES YOU CAN DO ANY OF THE FOLLOWING:

VISIT YOUR LOCAL PANASONIC DEALER

OR

CALL PANASONIC'S ACCESSORY ORDER LINE AT 1-800-332-5368

[6 AM-6 PM M-F, PACIFIC TIME]

OR

MAIL THIS ORDER TO: PANASONIC SERVICE AND TECHNOLOGY COMPANY
ACCESSORY ORDER OFFICE

20421 84th Avenue South Kent, WA. 98032

Limited Warranty (ONLY FOR U.S.A. AND PUERTO RICO)

**Panasonic Consumer Electronics Company,
Division of Panasonic Corporation of North America**
One Panasonic Way, Secaucus, New Jersey 07094

Panasonic Digital Still Camera Products Limited Warranty

Limited Warranty Coverage (For USA and Puerto Rico Only)

If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Company (referred to as “the warrantor”) will, for the length of the period indicated on the chart below, which starts with the date of original purchase (“warranty period”), at its option either (a) repair your product with new or refurbished parts, (b) replace it with a new or a refurbished equivalent value product, or (c) refund your purchase price. The decision to repair, replace or refund will be made by the warrantor.

| Product or Part Name | Parts | Labor |
|-----------------------------------------------------------------|----------|----------------|
| Digital Still Camera | 1 year | 1 year |
| CCD | 6 months | 90 days |
| SD Memory Cards, Rechargeable Battery Pack (defective exchange) | 90 days | Not Applicable |

During the “Labor” warranty period there will be no charge for labor. During the “Parts” warranty period, there will be no charge for parts. This Limited Warranty excludes both parts and labor for non-rechargeable batteries, antennas, and cosmetic parts (cabinet). This warranty only applies to products purchased and serviced in the United States or Puerto Rico. This warranty is extended only to the original purchaser of a new product which was not sold “as is”.

Mail-In Service

For assistance in the U.S.A. and Puerto Rico in obtaining repairs, please ship the product prepaid to:

Panasonic Exchange Center
4900 George McVay Drive
Suite B
McAllen, TX 78503
panacare@us.panasonic.com

When shipping the unit, carefully pack, include all accessories, and send it prepaid, adequately insured and preferably in the original carton.

When shipping Lithium Ion batteries please visit our Web Site at www.panasonic.com/BatteryHandling as Panasonic is committed to providing the most up to date information. Include a letter detailing the complaint, a return address and provide a daytime phone number where you can be reached. A valid registered receipt is required under the Limited Warranty.

IF REPAIR IS NEEDED DURING THE WARRANTY PERIOD, THE PURCHASER WILL BE REQUIRED TO FURNISH A SALES RECEIPT/PROOF OF PURCHASE INDICATING DATE OF PURCHASE, AMOUNT PAID AND PLACE OF PURCHASE. CUSTOMER WILL BE CHARGED FOR THE REPAIR OF ANY UNIT RECEIVED WITHOUT SUCH PROOF OF PURCHASE.

Limited Warranty Limits And Exclusions

This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, introduction of sand, humidity or liquids, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a Factory Service Center or other Authorized Servicer, or damage that is attributable to acts of God.

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER “LIMITED WARRANTY COVERAGE”.

THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY.

(As examples, this excludes damages for lost time, travel to and from the servicer, loss of or damage to media or images, data or other memory or recorded content. The items listed are not exclusive, but for illustration only.)

ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Service Center. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

PARTS AND SERVICE, WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY, ARE YOUR RESPONSIBILITY.

Customer Services Directory (United States and Puerto Rico)

Obtain Product Information and Operating Assistance; locate your nearest Dealer or Service Center; purchase Parts and Accessories; or make Customer Service and Literature requests by visiting our Web Site at:

<http://www.panasonic.com/help>

or, contact us via the web at:

<http://www.panasonic.com/contactinfo>

You may also contact us directly at:

1-800-211-PANA (7262)

Monday-Friday 9am-9pm, Saturday-Sunday 10am-7pm EST

For hearing or speech impaired TTY users, TTY: 1-877-833-8855

Accessory Purchases (United States and Puerto Rico)

Purchase Parts, Accessories and Instruction Books online for all Panasonic Products by visiting our Web Site at:

<http://www.pstc.panasonic.com>

Or, send your request by E-mail to:

npcparts@us.panasonic.com

You may also contact us directly at:

1-800-332-5368 (Phone) 1-800-237-9080 (Fax Only)

(Monday-Friday 9am-9pm EST)

Panasonic Service and Technology Company

20421 84th Avenue South, Kent, WA 98032

(We accept Visa, MasterCard, Discover Card, American Express, and Personal Checks)

For hearing or speech impaired TTY users, TTY: 1-866-605-1277

As of December 2010

- SDXC Logo is a trademark of SD-3C, LLC.
- The "AVCHD" and the "AVCHD" logo are trademarks of Panasonic Corporation and Sony Corporation.
- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.
- VIERA Link™ is a trademark of Panasonic Corporation.
- EZ Sync™ is a trademark of Panasonic Corporation.
- HDAVI Control™ is a trademark of Panasonic Corporation.
- QuickTime and the QuickTime logo are trademarks or registered trademarks of Apple Inc., used under license therefrom.
- Mac and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries.
- Windows and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Other names of systems and products mentioned in these instructions are usually the registered trademarks or trademarks of the manufacturers who developed the system or product concerned.

This product is licensed under the AVC patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC Standard ("AVC Video") and/or (ii) decode AVC Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

AVCHD™

HDMI

VIERA Link™

DOLBY

DIGITAL
STEREO CREATOR



Panasonic Consumer Electronics Company,
Division of Panasonic Corporation of North America
One Panasonic Way, Secaucus, NJ 07094

© Panasonic Corporation 2011

Printed in Japan