



iPhone

User Guide

For iOS 5.1 Software

Contents

9	Chapter 1: iPhone at a Glance
9	iPhone overview
9	Accessories
10	Buttons
12	Status icons
14	Chapter 2: Getting Started
14	Viewing this user guide on iPhone
14	What you need
14	Installing the SIM card
15	Setup and activation
15	Connecting iPhone to your computer
15	Connecting to the Internet
16	Setting up mail and other accounts
16	Managing content on your iOS devices
16	iCloud
18	Syncing with iTunes
19	Chapter 3: Basics
19	Using apps
22	Customizing the Home screen
24	Typing
27	Dictation
28	Printing
29	Searching
30	Voice Control
31	Notifications
32	Twitter
33	Apple Earphones with Remote and Mic
34	AirPlay
34	Bluetooth devices
35	Battery
37	Security features
38	Cleaning iPhone
38	Restarting or resetting iPhone
39	Chapter 4: Siri
39	What is Siri?
40	Using Siri
43	Correcting Siri
44	Siri and apps
55	Dictation

56	Chapter 5: Phone
56	Phone calls
60	FaceTime
61	Visual voicemail
62	Contacts
63	Favorites
63	Call forwarding, call waiting, and caller ID
64	Ringtones, Ring/Silent switch, and vibrate
64	International calls
65	Setting options for Phone
66	Chapter 6: Mail
66	Checking and reading email
67	Working with multiple accounts
67	Sending mail
68	Using links and detected data
68	Viewing attachments
68	Printing messages and attachments
69	Organizing mail
69	Searching mail
69	Mail accounts and settings
72	Chapter 7: Safari
72	Viewing webpages
73	Links
73	Reading List
73	Reader
73	Entering text and filling out forms
74	Searching
74	Bookmarks and history
74	Printing webpages, PDFs, and other documents
74	Web clips
75	Chapter 8: Music
75	Adding music and audio
75	Playing songs and other audio
77	Additional audio controls
77	Podcast and audiobook controls
78	Using Siri or Voice Control with Music
78	Browsing album artwork in Cover Flow
78	Viewing tracks on an album
79	Searching audio content
79	iTunes Match
79	Genius
80	Playlists
81	Home Sharing
82	Chapter 9: Messages
82	Sending and receiving messages
83	Sending messages to a group
83	Sending photos, videos, and more

84	Editing conversations
84	Searching messages
85	Chapter 10: Calendar
85	About Calendar
85	Viewing your calendars
86	Adding events
86	Responding to invitations
86	Searching calendars
87	Subscribing to calendars
87	Importing calendar events from Mail
87	Calendar accounts and settings
88	Chapter 11: Photos
88	Viewing photos and videos
89	Viewing slideshows
89	Organizing photos and videos
89	Sharing photos and videos
90	Printing photos
91	Chapter 12: Camera
91	About Camera
92	Taking photos and videos
92	HDR photos
93	Viewing, sharing, and printing
93	Editing photos
93	Trimming videos
94	Uploading photos and videos to your computer
94	Photo Stream
95	Chapter 13: YouTube
95	About YouTube
95	Browsing and searching for videos
96	Playing videos
96	Keeping track of videos you like
97	Sharing videos, comments, and ratings
97	Getting information about a video
97	Sending videos to YouTube
98	Chapter 14: Stocks
98	Viewing stock quotes
99	Getting more information
100	Chapter 15: Maps
100	Finding locations
101	Getting directions
102	Getting and sharing info about a location
102	Showing traffic conditions
103	Map views
104	Chapter 16: Weather
104	Getting weather information

105	Chapter 17: Notes
105	About Notes
105	Writing notes
106	Reading and editing notes
106	Searching notes
106	Printing or emailing notes
107	Chapter 18: Clock
107	About Clock
107	Setting world clocks
108	Setting alarms
108	Using the stopwatch
108	Setting a timer
109	Chapter 19: Reminders
109	About Reminders
110	Setting a reminder
110	Managing reminders in List view
111	Managing reminders in Date view
111	About location reminders
111	Managing completed reminders
111	Searching reminders
112	Chapter 20: Game Center
112	About Game Center
113	Signing in to Game Center
113	Purchasing and downloading games
113	Playing games
113	Playing with friends
114	Game Center settings
115	Chapter 21: iTunes Store
115	About the iTunes Store
115	Finding music, videos, and more
116	Purchasing music, audiobooks, and tones
116	Purchasing or renting videos
116	Following artists and friends
117	Streaming or downloading podcasts
117	Checking download status
118	Changing the browse buttons
118	Viewing account information
118	Verifying downloads
119	Chapter 22: Newsstand
119	About Newsstand
119	Reading the latest issues
120	Chapter 23: App Store
120	About the App Store
121	Finding and downloading apps
121	Deleting apps
122	Store settings

123	Chapter 24: Contacts
123	About Contacts
123	Syncing contacts
124	Searching contacts
124	Adding and editing contacts
125	Unified contacts
125	Contacts accounts and settings
126	Chapter 25: Videos
126	About Videos
126	Playing videos
127	Searching for videos
127	Watching rented movies
127	Watching videos on a TV
128	Deleting videos from iPhone
128	Using Home Sharing
128	Setting a sleep timer
129	Converting videos for iPhone
130	Chapter 26: Calculator
130	Using the calculator
130	Scientific calculator
131	Chapter 27: Compass
131	About Compass
131	Calibrating the compass
132	Finding the direction
132	Using Compass with Maps
133	Chapter 28: Voice Memos
133	About Voice Memos
133	Recording
134	Listening to a recording
134	Managing and sharing recordings
134	Sharing voice memos with your computer
135	Chapter 29: Nike + iPod
135	About Nike + iPod
135	Activating Nike + iPod
135	Linking a sensor
136	Working out with Nike + iPod
136	Calibrating Nike + iPod
136	Sending workout data to nikeplus.com
137	Chapter 30: iBooks
137	About iBooks
137	Using the iBookstore
138	Syncing books and PDFs
138	Reading books
140	Changing a book's appearance
140	Printing or emailing a PDF
140	Organizing the bookshelf


142	Chapter 31: Accessibility
142	Universal Access features
143	VoiceOver
152	Routing the audio of incoming calls
153	Siri
153	Triple-click Home
153	Zoom
153	Large Text
154	White on Black
154	Speak Selection
154	Speak Auto-text
154	Mono Audio
154	Hearing aid compatibility
155	Custom Vibrations
155	LED Flash for Alerts
155	AssistiveTouch
156	Universal Access in OS X
156	TTY support
156	Minimum font size for mail messages
156	Assignable ringtones
156	Visual voicemail
156	Widescreen keyboards
157	Large phone keypad
157	Voice Control
157	Closed captioning
158	Chapter 32: Settings
158	Airplane mode
158	Wi-Fi
159	Notifications
160	Location Services
160	VPN
160	Personal Hotspot
161	Carrier
161	Sounds and the Ring/Silent switch
162	Brightness
162	Wallpaper
162	General
168	Settings for apps
169	Appendix A: International Keyboards
169	Adding and removing keyboards
169	Switching keyboards
169	Chinese
171	Japanese
171	Typing emoji characters
171	Using the candidate list
171	Using shortcuts
172	Vietnamese

173	Appendix B: Support and Other Information
173	iPhone Support site
173	Restarting or resetting iPhone
173	Backing up iPhone
175	Updating and restoring iPhone software
175	File sharing
175	Safety, software, and service information
176	Using iPhone in an enterprise environment
176	Using iPhone with other carriers
176	Disposal and recycling information
177	Apple and the environment
178	iPhone operating temperature

iPhone at a Glance

1


iPhone overview

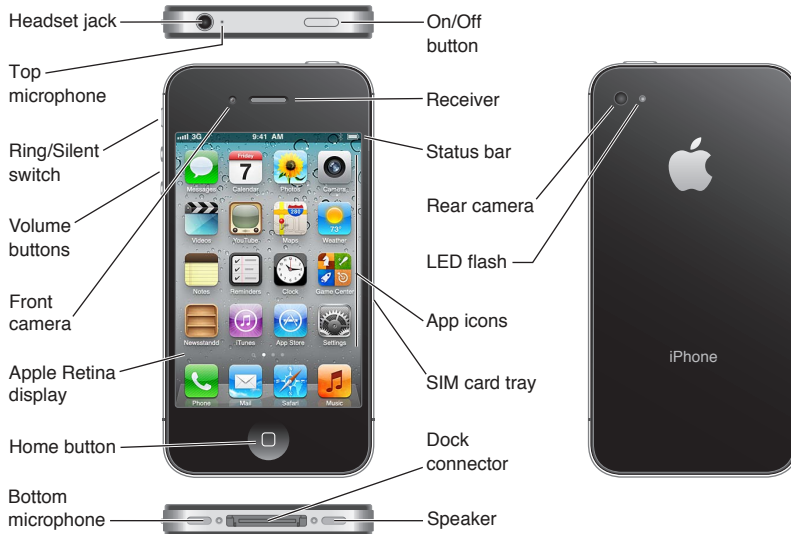

Your iPhone features and the Home screen may be different, depending on the model of iPhone you have and whether you've customized your Home screen.

Accessories

The following accessories are included with iPhone:

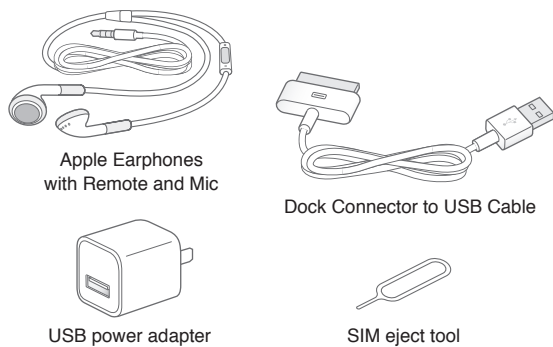

Item	What you can do with it
Apple Earphones with Remote and Mic	Listen to music and videos, and make phone calls. See “Apple Earphones with Remote and Mic” on page 33.
Dock Connector to USB Cable	Use this cable to connect iPhone to your computer to sync and charge. The cable can be used with the optional dock or plugged directly into iPhone.
USB power adapter	Connect the power adapter to iPhone using the included cable, then plug it into a standard power outlet to charge iPhone.
SIM eject tool (not included in all areas)	Eject the SIM card tray.

Buttons


On/Off button





When you're not using iPhone, you can lock it to turn off the display and save the battery.

Lock iPhone: Press the On/Off button.

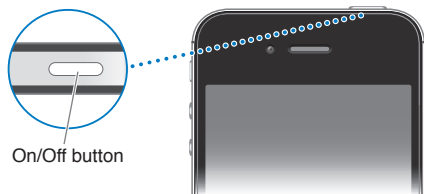When iPhone is locked, nothing happens if you touch the screen. iPhone can still receive calls, text messages, and other updates. You can also:


- Listen to music
- Adjust the volume using the buttons on the side of iPhone (or on the iPhone earphones) while you're on a phone call or listening to music
- Use the center button on iPhone earphones to answer or end a call, or to control audio playback (see “Playing songs and other audio” on page 75)



Unlock iPhone	Press the Home button  or the On/Off button, then drag the slider.
Open Camera when iPhone is locked	Press the Home button  or the On/Off button, then drag  up.
Access the audio controls when iPhone is locked	Double-click the Home button  .
Turn iPhone off	Press and hold the On/Off button for a few seconds until the red slider appears, then drag the slider.
Turn iPhone on	Press and hold the On/Off button until the Apple logo appears.





By default, if you don't touch the screen for a minute, iPhone locks automatically. To turn auto-lock off, or to change how long before iPhone locks, see “Auto-Lock” on page 165. To require a passcode to unlock iPhone, see “Passcode Lock” on page 165.

Home button

The Home button  lets you get back to the Home screen at any time. It also provides other convenient shortcuts.

Go to the Home screen: Press the Home button .


At the Home screen, just a tap opens an app. See “Opening and switching apps” on page 19.

Display the multitasking bar to see recently used apps	With iPhone unlocked, double-click the Home button 
Display audio playback controls	<i>When iPhone is locked:</i> Double-click the Home button  . See “Playing songs and other audio” on page 75. <i>When using another app:</i> Double-click the Home button  , then flick the app switcher from left to right.
Start Siri (iPhone 4S) or Voice Control	Press and hold the Home button  . See Chapter 4, “Siri,” on page 39 and “Voice Control” on page 30.

Volume buttons

When you’re on the phone or listening to songs, movies, or other media, the buttons on the side of iPhone adjust the audio volume. Otherwise, the buttons control the volume for the ringer, alerts, and other sound effects.

WARNING: For important information about avoiding hearing loss, see the *Important Product Information Guide* at www.apple.com/support/manuals/iphone.

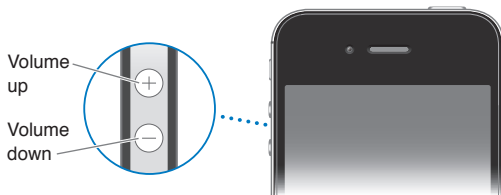


To limit the volume for music and videos, go to Settings > Music.

You can also use the volume up button to take a picture or record a video. See “Taking photos and videos” on page 92.

Ring/Silent switch

Flip the Ring/Silent switch to put iPhone in ring mode  or silent mode .

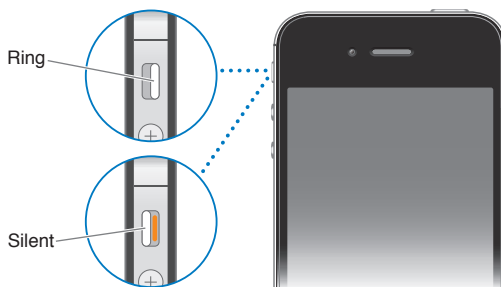











In ring mode, iPhone plays all sounds. In silent mode, iPhone doesn’t ring or play alerts and other sound effects.








Important: Clock alarms, audio apps such as Music, and many games still play sounds through the built-in speaker when iPhone is in silent mode.

For information about changing sound and vibrate settings, see “Sounds and the Ring/Silent switch” on page 161.

Status icons

The icons in the status bar at the top of the screen give information about iPhone:

Status icon		What it means
	Cell signal*	Shows whether you're in range of the cellular network and can make and receive calls. The more bars, the stronger the signal. If there's no signal, the bars are replaced with "No service."
	Airplane mode	Shows that airplane mode is on—you cannot use the phone, access the Internet, or use Bluetooth® devices. Non-wireless features are available. See "Airplane mode" on page 158.
4G	UMTS	Shows that your carrier's 4G UMTS (GSM) network is available, and iPhone can connect to the Internet over that network. (iPhone 4S only. Not available in all areas.) See "Network" on page 163.
3G	UMTS/EV-DO	Shows that your carrier's 3G UMTS (GSM) or EV-DO (CDMA) network is available, and iPhone can connect to the Internet over that network. See "Network" on page 163.
E	EDGE	Shows that your carrier's EDGE (GSM) network is available, and iPhone can connect to the Internet over that network. See "Network" on page 163.
	GPRS/1xRTT	Shows that your carrier's GPRS (GSM) or 1xRTT (CDMA) network is available, and iPhone can connect to the Internet over that network. See "Network" on page 163.
	Wi-Fi*	Shows that iPhone is connected to the Internet over a Wi-Fi network. The more bars, the stronger the connection. See "Wi-Fi" on page 158.
	Personal Hotspot	Shows that iPhone is connected to another iPhone providing a Personal Hotspot. See "Personal Hotspot" on page 160.
	Syncing	Shows that iPhone is syncing with iTunes.
	Network activity	Shows network activity. Some third-party apps may also use the icon to show an active process.
	Call Forwarding	Shows that Call Forwarding is set up on iPhone. See "Call forwarding" on page 63.
VPN	VPN	Shows that you're connected to a network using VPN. See "Network" on page 163.
	Lock	Shows that iPhone is locked. See "On/Off button" on page 10.
	TTY	Shows that iPhone is set to work with a TTY machine. See "TTY support" on page 156.

Status icon		What it means
	Play	Shows that a song, audiobook, or podcast is playing. See "Playing songs and other audio" on page 75.
	Portrait orientation lock	Shows that the iPhone screen is locked in portrait orientation. See "Viewing in portrait or landscape orientation" on page 21.
	Alarm	Shows that an alarm is set. See "Setting alarms" on page 108.
	Location Services	Shows that an item is using Location Services. See "Location Services" on page 160.
	Bluetooth*	<p><i>Blue or white icon:</i> Bluetooth is on and paired with a device.</p> <p><i>Gray icon:</i> Bluetooth is on and paired with a device, but the device is out of range or turned off.</p> <p><i>No icon:</i> Bluetooth is turned off or not paired with a device.</p> <p>See "Bluetooth devices" on page 34.</p>
	Bluetooth battery	Shows the battery level of a supported paired Bluetooth device.
	Battery	Shows battery level or charging status. See "Battery" on page 35.

* The use of certain accessories with iPhone may affect wireless performance.




WARNING: To avoid injury, read all operating instructions in this guide and safety information in the *iPhone Important Product Information Guide* at www.apple.com/support/manuals/iphone before using iPhone.

Viewing this user guide on iPhone

The *iPhone User Guide* can be viewed on iPhone in Safari, and in the free iBooks app.

View the user guide in Safari: Tap , then tap the iPhone User Guide bookmark.

To add an icon for the guide to the Home screen, tap , then tap “Add to Home Screen.” To view it in a different language, tap “Change Language” on the main contents page.

View the user guide in iBooks: If you haven’t installed iBooks, open App Store, then search for and install “iBooks.” Open iBooks and tap Store. Search for “iPhone User,” then select and download the guide.

For more information about iBooks, see Chapter 30, “iBooks,” on page 137.

What you need

To use iPhone, you need:


- A wireless service plan with a carrier that provides iPhone service in your area
- An Apple ID (for some features), which can be created during setup
- A Mac or a PC with a USB 2.0 port and one of the following operating systems:
 - Mac OS X v10.5.8 or later
 - Windows 7, Windows Vista, or Windows XP Home or Professional (SP3)
- An Internet connection for your computer (broadband is recommended)
- iTunes 10.5 or later (for some features), available at www.itunes.com/download

Installing the SIM card

If you were given a SIM card to install, install it before setting up iPhone.

Important: A SIM card is required to use cellular services when connecting to GSM networks and some CDMA networks. An iPhone 4S that has been activated on a CDMA wireless network may also use a SIM card for connecting to a GSM network, primarily for international roaming. Your iPhone is subject to your wireless service provider’s policies, which may include restrictions on switching service providers and roaming, even after conclusion of any required minimum service contract. Contact your wireless service provider for more details. Availability of cellular capabilities depends on the wireless network.

Installing the SIM Card in iPhone 4S

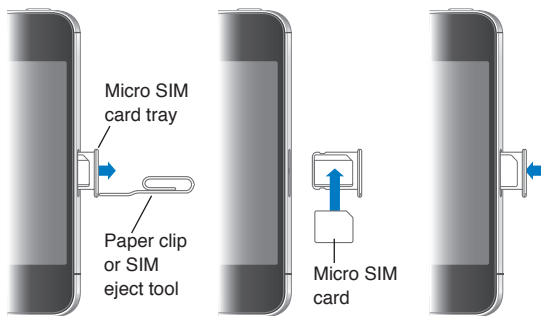

Install the SIM card: Insert the end of a small paper clip or SIM eject tool into the hole on the SIM card tray. Pull out the SIM card tray and place the SIM card in the tray as shown. With the tray aligned and the SIM card on top, carefully replace the tray.

Setup and activation

To set up and activate iPhone, turn on iPhone and follow the Setup Assistant. The Setup Assistant steps you through the setup process, including connecting to a Wi-Fi network, signing in with or creating a free Apple ID, setting up iCloud, turning on recommended features such as Location Services and Find My iPhone, and activating iPhone with your carrier. You can also restore from an iCloud or iTunes backup during setup.

Activation can be done over a Wi-Fi network or, with iPhone 4S, over your carrier's cellular network (not available in all areas). If neither option is available, you need to connect iPhone to your computer for activation.

Connecting iPhone to your computer

If you don't have Wi-Fi or cellular access, you may need to connect iPhone to your computer in order to complete activation. Connecting iPhone to your computer also lets you sync information, music, and other content with iTunes. See "Syncing with iTunes" on page 18.

Connect iPhone to your computer: Use the Dock Connector to USB Cable provided with iPhone.



Connecting to the Internet

iPhone connects to the Internet whenever necessary, using a Wi-Fi connection (if available) or your carrier's cellular network. For information about connecting to a Wi-Fi network, see "Wi-Fi" on page 158.

Note: If a Wi-Fi connection to the Internet isn't available, certain iPhone features and services may transfer data over your carrier's cellular network, which may result in additional fees. Contact your carrier for information about your cellular data plan rates. To manage cellular data usage, see "Network" on page 163.

Setting up mail and other accounts

iPhone works with iCloud, Microsoft Exchange, and many of the most popular Internet-based mail, contacts, and calendar service providers.

If you don't already have a mail account, you can set up a free iCloud account when you first set up iPhone, or later in Settings > iCloud. See "iCloud" on page 16.

Set up an iCloud account: Go to Settings > iCloud.

Set up some other account: Go to Settings > Mail, Contacts, Calendars.

You can add contacts using an LDAP or CardDAV account, if your company or organization supports it. See "Syncing contacts" on page 123.

You can add a CalDAV calendar account, and you can subscribe to iCal (.ics) calendars or import them from Mail. See "Subscribing to calendars" on page 87.

Managing content on your iOS devices

You can transfer information and files between your iOS devices and computers using either iCloud or iTunes.

- *iCloud* stores content such as music, photos, and more, and wirelessly pushes it to your other iOS devices and computers, keeping everything up to date. See "iCloud" below.
- *iTunes* syncs music, video, photos, and more between your computer and iPhone. Changes you make on one device are copied to the other when you sync. You can also use iTunes to copy a file to iPhone for use with an app, or to copy a document you've created on iPhone to your computer. See "Syncing with iTunes" on page 18.

You can use iCloud or iTunes, or both, depending on your needs. For example, you can use iCloud Photo Stream to automatically get photos you take on iPhone to your other devices, and use iTunes to sync photo albums from your computer to iPhone.

Note: You should not sync items on the Info pane of iTunes (such as contacts, calendars, and notes) and also use iCloud to keep that information up to date on your devices. Otherwise, duplicated data may result.

iCloud

iCloud stores your content, including music, photos, contacts, calendars, and supported documents. Content stored in iCloud is pushed wirelessly to your other iOS devices and computers set up with the same iCloud account.

iCloud is available on iOS 5 devices, on Macs running OS X Lion v10.7.2 or later, and on PCs with the iCloud Control Panel for Windows (Windows Vista Service Pack 2 or Windows 7 required).

iCloud features include:

- *iTunes in the Cloud*—Download previous iTunes music and TV show purchases to iPhone for free, anytime you like.
- *Apps and Books*—Download previous App Store and iBookstore purchases to iPhone for free, anytime you like.
- *Photo Stream*—Photos you take on one device appear automatically on all your devices. See "Photo Stream" on page 94.
- *Documents in the Cloud*—For iCloud-enabled apps, keep documents and app data up to date across all your devices.

- *Mail, Contacts, Calendars*—Keep your mail contacts, calendars, notes, and reminders up to date across all your devices.
- *Backup*—Back up iPhone to iCloud automatically when connected to power and Wi-Fi. See “Backing up iPhone” on page 173.
- *Find My iPhone*—Locate your iPhone on a map, display a message, play a sound, lock the screen, or remotely wipe the data. See “Find My iPhone” on page 37.
- *Find My Friends*—Share your location with people who are important to you. Download the free app from the App Store.
- *iTunes Match*—With an iTunes Match subscription, all your music, including music you’ve imported from CDs or purchased somewhere other than iTunes, appears on all of your devices and can be downloaded and played on demand. See “iTunes Match” on page 79.

With iCloud, you get a free email account and 5 GB of storage for your mail, documents, and backups. Your purchased music, apps, TV shows, and books, as well as your Photo Stream, don’t count against your free space.

If you have a MobileMe subscription, you can move it to iCloud from a Mac or PC at www.me.com/move until June 30, 2012.

Note: iCloud is not available in all areas, and iCloud features may vary by area.

Sign in or create an iCloud account: In Settings, tap iCloud.

Enable or disable iCloud services	Go to Settings > iCloud.
Enable iCloud backup	Go to Settings > iCloud > Storage & Backup.
Find your iPhone	Visit www.icloud.com , sign in with your Apple ID, then choose Find My iPhone. <i>Important:</i> On your iPhone, Find My iPhone must be turned on in Settings > iCloud in order for iPhone to be located.
Purchase additional iCloud storage	Go to Settings > iCloud > Storage & Backup, then tap Manage Storage. For information about purchasing iCloud storage, go to help.apple.com/icloud .
View and download previous iTunes Store purchases	Go to iTunes, then tap Purchased.
View and download previous App Store purchases	Go to App Store, tap Updates, then tap Purchased.
View and download previous iBookstore purchases	Go to iBooks, tap Store, then tap Purchased.
Turn on Automatic Downloads for music, apps, or books	Go to Settings > Store.

For more information about iCloud, go to www.apple.com/icloud. For support information, go to www.apple.com/support/icloud.


Syncing with iTunes

Syncing with iTunes copies information from your computer to iPhone, and vice versa. You can sync by connecting iPhone to your computer using the Dock Connector to USB Cable, or you can set up iTunes to sync wirelessly using Wi-Fi. You can set iTunes to sync music, photos, video, podcasts, apps, and more. For information about syncing iPhone with a computer, open iTunes, then select iTunes Help from the Help menu.

Set up wireless iTunes syncing: Connect iPhone to your computer using the Dock Connector to USB Cable. In iTunes, turn on “Sync over Wi-Fi connection” in the device’s Summary pane.


When Wi-Fi syncing is turned on, iPhone syncs automatically every day. iPhone must be connected to a power source, both iPhone and your computer must be on the same wireless network, and iTunes must be open on your computer. For more information, see “iTunes Wi-Fi Sync” on page 164.

Tips for syncing with iTunes

- If you’re using iCloud to store your contacts, calendars, bookmarks, and notes, don’t also sync them to your device using iTunes.
- Purchases you make from the iTunes Store or the App Store on iPhone are synced back to your iTunes library. You can also purchase or download content and apps from the iTunes Store on your computer, and then sync them to iPhone.
- In the device’s Summary pane, you can set iTunes to automatically sync your device when it’s attached to your computer. To temporarily override this setting, hold down Command and Option (Mac) or Shift and Control (PC) until you see your iPhone appear in the sidebar.
- In the device’s Summary pane, select “Encrypt iPhone backup” if you want to encrypt the information stored on your computer when iTunes makes a backup. Encrypted backups are indicated by a lock icon , and a password is required to restore the backup. If you don’t select this option, passwords (such as those for mail accounts) aren’t included in the backup and will have to be reentered if you use the backup to restore the device.
- In the device’s Info pane, when you sync mail accounts, only the settings are transferred from your computer to iPhone. Changes you make to an email account on iPhone don’t affect the account on your computer.
- In the device’s Info pane, click Advanced to select options to let you *replace* the information on iPhone with the information from your computer during the next sync.
- If you listen to part of a podcast or audiobook, your place in the story is included if you sync the content with iTunes. If you started listening to the story on iPhone, you can pick up where you left off using iTunes on your computer—or vice versa.
- In the device’s Photo pane, you can sync photos and videos from a folder on your computer.


Scrolling

Drag up or down to scroll. On some screens such as webpages, you can also scroll side to side.

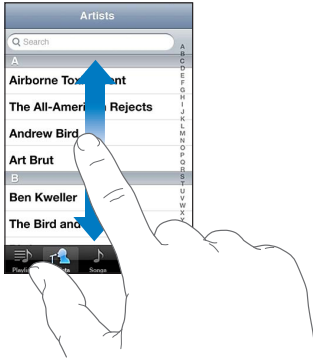


Dragging your finger to scroll won't choose or activate anything on the screen.

Flick to scroll quickly.

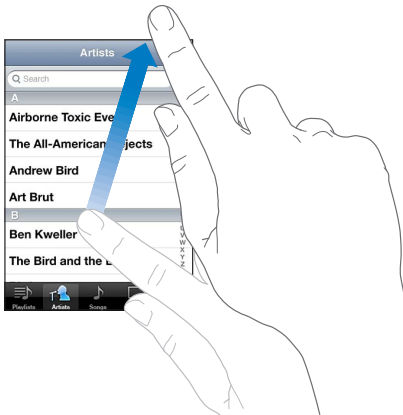

You can wait for the scrolling to come to a stop, or touch the screen to stop it immediately. Touching the screen to stop scrolling won't choose or activate anything.

To quickly scroll to the top of a page, tap the status bar at the top of the screen.

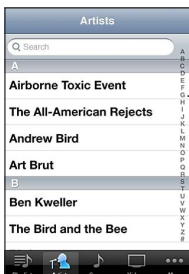

Drag your finger along the index to scroll quickly. Tap a letter to jump to a section.

Tap an item in a list to choose it. Depending on the list, tapping an item can do different things—for example, it may open a new list, play a song, open an email, or show someone's contact information so you can call that person.

Zooming in or out

When viewing photos, webpages, email, or maps, you can zoom in and out. Pinch your fingers together or apart. For photos and webpages, you can double-tap (tap twice quickly) to zoom in, then double-tap again to zoom out. For maps, double-tap to zoom in and tap once with two fingers to zoom out.



Zoom is also an accessibility feature that lets you magnify the screen with any app you're using, to help you see what's on the display. See "Zoom" on page 153.



Viewing in portrait or landscape orientation

Many iPhone apps let you view the screen in either portrait or landscape orientation. Rotate iPhone and the display rotates too, adjusting automatically to fit the new screen orientation.



You may prefer landscape orientation for viewing webpages in Safari, or when entering text, for example. Webpages scale to the wider screen in landscape orientation, making the text and images larger. The onscreen keyboard is also larger.

Movies viewed in Videos and YouTube appear only in landscape orientation. Street views in Maps also appear only in landscape orientation.

Lock the screen in portrait orientation: Double-click the Home button , flick the bottom of the screen from left to right, then tap .




The portrait orientation lock icon  appears in the status bar when the screen orientation is locked.


Customizing the Home screen

Rearranging apps

You can customize the layout of app icons on the Home screen—including the apps in the Dock along the bottom of the screen. If you want, arrange them over multiple Home screens. You can also organize apps by collecting them in folders.

Rearrange icons:

- 1 Touch and hold any app on the Home screen until it begins to jiggle.
- 2 Arrange the apps by dragging them.
- 3 Press the Home button  to save your arrangement.

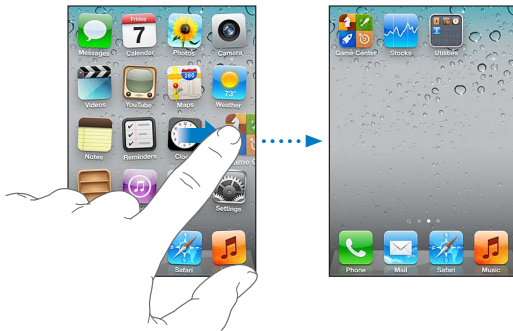

Move an icon to another screen	While arranging apps, drag an app to the side of the screen.
Create additional Home screens	While arranging apps, flick to the rightmost Home screen, then drag an app to the right edge of the screen. You can create up to 11 Home screens.
Reset your Home screen to the default layout	Go to Settings > General > Reset, then tap Reset Home Screen Layout. Resetting the Home screen removes any folders you've created and applies the default wallpaper to your Home screen.

You can add icons on the Home screen to open your favorite webpages. See “Web clips” on page 74.

When iPhone is physically connected to your computer (with the Dock Connector to USB Cable), you can customize your Home screens using iTunes. In iTunes, select iPhone in the Devices list, then click Apps at the top of the screen.

Organizing with folders


Folders let you organize apps on the Home screen. You can put up to 12 apps in a folder. iPhone names a folder automatically when you create it, based on the category of the apps you use to create the folder. You can change the name anytime you want. Like apps, folders can be rearranged by dragging them on the Home screens, or to the Dock.

Create a folder: Touch an app until the Home screen apps begin to jiggle, then drag the app onto another app.




iPhone creates a new folder that includes the two apps, and shows the folder's name. You can tap the name field and enter a different name.



Tap a folder to open it, then you can tap to open an app inside. To close a folder, tap outside the folder, or press the Home button .

While arranging apps:

Add an app to a folder	Drag the app onto the folder.
Remove an app from a folder	Tap to open the folder, then drag the app out of the folder.
Delete a folder	Move all apps out of the folder. The folder is deleted automatically.
Rename a folder	Tap to open the folder, then tap the name at the top and use the keyboard to enter a new name.

When you finish organizing your Home screen, press the Home button  to save your changes.

Adding wallpaper

You can set an image or photo as wallpaper for the Lock screen. You can also set wallpaper for your Home screen. You can choose an image that came with iPhone, a photo from your Camera Roll or other album on iPhone.

Set wallpaper:

- 1 In Settings, choose Wallpaper, tap the image of the Lock and Home screens, then tap Wallpaper or an album.
- 2 Tap to choose an image or photo. If you choose a photo, drag to position it and pinch to zoom in or out, until it looks the way you want.
- 3 Tap Set, then choose whether you want to use the photo as wallpaper for your Lock Screen, Home screen, or both.

Typing

The onscreen keyboard appears anytime you need to type.






Entering text


Use the keyboard to enter text. The keyboard corrects misspellings, predicts what you're typing, and learns as you use it. Depending on the app you're using, the intelligent keyboard may suggest corrections as you type, to help prevent mistyped words.

Type text: Tap a text field to bring up the keyboard, then tap on the keyboard.

As you type, each letter appears above your thumb or finger. If you touch the wrong key, you can slide your finger to the correct key. The letter isn't entered until you release your finger from the key.



Delete the previous character	Tap  .
Type uppercase	Tap the Shift key  before tapping a letter. Or touch and hold the Shift key, then slide to a letter.
Quickly type a period and space	Double-tap the space bar. To turn this feature on or off, go to Settings > General > Keyboard.
Use autocorrection to enter "ll"	Type "lll." For example, type "youlll" to get "you'll."
Turn caps lock on	Double-tap the Shift key  . Tap the Shift key again to turn caps lock off. You can turn this feature on or off in Settings > General > Keyboard.
Enter numbers, punctuation, or symbols	Tap the Number key  . Tap the Symbol key  to see additional punctuation and symbols.
Set options for typing	Go to Settings > General > Keyboard.

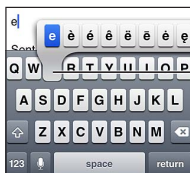

To type an alternate character, touch and hold a key, then slide to choose one of the options.

Auto-correction and spell checking

For many languages, iPhone automatically corrects misspellings or makes suggestions as you type. When iPhone suggests a word, you can accept the suggestion without interrupting your typing.

Note: For a list of supported languages, see www.apple.com/iphone/specs.html.




Accept the suggestion: Type a space, punctuation mark, or return character.

Reject a suggestion: Tap the “x”.

Each time you reject a suggestion for the same word, iPhone becomes more likely to accept the word.

iPhone may also underline words you’ve already typed that might be misspelled.

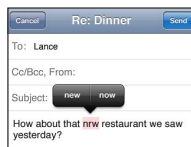

Replace a misspelled word

Tap the word, then tap one of the alternate spellings.
If the word you want doesn’t appear, just retype it.

Turn auto-correction or spell checking on or off

Go to Settings > General > Keyboard.

Shortcuts and your personal dictionary

Shortcuts lets you type just a few characters instead of a longer word or phrase. The expanded text appears whenever you type the shortcut. For example, the shortcut “omw” expands to “On my way!”

Create a shortcut: Go to Settings > General > Keyboard, then tap Add New Shortcut.

Add a word or phrase to your personal dictionary so that iPhone doesn’t try to correct or replace it: Create the shortcut, but leave the Shortcut field blank.


Edit a shortcut

Go to Settings > Keyboard and tap the shortcut.

Editing text

The touchscreen makes it easy to change text you've entered. An onscreen magnifying glass helps you position the insertion point right where you need it. Grab points let you quickly select more or less text. You can also cut, copy, and paste text and photos within apps, or across apps.

Position the insertion point: Touch and hold to bring up the magnifying glass, then drag to position the insertion point.

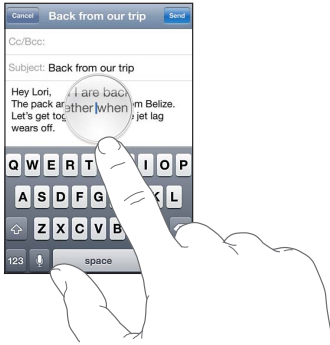

Select text: Tap the insertion point to display the selection buttons.



You can also double-tap to select a word. In read-only documents, such as webpages, or email messages you've received, touch and hold to select a word. Drag the grab points to select more or less text.



Cut or copy text	Select text, then tap Cut or Copy.
Paste text	Tap the insertion point and tap Paste. The last text that you cut or copied is inserted. Or select text and tap Paste to replace the text.
Undo the last edit	Shake iPhone and tap Undo.
Make text bold, italic, or underlined	When available, tap ►, then tap B/I/U.
Get the definition of a word	When available, tap ►, then tap Define.
Get alternative words	When available, tap Suggest, then tap one of the words.

Keyboard layouts

You can use Settings to set the keyboard layouts for software and hardware keyboards. The available layouts depend on the keyboard language.

Select a keyboard layout: Go to Settings > General > Keyboard > International Keyboards, then select a keyboard.


For each language, you can make separate selections for both the onscreen software and any external hardware keyboards. The software keyboard layout determines the layout of the keyboard on the iPhone screen. The hardware keyboard layout determines the layout of an Apple Wireless Keyboard connected to iPhone.

Using an Apple Wireless Keyboard

You can use an Apple Wireless Keyboard (available separately) for typing on iPhone. The Apple Wireless Keyboard connects via Bluetooth. See “Pairing a Bluetooth device with iPhone” on page 34.


Once the keyboard is paired with iPhone, it connects whenever the keyboard is within range (up to 30 feet). You can tell that the keyboard is connected if the onscreen keyboard doesn’t appear when you tap in a text field. To save the battery, turn off or unpair the keyboard when not in use.


Dictation



With dictation, you create and edit text by speaking instead of typing. For example, you can dictate email messages, text messages, and notes. Dictation even works with third-party apps, so you can do things like update your Facebook status, post Tweets, or write and send Instagrams. You can dictate any time the onscreen keyboard appears with the  key.


Note: Turn Siri on in Settings > General > Siri. Dictation is available only on iPhone 4S, and requires Internet access via a cellular or Wi-Fi connection. Dictation may not be available in all languages or in all areas, and features may vary by area. Cellular data charges may apply.

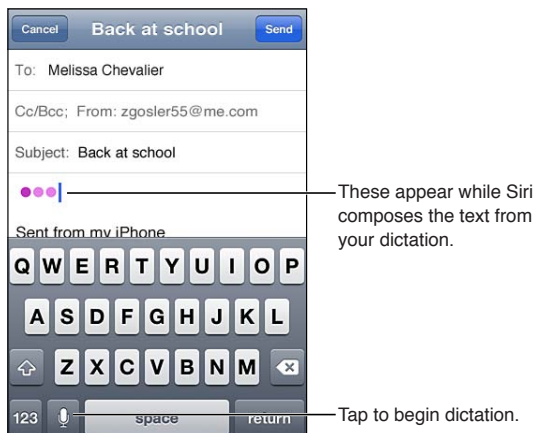Dictate text: Tap  on the keyboard. Tap Done when you finish.



To add text, tap  again and continuing dictating.

You can use dictation to insert a word or replace selected text. Place the insertion point where you want more text, or select the text to replace, then tap  and dictate. To change a word, double-tap the word to select it, tap , then say the word you want.

You can bring iPhone to your ear to start dictation, instead of tapping  on the keyboard. To finish, move iPhone back down in front of you.

Add punctuation: Say the punctuation.

For example, “Dear Mary comma the check is in the mail exclamation mark” results in “Dear Mary, the check is in the mail!”

Printing

AirPrint

AirPrint lets you print wirelessly to AirPrint-enabled printers. You can print from:




- Mail—email messages and attachments that can be viewed in Quick Look
- Photos and Camera—photos
- Safari—webpages, PDFs, and other attachments that can be viewed in Quick Look
- iBooks—PDFs
- Maps—view of map showing on the screen
- Notes—currently displayed note

Other apps available from the App Store may also support AirPrint.

An AirPrint-enabled printer doesn't need setup—just connect it to the same Wi-Fi network as iPhone. For more information, go to support.apple.com/kb/HT4356.

Printing a document

AirPrint uses your Wi-Fi network to send print jobs wirelessly to your printer. iPhone and the printer must be on the same Wi-Fi network.

Print a document: Tap , , or  (depending on the app you're using), then tap Print. Select a printer and printing options, then tap Print.

See the status of a print job


Double-click the Home button , then tap Print Center.



The Print Center app appears as the most recent app when a document is printing. A badge on the app shows how many documents are queued for printing.

If you're printing more than one document, select a print job to see its status summary.


Cancel a print job

Double-click the Home button , tap Print Center, select the print job (if you're printing more than one document), then tap Cancel Printing.

Searching

You can search many apps on iPhone, including Contacts, Mail, Calendar, Music, Messages, Notes, and Reminders. You can search an individual app, or all apps at once.



Search iPhone: Go to the Search screen. (From the first Home screen, flick right or press the Home button ) Enter text in the Search field.

Search results appear as you type. Tap an item in the list to open it. Tap Search to dismiss the keyboard and see more results.

Icons next to the search results show which app the results are from.

iPhone may display a top hit for you, based on your previous searches. Safari search results include options to search the web or to search Wikipedia.

App	What's searched
Contacts	First, last, and company names
Mail	To, From, and Subject fields and the messages of all accounts
Calendar	Event titles, invitees, locations, and notes
Music	Music (names of songs, artists, and albums) and the titles of podcasts, videos, and audiobooks
Messages	Names and text of messages
Notes	Text of notes
Reminders	Titles

Search also searches the names of the native and installed apps on iPhone, so if you have a lot of apps, you may want to use Search to locate and open apps.

Open apps from Search	Enter the app name, then tap to open the app directly from the search results.
-----------------------	--

Use the Spotlight Search setting to specify which contents are searched and the order the results are presented in. See "Spotlight Search" on page 165.

Voice Control

Voice Control lets you make phone calls and control music playback using voice commands. On iPhone 4S, you can also use Siri to control iPhone by voice. See Chapter 4, “Siri,” on page 39.

Note: Voice Control may not be available in all languages. Voice Control is not available on iPhone 4S when Siri is turned on.



Use Voice Control: Press and hold the Home button until the Voice Control screen appears and you hear a beep. You can also press and hold the center button on the iPhone earphones.

For best results:

- Speak into the iPhone microphone as if you were making a phone call. You can also use the microphone on your Bluetooth headset or compatible Bluetooth car kit.
- Speak clearly and naturally.
- Say only iPhone commands and names, and numbers. Pause slightly between commands.
- Use full names.

For more about using Voice Control, including information about using Voice Control in different languages, go to support.apple.com/kb/HT3597.

Voice Control normally expects you to speak voice commands in the language that’s set for iPhone (go to Settings > General > International > Language). Voice Control settings let you change the language for speaking voice commands. Some languages are available in different dialects or accents.

Change the language or country: Go to Settings > General > International > Voice Control and tap the language or country.

Voice Control for the Music app is always on, but for better security you can prevent voice dialing when iPhone is locked.

Prevent voice dialing when iPhone is locked: Go to Settings > General > Passcode Lock and turn Voice Dial off. Unlock iPhone to use voice dialing.

See “Voice dialing” on page 57 and “Using Siri or Voice Control with Music” on page 78.

Notifications

Notification Center displays all your alerts in one place, including alerts about:

- Missed phone calls and voice messages
- New email
- New text messages
- Reminders
- Calendar events
- Friend requests (Game Center)
- Weather
- Stocks


Show Notification Center: Drag down from the top of the screen. Scroll the list to see additional alerts.



Alerts also appear on the lock screen, or briefly at the top of the screen when you're using iPhone. You can see all current alerts in Notification Center.

Many apps, such as Phone, Messages, Mail, and the App Store, can display an alert badge on their Home screen icon with a number (to indicate incoming items) or an exclamation mark (to indicate a problem). If these apps are contained in a folder, the badge appears on the folder. A badge with a number shows the total number of items you haven't attended to, such as incoming phone calls, email messages, text messages, and updated apps to download. A badge with an exclamation mark indicates a problem with an app.



Respond to an alert in Notification Center	Tap the alert.
Respond to an alert on the lock screen	Swipe the icon displayed in the alert to the right.
Remove alerts from Notification Center	Tap  , then tap Clear.
Set options for notifications	Go to Settings > Notifications.

Twitter

Sign in to your Twitter account (or create a new account) in Settings to enable Tweets with attachments from the following apps:





- Camera or Photos—with a photo
- Safari—with a webpage
- Maps—with a location
- YouTube—with a video

Sign in to or create a Twitter account: Go to Settings > Twitter. Enter the user name and password for an existing account, or tap Create New Account.



In Camera or Photos, tap the Action button to tweet a photo.

Tweet a photo.

Tweet a photo, video, or webpage	View the item, tap  , then tap Tweet. If  isn't showing, tap the screen. To include your location, tap Add Location. Location Services must be on in Settings > Location Services.
Tweet a location in Maps	Tap the location pin, tap  , tap Share Location, then tap Tweet.
Add your current location to a Tweet	Tap  . Location Services must be turned on in Settings > Location Services.
Add Twitter user names and photos to your contacts	Go to Settings > Twitter, then tap Update Contacts.
Turn Twitter on or off for Photos or Safari	Go to Settings > Twitter.

When you write a Tweet, the number in the lower-right corner of the Tweet screen shows the number of characters remaining that you can enter. Attachments use some of a Tweet's 140 characters.


You can also install and use the Twitter app to post a Tweet, view your timeline, search for trending topics, and more.

Install the Twitter app: Go to Settings > Twitter, then tap Install.

To learn how to use the Twitter app, open the app, tap the More button (...), tap Accounts & Settings, tap Settings, then tap Manual.

Apple Earphones with Remote and Mic

The Apple Earphones with Remote and Mic included with iPhone feature a microphone, volume buttons, and an integrated button that allows you to answer and end calls easily, and control audio and video playback.

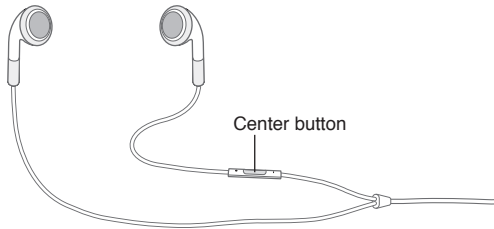


Plug in the earphones to listen to music or make a phone call. Press the center button to control music playback and answer or end calls, even when iPhone is locked.

Pause a song or video	Press the center button. Press again to resume playback.
Skip to the next song	Press the center button twice quickly.
Return to previous song	Press the center button three times quickly.
Fast-forward	Press the center button twice quickly and hold.
Rewind	Press the center button three times quickly and hold.
Adjust the volume	Press the + or – button.
Answer an incoming call	Press the center button.
End the current call	Press the center button.
Decline an incoming call	Press and hold the center button for about two seconds, then let go. Two low beeps confirm you declined the call.
Switch to an incoming or on-hold call and put the current call on hold	Press the center button. Press again to switch back to the first call.
Switch to an incoming or on-hold call and end the current call	Press and hold the center button for about two seconds, then let go. Two low beeps confirm you ended the first call.
Use Siri or Voice Control	Press and hold the center button. See Chapter 4, “Siri,” on page 39 or “Voice Control” on page 30.


If you get a call while the earphones are plugged in, you can hear the ringtone through both the iPhone speaker and the earphones.

AirPlay

You can stream music, photos, and video wirelessly to your HDTV using AirPlay and Apple TV. You can also use AirPlay to stream audio to an Airport Express base station. Other AirPlay-enabled receivers are available from third-parties. Visit the online Apple Store for details.

Stream content to an AirPlay-enabled device: Start the video, slideshow, or music, then tap  and choose the AirPlay device. Once streaming starts, you can exit the app that's playing the content. iPhone and the AirPlay-enabled device must be on the same Wi-Fi network.


Get quick access to the AirPlay control

When the screen is on, double-click the Home button  and scroll to the left end of the multitasking bar.

Switch output from AirPlay back to iPhone

Tap  and choose iPhone.

On iPhone 4S, you can mirror the iPhone screen on a TV with Apple TV. Everything on the iPhone screen appears on the TV.

Mirror the iPhone screen on a TV: Tap  at the left end of the multitasking bar, choose an Apple TV, and tap the Mirroring button that appears.

A blue bar appears at the top of the iPhone 4S screen when AirPlay mirroring is turned on. You can also mirror the iPhone screen on a TV using a cable. See “Watching videos on a TV” on page 127.

Bluetooth devices

You can use iPhone with the Apple Wireless Keyboard and other Bluetooth devices, such as Bluetooth headsets, car kits, and stereo headphones. Third-party Bluetooth headphones may support volume and playback controls. See the documentation that came with your Bluetooth device. For supported Bluetooth profiles, go to support.apple.com/kb/HT3647.

Pairing a Bluetooth device with iPhone

WARNING: For important information about avoiding hearing loss and about driving safely, see the *Important Product Information Guide* at www.apple.com/support/manuals/iphone.

Before you can use a Bluetooth device with iPhone, you must first pair them.

Pair a Bluetooth headset, car kit, or other device with iPhone:

- 1 Follow the instructions that came with the device to make it discoverable or to set it to search for other Bluetooth devices.
- 2 Go to Settings > General > Bluetooth and turn Bluetooth on.
- 3 Choose the device on iPhone, and enter its passkey or PIN number. See the instructions about the passkey or PIN that came with the device.

After you pair a Bluetooth device to work with iPhone, you must make a connection to have iPhone use the device for your calls. See the documentation that came with the device.

When iPhone is connected to a Bluetooth headset or car kit, outgoing calls are routed through the device. Incoming calls are routed through the device if you answer using the device, and through iPhone if you answer using iPhone.

Pair an Apple Wireless Keyboard with iPhone:




- 1 Go to Settings > General > Bluetooth and turn Bluetooth on.
- 2 Press the power button on the Apple Wireless Keyboard to turn it on.
- 3 On iPhone, select the keyboard listed under Devices.
- 4 Type the passkey on the keyboard as instructed, then press Return.

Note: You can pair only one Apple Wireless Keyboard with iPhone at a time. To pair a different keyboard, you must first unpair the current one.

For more information, see “Using an Apple Wireless Keyboard” on page 27.

Bluetooth status


The Bluetooth icon appears in the iPhone status bar at the top of the screen:

-  or : Bluetooth is on and paired with a device. (The color depends on the current color of the status bar.)
- : Bluetooth is on and paired with a device, but the device is out of range or turned off.
- *No Bluetooth icon:* Bluetooth is turned off or not paired with a device.

Unpairing a Bluetooth device from iPhone

You can unpair a Bluetooth device, if you don't want to use it with iPhone any more.

Unpair a Bluetooth device:

- 1 Go to Settings > General > Bluetooth and turn Bluetooth on.
- 2 Tap  next to the device name, then tap “Forget this Device.”

Battery

iPhone has an internal rechargeable battery.


Charging the battery

WARNING: For important safety information about charging iPhone, see the *Important Product Information Guide* at www.apple.com/support/manuals/iphone.

The battery icon in the upper-right corner shows the battery level or charging status. You can also display the percentage of the battery charge. Go to Settings > General > Usage and turn on the setting under Battery Usage.



Charge the battery: Connect iPhone to a power outlet using the included Dock Connector to USB Cable and USB power adapter.

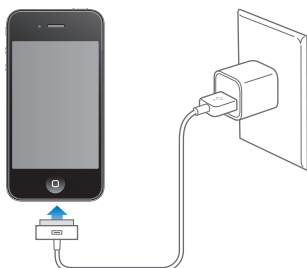

Note: Connecting iPhone to a power outlet can start an iCloud backup or wireless iTunes syncing. See “Backing up iPhone” on page 173 and “Syncing with iTunes” on page 18.

Charge the battery and sync iPhone: Connect iPhone to your computer using the included Dock Connector to USB Cable. Or connect iPhone to your computer using the included cable and the Dock, available separately.


Unless your keyboard has a high-powered USB 2.0 port, you must connect iPhone to a USB 2.0 port on your computer.



Important: The iPhone battery may drain instead of charge if iPhone is connected to a computer that’s turned off or is in sleep or standby mode.

If you charge the battery while syncing or using iPhone, it may take longer to charge.

Important: If iPhone is very low on power, it may display one of the following images, indicating that iPhone needs to charge for up to ten minutes before you can use it. If iPhone is extremely low on power, the display may be blank for up to two minutes before one of the low-battery images appears.

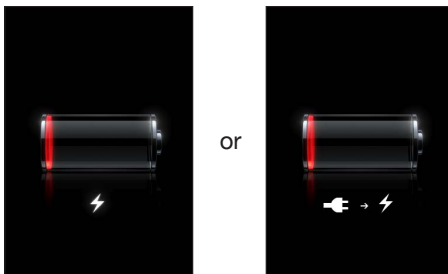

Maximizing battery life

iPhone uses lithium-ion batteries. To learn more about how to maximize the battery life of iPhone, go to www.apple.com/batteries.

Replacing the battery

Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. The iPhone battery isn’t user replaceable; it can be replaced only by an authorized service provider. For more information, go to www.apple.com/batteries/replacements.html.

Security features

Security features help protect the information on iPhone from being accessed by others.

Passcodes and data protection

You can set a passcode that you must enter each time you turn on or wake up iPhone.

Set a passcode: Go to Settings > General > Passcode Lock and enter a 4-digit passcode, then enter the passcode again to verify it. iPhone then requires you to enter the passcode to unlock it or to display the passcode lock settings.

Setting a passcode turns on data protection. Data protection uses your passcode as the key for encrypting mail messages and their attachments stored on iPhone. (Data protection may also be used by some apps available from the App Store.) A notice at the bottom of the Passcode Lock screen in Settings shows whether data protection is enabled.

To increase iPhone security, turn off Simple Passcode and use a longer passcode with a combination of numbers, letters, punctuation, and special characters. See “Passcode Lock” on page 165.

Important: On an iPhone 3GS that didn’t ship with iOS 4 or later, you must also restore iOS software to enable data protection. See “Updating and restoring iPhone software” on page 175.

Prevent voice dialing when iPhone is locked: Go to Settings > General > Passcode Lock and turn Voice Dial off. Unlock iPhone to use voice dialing.

Find My iPhone

Find My iPhone helps you locate and secure your iPhone using the free Find My iPhone app on another iPhone, iPad, or iPod touch, or using a Mac or PC web browser signed in to www.icloud.com or www.me.com.

Find My iPhone includes:

- **Locate on a map:** View the approximate location of your iPhone on a full-screen map.
- **Send a Message or Play a Sound:** Lets you compose a message that will appear on your iPhone screen, or play a sound at full volume for two minutes, even if the Ring/Silent switch is set to silent.
- **Remote Passcode Lock:** Lets you remotely lock your iPhone and create a 4-digit passcode, if you haven’t set one previously.
- **Remote Wipe:** Lets you protect your privacy by erasing all media and data on iPhone, restoring it to factory settings.

Important: Before you can use its features, Find My iPhone must be turned on in either iCloud or MobileMe settings on your iPhone. Find My iPhone can be turned on only in one account.

Turn on Find My iPhone using iCloud

Go to Settings > iCloud and turn on Find My iPhone.

Turn on Find My iPhone using MobileMe

Go to Settings > Mail, Contacts, Calendars, tap your MobileMe account, then turn on Find My iPhone.

See “iCloud” on page 16 or “Setting up mail and other accounts” on page 16.

Cleaning iPhone

Clean iPhone immediately if it comes in contact with any contaminants that may cause stains, such as ink, dyes, makeup, dirt, food, oils, or lotions. To clean iPhone, disconnect all cables and turn off iPhone (press and hold the On/Off button, then slide the onscreen slider). Then use a soft, slightly damp, lint-free cloth. Avoid getting moisture in openings. Don't use window cleaners, household cleaners, compressed air, aerosol sprays, solvents, alcohol, ammonia, or abrasives to clean iPhone. The front cover of iPhone 3GS and the front and back covers of iPhone 4S and iPhone 4 are made of glass and have an oleophobic coating. To clean these surfaces, simply wipe with a soft, lint-free cloth. The ability of this coating to repel oil will diminish over time with normal usage, and rubbing the screen with an abrasive material will further diminish its effect and may scratch the glass.

For more information about handling iPhone, see the *iPhone Important Product Information Guide* at www.apple.com/support/manuals/iphone.

Restarting or resetting iPhone


If something isn't working right, try restarting iPhone, force quitting an app, or resetting iPhone.

Restart iPhone: Press and hold the On/Off button until the red slider appears. Slide your finger across the slider to turn off iPhone. To turn iPhone back on, press and hold the On/Off button until the Apple logo appears.

If you can't turn off iPhone or if the problem continues, you may need to reset iPhone. A reset should be done only if turning iPhone off and on doesn't resolve the problem.

Force an app to close: Press and hold the On/Off button for a few seconds until a red slider appears, then press and hold the Home button  until the app quits.

You can also force an app to quit by removing it from the multitasking bar. See "Opening and switching apps" on page 19.

Reset iPhone: Press and hold both the On/Off button and the Home button  for at least ten seconds, until the Apple logo appears.

For more troubleshooting suggestions, see Appendix B, "Support and Other Information," on page 173.

What is Siri?

Siri is the intelligent personal assistant that helps you get things done just by talking. Siri understands natural speech, so you don't have to learn specific commands or remember keywords. You can ask things in different ways. For example, you can say "Set the alarm for 6:30 a.m." or "Wake me at 6:30 in the morning." Either way, Siri gets it.

Siri lets you write and send messages, schedule meetings, place phone calls, get directions, set a reminder, search the web—and much much more!—simply by talking naturally. Siri understands what you say and knows what you mean. Siri speaks back to let you know what it heard you say, and asks a question if it needs clarification or more information. It's very much like having a conversation with a person.

For example, ask "Any good burger joints around here?" and Siri may reply "I found a number of burger restaurants near you." If you say "Hmm. How about tacos," Siri remembers that you just asked about restaurants and then looks for Mexican restaurants in the neighborhood.

In addition to the internal processing power of iPhone, Siri uses Apple's data centers to understand what you say and quickly return a response. Siri also uses information from your contacts, music library, calendars, reminders, and so forth to know what you're talking about.

Siri works with most of the built-in apps on iPhone 4S, and is smart enough to figure out which app to use for a request. Siri also uses Search and Location Services to help you with your requests.

There's so many things you can say to Siri! Here's a few more examples, for starters:


- Call Joe
- Set the timer for 30 minutes
- How far to the nearest Apple store?
- Is it going to rain tomorrow?

Note: Siri is available only on iPhone 4S, and it requires Internet access via a cellular or Wi-Fi connection. Siri may not be available in all languages or in all areas, and features may vary by area. Cellular data charges may apply.


Using Siri

Starting Siri

Siri comes to life with the press of a button.

Start Siri: Press the Home button  until Siri appears.

You'll hear two quick beeps and see "What can I help you with?" on the screen.

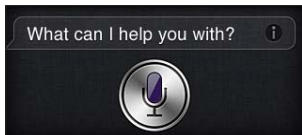

Just begin speaking. The microphone icon lights up to let you know that Siri hears you talking. Once you've started a dialogue with Siri, tap the microphone icon to talk to it again.

Siri waits for you to stop talking, but you can also tap the microphone icon to tell Siri you're done. This is useful when there's a lot of background noise. It can also speed up your conversation with Siri, since Siri won't have to wait for your pause.


When you finish speaking, Siri displays what it heard and provides a response. Siri often includes additional, related info that might be useful. If the info is related to an app—for example, a text message you've composed, or a location you asked for—just tap the display to open the app for details and further action.






Siri may ask you if it needs more information to complete a request. For example, tell Siri to “Remind me to call mom,” and Siri may ask “What time would you like me to remind you?” Don't worry about telling Siri everything at once. Siri prompts you for the details it needs.

You can start talking to Siri just by bringing iPhone to your ear, like making a phone call. If the screen isn't on—first press the On/Off or Home button. You'll hear two quick beeps to indicate Siri is listening. Then start talking.

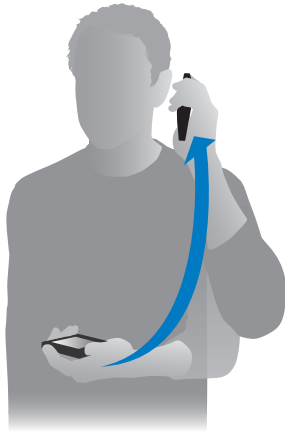If Siri doesn't respond when you bring iPhone to your ear, start with the screen facing you, so your hand rotates on the way up.



Cancel a request	Say "cancel," tap  , or press the Home button  .
Stop a phone call you started with Siri	Before Phone opens, press the Home button  . If Phone is already open, tap End.

Telling Siri about yourself

The more Siri knows you, the more it can use your information to help you. Siri gets your information from your personal info card ("My Info") in Contacts.

Tell Siri who you are: Go to Settings > Siri > My Info, then tap your name.

Put your home and work addresses on your card, so you can say things like "How do I get home?" and "Remind me to call Bob when I get to work."

Siri also wants to know about the important people in your life, so specify those relationships on your personal info card. Siri can set those up for you. For example, the first time you tell Siri to call your sister, Siri asks you who your sister is (if you don't already have that info on your card). Siri adds that relationship to your personal info card so it doesn't have to ask next time.

Create cards in Contacts for all your important relationships, and include information such as phone numbers, email addresses, home and work addresses, and nicknames you like to use.

Onscreen guide

Siri gives you examples of things you can say, right on screen. Ask Siri “what can you do” or tap ⓘ when Siri first appears.



Handsfree Siri

You can use Siri with the Apple Earphones with Remote and Mic that came with your iPhone, or with other supported headphones and Bluetooth headsets.

Talk to Siri using earphones: Press and hold the center button.

Talk to Siri using a Bluetooth headset: Press and hold the call button.

To continue a conversation with Siri, press and hold the button each time you want to talk.

When you use earphones or a headset, Siri speaks its responses to you. Siri reads back text messages and email messages that you've dictated before sending them. This gives you a chance to change the message if you want. Siri also reads back the subjects of reminders before creating them.

Context

Siri pays attention to where you're at and what you're doing, so it understands context. If you just received a text message from Bob, just say "Reply" and Siri knows to send a text message to Bob. Say "Call him" and Siri knows to call Bob instead. Siri always lets you know what it is about to do.

Setting options for Siri

Turn Siri on or off: Go to Settings > General > Siri.

Note: Turning Siri off resets Siri, and Siri forgets what it's learned about your voice.

Set options for Siri: Go to Settings > General > Siri.

Language: Select the language you want to use with Siri.

Voice Feedback: By default, Siri speaks its responses only when you hold iPhone to your ear or use Siri with earphones or a headset. If you want Siri to always speak its responses, set this option to Always.

My Info: Let Siri know which card in Contacts contains your personal info. See "Telling Siri about yourself" on page 41.

Raise to Speak: Talk to Siri by bringing iPhone to your ear when the screen is on.

Allow or prevent access to Siri when iPhone is locked with a passcode: Go to Settings > General > Passcode Lock.

You can also disable Siri by turning on restrictions. See "Restrictions" on page 166.

Location Services

Because Siri knows locations like “current,” “home,” and “work,” it can remind you to do a certain task when you leave a location or arrive at a location. Tell Siri “Remind me to call my wife when I leave the office,” and Siri does just that.

Location information isn’t tracked or stored outside the phone. You can still use Siri if you turn Location Services off, but Siri won’t do anything that requires location information.

Turn off Location Services for Siri: Go to Settings > Location Services.

Accessibility

Siri is accessible to blind and visually impaired users through VoiceOver, the screen reader built into iOS. VoiceOver describes aloud what’s onscreen—including any text in Siri’s responses—so you can use iPhone without seeing it.

Turn on VoiceOver: Go to Settings > Accessibility.


Turning on VoiceOver causes even your notifications to be read aloud for you. For more information, see “VoiceOver” on page 143.

Correcting Siri

If Siri is having trouble

Siri may sometimes have trouble understanding you. Noisy environments, for example, can make it difficult for Siri to hear what you’re saying. If you speak with an accent, it can take Siri some time to get used to your voice. If Siri doesn’t hear you exactly right, you can make corrections.

Siri shows what it heard you say, along with its response.

Correct what Siri hears you say: Tap the bubble showing what Siri heard you say. Edit your request by typing, or tap  on the keyboard to dictate.

For information about using dictation, see “Dictation” on page 55.

If some of the text is underlined in blue, tap it and Siri suggests some alternatives. Tap one of the suggestions, or replace the text by typing or dictating.

Correct Siri by voice: Tap , then restate or clarify your request. For example, “I meant Boston.”

When correcting Siri, don’t say what you *don’t* want—just tell Siri what you *do* want.

Correct a mail or text message: If Siri asks if you want to send the message, say something like:

“Change it to: Call me tomorrow.”

“Add: See you there question mark.”

“No, send it to Bob.”

“No.” (to keep the message without sending it)

“Cancel.”


To have Siri read the message to you, say “Read it back to me” or “Read me the message.” If it’s correct, say something like “Yes, send it.”

See “Mail” on page 49 and “Messages” on page 45.

How Siri learns

Siri works right from the start without setup, and gets better over time. Siri learns about your accent and other characteristics of your voice, and categorizes your voice into one of the dialects or accents it understands. As more people use Siri and as it’s exposed to more language variations, recognition will improve and Siri will work even better.

Noisy environments

In a noisy environment, hold iPhone close to your mouth, but don't talk directly into the bottom edge. Continue to speak clearly and naturally. Tap  when you finish speaking.

You can also try holding iPhone to your ear to speak to Siri.

Network connection

Siri might tell you it's having trouble connecting to the network. Because Siri relies on Apple servers for voice recognition and other services, you need to have a good 3G or 4G cellular or Wi-Fi connection to the Internet.

Siri and apps

Siri works with most of the built-in apps on iPhone 4S, and uses the apps it needs to help you with your requests. Siri knows when you're using an app, so you can refer to elements on the screen. For example, when reading a message in Mail, you can say "Reply, I like it."

Phone

Use Siri to make a phone call or start a FaceTime call. You can refer to your family, friends, and associates in Contacts, or say which phone number to use.

For example:

- Call Jennifer Wright mobile
- Call Susan on her work phone
- Call 408 555 1212
- Call home
- FaceTime Lisa




Saying both the first and last name usually makes it clear who you want to call, but you can say just one or the other and let Siri figure it out. Siri first checks your Favorites, and if a match is found, calls that number. Next, Siri checks all your contacts. If there's more than one person with the same name, Siri asks which one you want to call. Siri also asks which phone number to use if there's more than one listed.

You can also ask Siri to call a business in your contacts.

So that Siri knows who you're referring to when you ask to make a call, make sure to introduce yourself to Siri. See "Telling Siri about yourself" on page 41.

Stop a phone call you started with Siri

Before Phone opens, press the Home button . If the phone call is in progress, tap End.

Music

Ask Siri to play a song, album, or playlist. Pause playback, then resume. Set the mood by asking for a certain type of music.

Or just say "Play" and let Siri choose for you. If you don't recognize the song, ask Siri "What's playing?"

Here are some ways you can play music with Siri:

- Play The Light of the Sun
- Play Trouble
- Play Taking Back Sunday shuffled
- Play Alicia Keys
- Play some blues
- Play my party mix
- Shuffle my roadtrip playlist
- Play
- Pause
- Resume
- Skip

To hear similar songs to the one you're listening to, say "Genius." (Siri creates a temporary Genius playlist, but it's not saved.)

Messages

You can send text messages, have Siri read new messages to you, and respond to messages you receive.

Include the name of the person to text, or wait for Siri to ask who you want to send it to. You can text to a phone number, and you can text more than one person at once.

To send a text, say things like:

- Tell Susan I'll be right there
- Send a message to Jason Russell
- Send a message to Lisa saying how about tomorrow?
- Send a message to Susan on her mobile saying I'll be late
- Send a message to 408 555 1212
- Text Jason and Lisa where are you?



To see or hear messages you've received, you can say:

- Read me my messages
- Show my new texts
- Read it again

If you've just received a text message or if you're reading one that you received earlier, you can simply say:

- Reply that's great news
- Tell him I'll be there in 10 minutes
- Call her

Siri understands the context and knows who to address the reply to.

Before sending a message you've composed, Siri displays it or reads it back to you to make sure it's right. When Siri asks if you want to send the message, you can say:

- Change it to: Call me tomorrow
- Add: See you there question mark
- No, send it to Bob
- No (to keep the message without sending it)
- Cancel

Want to tag your message with a smiley face? Say "smiley face," of course. :-)

Editing messages

If you're creating a text message with Siri but it's not exactly what you wanted to say, you can ask Siri to change it. If it's pretty close, you might want to edit it instead. When Siri displays the message for your review, tap the message bubble to open it in the Messages app. Then you can edit the message by typing or dictating. See "Dictation" on page 55.

Calendar

Add new events to your calendar, change existing events, or find out what's on your schedule. When you create an event, you can specify a time, a place, a title, and the people you want to invite.

To create an event:

- Set up a meeting at 9
- Set up a meeting with Michael at 9
- Meet with Lisa at noon
- Set up a meeting about hiring tomorrow at 9 a.m.
- New appointment with Susan Park Friday at 3
- Schedule a planning meeting at 8:30 today in the boardroom



To change or cancel an event:

- Move my 3 p.m. meeting to 4:30
- Reschedule my appointment with Dr. Manning to next Monday at 9 a.m.
- Add Lisa to my meeting with Jason
- Cancel the budget review meeting

To ask Siri about events:

- What does the rest of my day look like?
- What's on my calendar for Friday?
- When is my next appointment?
- When am I meeting with Michael?
- Where is my next event?

When you create, change, or ask about an event, Siri displays information about the event. To get more information, tap the event.

Reminders

Siri's a great way to set up a quick reminder.

To create a reminder, say things like:

- Remind me to call mom
- Remember to take an umbrella
- Remind me take my medicine at 6 a.m. tomorrow
- Remind me when I leave to call Jason
- Remind me to finish the report by 6

Siri asks for information it needs in order to create the reminder, including date, time, and location.

Including location info lets Siri remind you about the item when you approach or leave a location. A location can be your current location (“here”), or an address in Contacts. To let Siri know about your home and work locations, see “Telling Siri about yourself” on page 41.

- Remind me to call my mom when I get home
- Remind me when I get to the office to call my wife
- Remind me to pick up flowers when I leave here
- Remind me to check the time when I get back here

Reminders are added to the default reminder list.

Set the default list for Reminders: Go to Settings > Mail, Contacts, Calendars > Default List.

To keep a list without setting a specific time or location to be reminded:

- Remember to buy milk
- Add eggs to my groceries list

If Siri asks when you want to be reminded, you can say “never.”

If you have a list visible in Reminders, you can add to it just by saying “Add”:

- Add eggs

When you create a reminder with Siri, Siri displays it for you to confirm.



You can confirm, cancel, or let Siri know you want to change something:

- Change the time to 7
- Make it Tuesday instead
- Change that to: Get the car washed and waxed
- Move it to my Work list
- Move it to my Personal list

Once you confirm the reminder, you can tap it to open the Reminder app and see the reminder and its details.

Maps

Use Siri to find a location, get directions, and see traffic conditions. For example:

- How do I get home?
- Show 1 Infinite Loop Cupertino California
- Directions to my dad's work
- What's the traffic like getting home?

- Find coffee near me
- Find some burger joints in Baltimore
- Find a gas station within walking distance
- Good Mexican restaurants around here

If you ask about a location, Siri displays it on a map. Sometimes Siri goes directly to Maps, but you can tap the map to open the Maps app if Siri doesn't open it.



Siri might respond with a list of choices. For example, if you ask about burger joints, Siri looks for hamburger restaurants in the vicinity and sorts the list by proximity. If you ask for the best burger joint around, Siri sorts by rank. To sort the list another way, just ask “which is the best?” or “which is the closest?”



Mail

With Siri, you can send mail, check your mail, and respond to mail you've received.

A mail message requires at least one recipient, a subject line (say “about”), and message text. But don't worry about getting it all down in one breath—Siri will ask for what's needed to complete the email.

To email someone:

- Email Lisa about the trip
- New email to Susan Park
- Mail Dad about the rent check

- Email Dr. Manning and say I got the forms, thanks
- Mail Lisa and Jason about the party and say I had a great time



To check your mail:

- Check email
- Any new email from Michael today?
- Show new mail about the lease
- Show the email from Lisa yesterday

To respond to email:

- Reply Dear Susan sorry about the late payment
- Call him at work

Before sending an email, Siri displays or reads it back to you so you can make sure it's right. When Siri asks if you want to send the email, you can say:

- Change it to say: Check's in the mail
- Add John (to include another recipient)
- Change subject to: This weekend

Editing email

If you create an email with Siri but it's not exactly what you want to say, ask Siri to change it. If it's pretty close, you can edit it instead. Tap the message to open it in the Mail app, then edit it by typing or dictating. See "Dictation" on page 55.

Weather

Use Siri to get weather information. If you don't give a location, Siri assumes you mean your current location. If you don't give a time, Siri shows today's forecast, but you can ask about the weather anytime in the coming week.

- What's the weather for today?
- What's the weather for tomorrow?
- Will it rain in Cupertino this week?
- What's the forecast for this evening?
- How's the weather in Tampa right now?
- How hot will it be in Palm Springs this weekend?
- What's the high for Anchorage on Thursday?
- What's the temperature outside?

- How windy is it out there?
- When is sunrise in Paris?



Stocks

Use Siri to quickly get quotes for your favorite stocks. Get market capitalization, or P/E ratios. Ask about specific indexes, and the situation in general. For example:

- What's Apple's stock price?
- What's Apple's P/E ratio?
- What did Yahoo close at today?
- How's the Nikkei doing?
- How are the markets doing?
- What's the Dow at?



Clock

Use Siri to quickly set an alarm for the morning, a timer for that cake in the oven, or find out what time it is at your overseas destination.

To set or change alarms:

- Wake me up tomorrow at 7 a.m.
- Set an alarm for 6:30 a.m.
- Wake me up in 8 hours
- Change my 6:30 alarm to 6:45

- Turn off my 6:30 alarm
- Delete my 7:30 alarm

When you set an alarm, Siri displays the alarm so you can see that it's correct. You can tap the switch to turn the alarm on or off. Tap the alarm to open it in the Clock app.



To ask about the date and time:

- What time is it?
- What time is it in Berlin?
- What is today's date?
- What's the date this Saturday?

Siri displays a clock for you. Tap it to open the Clock app.



To use the timer:

- Set the timer for ten minutes
- Show the timer
- Pause the timer
- Resume
- Reset the timer
- Stop it

Siri displays a timer. Tap it to open the Clock app.



Contacts

Siri uses your entries in Contacts to find addresses, look up phone numbers and other information, or tell you about someone's birthday. Siri even knows who your relatives are by looking at your personal contact card. See "Telling Siri about yourself" on page 41.


To ask about contacts, you can say:

- What's Michael's address?
- What is Susan Park's phone number?
- When is my wife's birthday?
- Show Jennifer's home email address
- What's my brother's work address?

To find contacts:

- Show Jason Russell
- Find people named Park
- Who is Michael Manning?

If you're not sure which phone number to use for a contact, ask Siri to show the person's contact information. To call, just tap a number. Other items are active as well—tap an email address to start a new email message, or tap the FaceTime button to speak face to face. "Find John" may help you narrow down the list of possibilities, if you know it's John but can't remember the last name.

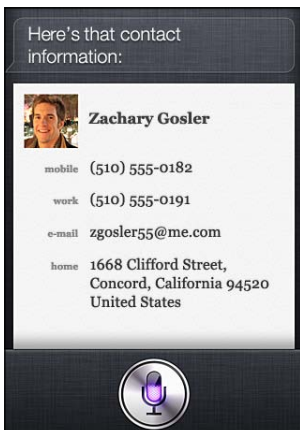

Notes

Use Siri to verbally jot down notes, or look up notes you've already made. Say things like:

- Note that I spent \$12 on lunch
- Note: check out that new Alicia Keys album
- Find my restaurant note
- Create a reading list note
- Add Tom Sawyer to my reading list note

Siri displays the note for you to review. To edit the note, tap it. Siri opens the Notes app for you, and you can edit the note by typing or dictating. See "Dictation" on page 55.

Safari

You can do a web search with Siri—specify which search engine to use, or search a site like Wikipedia. For example:

- Search the web for Bora Bora
- Search for vegetarian pasta recipes
- Search the web for best cable plans
- Google the war of 1812
- Search Wikipedia for Abraham Lincoln
- Search for news about the World Cup
- Bing Alicia Keys

Siri opens Safari and performs the search you request. If you don't specify the search engine, Siri uses the one specified in Safari settings. Go to Settings > Safari.

WolframAlpha

Ask Siri to provide some information or perform a calculation, and Siri might refer to WolframAlpha (www.wolframalpha.com). Responses often include related info.



Some sample questions and requests:

- How many calories in a bagel?
- What is an 18% tip on \$86.74 for four people?
- Who's buried in Grant's tomb?
- How long do dogs live?
- What is the Gossamer Condor?

- What's the square root of 28?
- How many dollars is 45 euros?
- What was the Best Picture of 1983?
- How many days until Christmas?
- How far away is the sun?
- When is the next solar eclipse?
- Show me the Orion constellation
- What's the population of Jamaica?
- How high is Mt. Everest?
- How deep is the Atlantic Ocean?
- What's the price of gasoline in Chicago?

Dictation

When Siri is turned on, you can also dictate text. See "Dictation" on page 27.

Although you can compose email, text messages, and other text by talking directly with Siri, you might prefer dictation. Dictation lets you edit a message instead of replacing the entire text. Dictation also gives you more time to think while composing.

Siri understands pauses to mean you finished talking for the moment, and takes that opportunity to respond. While this lets you have a natural conversation with Siri, Siri might interrupt you before you're really done, because you paused a moment to think. With dictation, you can pause as frequently as you like, and resume talking when you're ready.

You can also start composing text using Siri, then continue using dictation. For example, you can create an email with Siri, then tap the draft to open the message in Mail. In Mail, you can complete or edit the message and make other changes, such as adding or removing recipients, revising the subject, or changing the account you're sending the email from.




Phone calls

Making a call

Making a call on iPhone is as simple as tapping a name or number in your contacts, using Siri to say “call bob” (iPhone 4S), tapping one of your favorites, or tapping a recent call to return it. Buttons at the bottom of the Phone screen give you quick access to your favorites, recent calls, your contacts, and a numeric keypad for dialing manually.

WARNING: For important information about driving safely, see the *Important Product Information Guide* at www.apple.com/support/manuals/iphone.

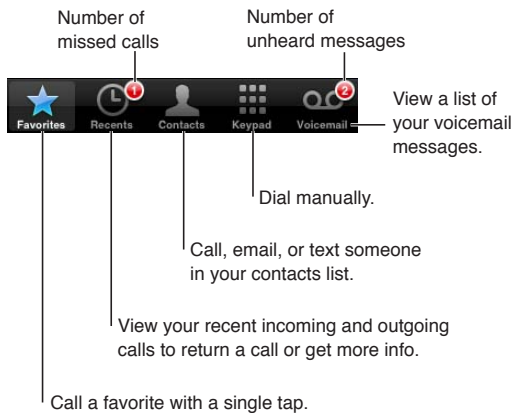

Return a missed call

Do one of the following:

- *Phone:* Tap Recents, then tap the name or number.
 - *Locked screen:* Swipe the icon displayed in the alert to the right.
 - *Notification Center:* Tap the missed call.
-

Dialing manually

You can use the keypad to dial a phone number manually.

Dial a number: Tap Keypad, enter the number, then tap Call.


Paste a number to the keypad	Tap the screen above the keyboard, then tap Paste.
Enter a soft (2-second) pause	Touch the "*" key until a comma appears.
Enter a hard pause (to pause dialing until you tap the Dial button)	Touch the "#" key until a semicolon appears.
Redial the last number	Tap Keypad, tap Call, then tap Call again.

Voice dialing

You can use Siri (iPhone 4S) or Voice Control to call someone in your contacts, or to dial a specific number. See Chapter 4, "Siri," on page 39 and "Voice Control" on page 30.

Make a phone call by voice: Activate Siri or Voice Control, say "call" or "dial," then say the name or number.

Siri: If the screen isn't on, press the On/Off or Home button , then hold iPhone to your ear.

Voice Control or Siri: Press and hold the Home button  until you hear the tone. You can also press and hold the center button on the iPhone earphones.

For example:

- Call John Appleseed
- Call John Appleseed at home
- Call John Appleseed, mobile

For best results, speak the full name of the person you're calling. When voice dialing a number, speak each digit separately—for example, say "four one five, five five five, one two one two."

Note: For the "800" area code in the U.S., you can say "eight hundred."

Receiving calls


When you receive a call, tap Answer. If iPhone is locked, drag the slider. You can also press the center button on your iPhone earphones.

Silence a call	Press the On/Off button or either volume button. You can still answer the call after silencing it, until it goes to voicemail.
Decline a call and send it directly to voicemail	Do one of the following: <ul style="list-style-type: none">• Press the On/Off button twice quickly.• Press and hold the center button on the iPhone earphones for about two seconds. Two low beeps confirm that the call was declined.• Tap Decline (if iPhone is awake when a call comes in).
Block calls and maintain Wi-Fi access to the Internet	Go to Settings and turn on Airplane Mode, then tap Wi-Fi to turn it on.


If iPhone is turned off or in Airplane Mode, incoming calls go directly to voicemail.

While on a call

When you're on a call, the screen shows call options.

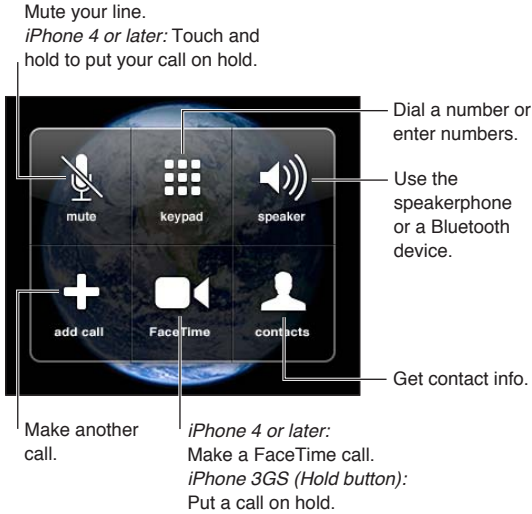

The call options may vary, depending on which iPhone you're using.

Use another app during a call	Press the Home button  , then tap an app icon. To return to the call, tap the green bar at the top of the screen.
End a call	Tap End Call. Or press the center button on your iPhone earphones.

Second calls

During a call, you can make or receive another call. If you receive a second call, iPhone beeps and shows the caller's information and a list of options.

Note: Making and receiving a second call may be an optional service in some areas. Contact your carrier for more information.

Respond to a second incoming call:

- *To ignore the call and send it to voicemail:* Tap Ignore.
- *To hold the first call and answer the new one:* Tap Hold Call + Answer.
- *To end the first call and answer the new one:* When using a GSM network, tap End Call + Answer. With a CDMA network, tap End Call and when the second call rings back, tap Answer, or drag the slider if the phone is locked.

If you're on a FaceTime video call, you can either end the video call and answer the incoming call, or decline the incoming call.

Make a second call	Tap Add Call. The first call is put on hold.
Switch between calls	Tap Swap. The active call is put on hold. With CDMA, you can't switch between calls if the second call was outgoing, but you can merge the calls. If you end the second call or the merged call, both calls are terminated.
Merge calls	Tap Merge Calls. With CDMA, you can't merge calls if the second call was incoming.


Conference calls

With GSM, you can set up a conference call to talk with up to five people at a time, depending on your carrier.

Note: Conference calling may be an optional service in some areas. Contact your carrier for information.

Create a conference call:

- 1 Make a call.
- 2 Tap Add Call and make another call. The first call is put on hold.
- 3 Tap Merge Calls. The calls are merged on one line and everyone can hear each other.
- 4 Repeat steps two and three to add additional calls.

Drop one call	Tap Conference and tap  next to a call. Then tap End Call.
Talk privately with a call	Tap Conference, then tap Private next to a call. Tap Merge Calls to resume the conference call.
Add an incoming call	Tap Hold Call + Answer, then tap Merge Calls.

If your service includes conference calling, iPhone always has a second line available in addition to the conference call.

Note: You can't make a FaceTime video call when you're on a conference call.

Using a Bluetooth device for calls

You can make and receive calls using a Bluetooth device paired with iPhone. See "Pairing a Bluetooth device with iPhone" on page 34.

For information about using a Bluetooth device, see the documentation that came with the device.

Bypass your Bluetooth device:

- Answer a call by tapping the iPhone screen.
- During a call, tap Audio and choose iPhone or Speaker Phone.
- Turn off Bluetooth in Settings > General > Bluetooth.
- Turn off the Bluetooth device, or move out of range. You must be within about 30 feet of a Bluetooth device for it to be connected to iPhone.

Emergency calls


If iPhone is locked with a passcode, you may still be able to make an emergency call.

Make an emergency call when iPhone is locked: On the Enter Passcode screen, tap Emergency Call, then enter the emergency number and tap the green button.

In the U.S., location information (if available) is provided to emergency service providers when you dial 911.

With CDMA, when an emergency call ends, iPhone enters *Emergency call mode* to allow a call back from emergency services. While in this mode, data transmission and text messages are blocked.

Exit emergency call mode (CDMA): Do one of the following:

- Tap the back button.
- Press the On/Off button or the Home button .
- Use the keypad to dial a non-emergency number.

Emergency call mode ends automatically after a few minutes, as determined by your carrier.

Important: You should not rely on wireless devices for essential communications, such as medical emergencies. Use of iPhone to call emergency services may not work in all areas or all operating conditions. Emergency numbers and services vary by area, and sometimes an emergency call cannot be placed due to network availability or environmental interference. Some cellular networks may not accept an emergency call from iPhone if iPhone is not activated, if iPhone is not compatible with or configured to operate on a particular cellular network, or (when applicable) if iPhone does not have a SIM or if the SIM is PIN-locked. If you're on a FaceTime video call, you must end that call before you can call an emergency number.

FaceTime


FaceTime video calls (iPhone 4 or later) let you see as well as hear the person you're talking to. You can make a video call to someone with a Mac or iOS device that supports FaceTime. No setup is needed, but you must have a Wi-Fi connection to the Internet. By default, FaceTime uses the front camera so the person you call can see your face; switch to the rear camera to share what you see around you.

Note: FaceTime may not be available in all areas.

Make a FaceTime call: In Contacts, choose a name, tap FaceTime, then tap the phone number or email address the person uses for FaceTime.

To call someone who has an iPhone 4 or later, you can start by making a voice call, then tap FaceTime.

When the voice call is established, the other person's image appears on your screen. An inset shows what the other person sees. Rotate iPhone to use FaceTime in landscape orientation.

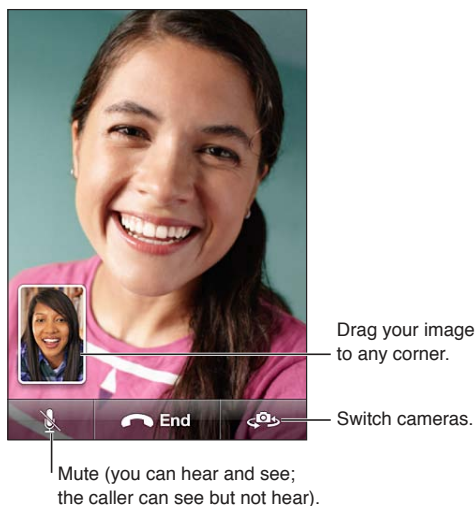

If your Wi-Fi network is unavailable (for example, if you're out of range), you get an option to redial the number for a voice call.

Note: When you make a FaceTime video call, your phone number is displayed even if caller ID is blocked or turned off.

Make a FaceTime call using Siri or Voice Control	Press and hold the Home button until you hear the tone. With Siri (iPhone 4S), you can also just hold iPhone to your ear while the screen is on. Say "FaceTime," followed by the name of the person to call.
Block FaceTime calls	Go to Settings > FaceTime and turn off FaceTime. You can also disable FaceTime in Restrictions. See "Restrictions" on page 166.
Use your Apple ID or an email address for FaceTime	Go to Settings > FaceTime, then tap "Use your Apple ID for FaceTime" or Add An Email. See "FaceTime" on page 60.

Visual voicemail

Setting up voicemail

On iPhone, visual voicemail lets you see a list of your messages and choose which ones to listen to or delete, without having to listen to instructions or prior messages.

Note: Visual voicemail may not be available in all areas, or may be an optional service. Contact your carrier for more information. If visual voicemail isn't available, tap Voicemail and follow the voice prompts to retrieve your messages.



Number of missed calls and unheard voicemail messages.

The first time you tap Voicemail, iPhone prompts you to create a voicemail password and record your voicemail greeting.

Change your greeting: Tap Voicemail, tap Greeting, then tap Custom. Tap Record and say your greeting. When you finish, tap Stop.


To review, tap Play. To rerecord, tap Record again. Tap Save when you're satisfied.

Use your carrier's default greeting	Tap Voicemail, tap Greeting, then tap Default.
Set an alert sound for new voicemail	Go to Settings > Sounds, then turn New Voicemail on. The alert sounds once for each new voicemail. If the Ring/Silent switch is off, iPhone won't sound alerts.
Change the voicemail password	Go to Settings > Phone > Change Voicemail Password.

Checking voicemail

When you tap Phone, iPhone shows the number of missed calls and unheard voicemail messages.

Tap Voicemail to see a list of your messages.

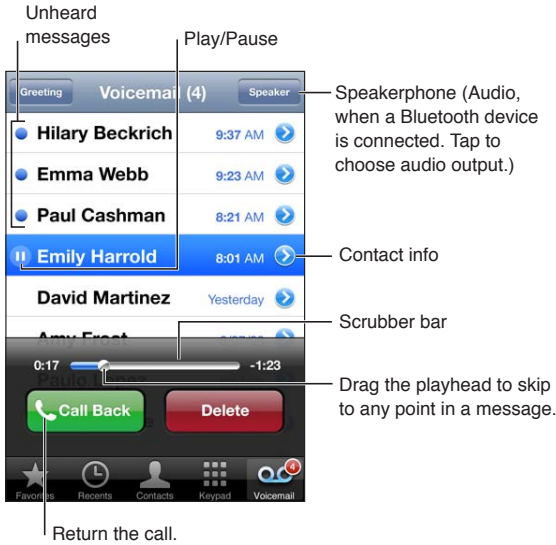

Listen to a voicemail message: Tap Voicemail, then tap a message.

If you've already heard the message, tap the message again to replay it. Use **||** and **▶** to pause and resume playback.

Once you listen to a message, it's saved until your carrier erases it.

Check voicemail from another phone	Dial your own number or your carrier's remote access number.
------------------------------------	--

Deleting messages

Delete a message: Swipe or tap the message, then tap Delete.

Note: In some areas, deleted visual voicemail messages may be permanently erased by your carrier.

Listen to a deleted message	Tap Deleted Messages (at the end of the list), then tap the message.
Undelete a message	Tap Deleted Messages (at the end of the list), then tap the message and tap Undelete.
Delete messages permanently	Tap Deleted Messages (at the end of the list), then tap Clear All.


Contacts




From a contact's Info screen, a quick tap lets you make a phone call, create an email message, find their location, and more. See "Searching contacts" on page 124.

Favorites

Favorites gives you quick access to your frequently used phone numbers.

Add a contact's phone number to your favorites list: Tap Contacts, then choose a contact. Tap "Add to Favorites." Choose a phone number or email address (for FaceTime calls). On iPhone 4 or later, choose whether to save as a voice or FaceTime call.

To call a favorite, tap Favorites and choose a contact. If  appears next to a name, iPhone makes a FaceTime call.

Add a contact to favorites from the recents list	Tap Recents and tap  next to the contact's name, then tap "Add to Favorites."
Delete a contact from your favorites	Tap Favorites and tap Edit. Then tap  next to a contact or number and tap Remove.
Reorder your favorites list	Tap Favorites and tap Edit. Then drag  next to a contact to a new place in the list.

Call forwarding, call waiting, and caller ID

Call forwarding


You can set iPhone to forward incoming phone calls to a another number.

Note: FaceTime calls are not forwarded.

Turn on call forwarding (GSM): Go to Settings > Phone > Call Forwarding and turn on Call Forwarding. On the "Forward to" screen, enter the number you're forwarding calls to.

Turn on call forwarding (CDMA): Enter *72, followed by the number you're forwarding calls to, then tap Call.

To turn off call forwarding (CDMA), enter *73, then tap Call.

With GSM, the Call Forwarding icon () appears in the status bar when call forwarding is on. You must be in range of the cellular network when you set iPhone to forward calls, or calls won't be forwarded.

Call waiting

Call waiting gives you the option to take an incoming call when you're already on the phone.

You can:

- Ignore the incoming call
- Put the current call on hold and answer the incoming one
- End the current call and answer the incoming one

If you're on a call and call waiting is turned off, incoming calls go directly to voicemail. See "Second calls" on page 58.

Turn on call waiting (GSM): Go to Settings > Phone > Call Waiting.

With CDMA, call waiting is on by default, but can be disabled for a single call.

Disable call waiting for a call (CDMA): Enter *70, then dial the number.

Caller ID

Caller ID displays your name or phone number to the person you call—if the recipient's equipment has that capability and you haven't turned off or blocked the feature.

Note: For FaceTime calls, your phone number is displayed even if caller ID is turned off or blocked.

Turn caller ID on or off (GSM): Go to Settings > Phone > Show My Caller ID.

With CDMA, caller ID is on by default, but can be disabled for a single call.

Block caller ID for a call (CDMA): Enter *67, then dial the number.

Ringtones, Ring/Silent switch, and vibrate

iPhone comes with ringtones that sound for incoming calls, Clock alarms, and the Clock timer. You can also purchase ringtones from songs in iTunes. Use the Ring/Silent switch to turn the ringer on or off, and Sound settings to set the vibrate options. By default, iPhone vibrates whether it's in ring mode or silent mode.

Set the default ringtone: Go to Settings > Sounds > Ringtone.

Turn the ringer on or off: Flip the switch on the side of iPhone. See "Ring/Silent switch" on page 11.

Important: Clock alarms still sound even if you set the Ring/Silent switch to silent.

Set iPhone to vibrate: Go to Settings > Sounds. Separate controls let you set vibrate for both ring mode and silent mode.

Assign a different ringtone for a contact	In Contacts, choose a contact, tap edit, then tap Ringtone and choose a ringtone.
Purchase a ringtone from the iTunes Store	See "Purchasing music, audiobooks, and tones" on page 116.

For more information, see "Sounds and the Ring/Silent switch" on page 161.

International calls

Making international calls from your home area

For information about making international calls from your home area, including rates and other charges that may apply, contact your carrier or go to your carrier's website.

Using iPhone abroad

When traveling abroad, you may be able to use iPhone to make calls, send and receive text messages, and use apps that access the Internet, depending on available networks.

Enable international roaming: Contact your carrier for information about availability and fees.

Important: Voice, text message, and data roaming charges may apply. To avoid charges for phone calls and data delivered via the cellular network (including visual voicemail) when roaming outside your carrier's network, turn off Voice Roaming and Data Roaming.

If you have an iPhone 4S that's been activated to work on a CDMA network, you may be able to roam on GSM networks if the phone has a SIM card installed. See "Installing the SIM card" on page 14. When roaming on a GSM network, iPhone has access to GSM network features. Charges may apply. Contact your carrier for more information.

Turn off Voice Roaming on a CDMA network	Go to Settings > General > Network. Turning Voice Roaming off disables phones calls when you're outside of your carrier's network.
Turn off Data Roaming	Go to Settings > General > Network. Turning Data Roaming off disables data transmission over the cellular network. Apps that depend on Internet access are disabled unless iPhone has access to the Internet via a Wi-Fi connection. Visual voicemail delivery is suspended when roaming unless your carrier does not charge for it.
Set iPhone to add the correct prefix when dialing from another country	Go to Settings > Phone, then turn on International Assist (not available in all areas). This lets you use contacts and favorites to make U.S. calls, without having to add a prefix or country code.
Set the carrier to use	Go to Settings > Carrier. This option is available only when you're traveling outside your carrier's network, and with carriers that have roaming agreements with your service provider. For more information, see "Carrier" on page 161.
Use GSM networks abroad with a CDMA-activated iPhone	Go to Settings > Network > Roaming, then turn off International CDMA.
Get voicemail when visual voicemail isn't available	Dial your own number (with CDMA, dial your number followed by #), or touch and hold "1" on the numeric keypad.
Turn off cellular data	Go to Settings > General > Network.
Turn off cellular services	Go to Settings, tap Airplane Mode to turn it on, then tap Wi-Fi and turn Wi-Fi on. Incoming phone calls are sent to voicemail. To make and receive calls again and get your voicemail messages, turn airplane mode off.

Setting options for Phone

In Settings, go to Phone to:

- See the phone number for your iPhone
- Turn call forwarding, call waiting, and caller ID on or off (GSM)
- Turn TTY on or off
- Change your voicemail password (GSM)
- Turn international assist on or off—when calling from abroad, international assist lets you call contacts and favorites in the U.S. without having to add a prefix or country code (GSM)
- Lock your SIM to require a PIN when you turn iPhone on (required by some carriers)

In Settings, go to FaceTime to:

- Turn FaceTime on or off
- Use your Apple ID for FaceTime
- Add an email address for FaceTime

To set ringtones, vibration options, and the sound for new voicemail, go to Settings > Sounds. See also "Sounds and the Ring/Silent switch" on page 161.




Mail works with iCloud, Microsoft Exchange, and many of the most popular mail systems—including Yahoo!, Google, Hotmail, and AOL—as well as other industry-standard POP3 and IMAP mail systems. You can send and receive photos, videos, and graphics, and view PDFs and other attachments. You can also print messages, and attachments that open in Quick Look.

Checking and reading email

In Mail, the Mailboxes screen gives you quick access to all your inboxes and other mailboxes.

When you open a mailbox, Mail retrieves and displays the most recent messages. You can set the number of messages retrieved in your Mail settings. See “Mail accounts and settings” on page 69.

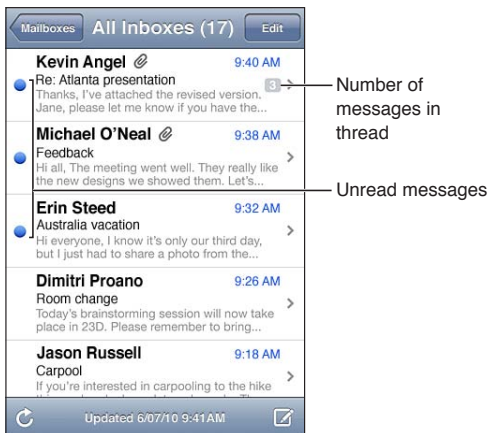


Organize messages by thread

Go to Settings > Mail, Contacts, Calendars, then turn Organize By Thread on or off.

If you organize messages by thread, related messages appear as a single entry in the mailbox. See “Mail accounts and settings” on page 69.

Check for new messages

Choose a mailbox, or tap  at any time.

Load additional messages

Scroll to the bottom of the list of messages and tap Load More Messages.

Zoom in on part of a message

Double-tap the area to zoom in on. Double-tap again to zoom out. Or pinch apart or together to zoom in or out.

Resize any column of text to fit the screen

Double-tap the text.

See all the recipients of a message

Tap Details. Tap a name or email address to see the recipient’s contact information, then tap a phone number or email address to contact the person.

Add an email recipient to your contacts list	Tap the message and, if necessary, tap Details to see the recipients. Then tap a name or email address and tap Create New Contact or “Add to Existing Contact.”
Flag or mark a message as unread	Open the message and, if necessary, tap Details. Then tap Mark. To mark multiple messages as unread, see “Organizing mail” on page 69.
Open a meeting invitation	Tap the invitation. See “Responding to invitations” on page 86.

Working with multiple accounts










If you set up more than one account, the Accounts section of the Mailboxes screen lets you access your accounts. You can also tap All Inboxes to see all of your incoming messages in a single list. For information about setting up additional mail accounts, see “Mail accounts and settings” on page 69.

When writing a new message, tap the From field to select the account from which to send the message.

Sending mail

You can send an email message to anyone who has an email address.

Compose a message: Tap 

Add a recipient from Contacts	Type a name or email address in the To field, or tap  .
Rearrange recipients	To move a recipient from one field to another, such as from To to Cc, drag the recipient’s name to the new location.
Make text bold, italic, or underlined	Tap the insertion point to display the selection buttons, then tap Select. Drag the points to select the text that you want to style. Tap  , then tap B/I/U. Tap Bold, Italic, or Underline to apply the style.
Send a photo or video in an email message	In Photos, choose a photo or video, tap  , then tap Email Photo or Email Video. You can also copy and paste photos and videos. To send multiple photos or videos, tap  while viewing thumbnails in an album. Tap to select the photos and videos, tap Share, then tap Email.
Save a draft of a message to complete later	Tap Cancel, then tap Save. The message is saved in the Drafts mailbox. Touch and hold  to quickly access it.
Reply to a message	Tap  , then tap Reply. Files or images attached to the initial message aren’t sent back. To include the attachments, forward the message instead of replying.
Quote a portion of the message you’re replying to or forwarding	Touch and hold to select text. Drag the grab points to select the text you want to include in your reply, then tap  . To change the indentation of quoted text, touch and hold to select text, then tap  . Tap Quote Level, then tap Increase or Decrease.
Forward a message	Open a message and tap  , then tap Forward.
Share contact information	In Contacts, choose a contact, tap Share Contact at the bottom of the Info screen.

Using links and detected data

iPhone detects web links, phone numbers, email addresses, dates, and other types of information that you can use to open a webpage, create a preaddressed email message, create or add information to a contact, or perform some other useful action. Detected data appears as blue underlined text.

Tap the data to use its default action, or touch and hold to see other actions. For example, for an address, you can show its location in Maps or add it to Contacts.

Viewing attachments

iPhone displays image attachments in many commonly used formats (JPEG, GIF, and TIFF) inline with the text in email messages. iPhone can play many types of audio attachments, such as MP3, AAC, WAV, and AIFF. You can download and view files (such as PDF, webpage, text, Pages, Keynote, Numbers, and Microsoft Word, Excel, and PowerPoint documents) that are attached to messages you receive.

View an attached file: Tap the attachment to open it in Quick Look. (You may need to wait while the file downloads before viewing it.)

Open an attached file	Touch and hold the attachment, then choose an app to open it. If none of your apps support the file and it isn't one that Quick Look supports, you can see the name of the file but you can't open it.
Save an attached photo or video	Touch and hold the photo or video, then tap Save Image or Video. The item is saved to your Camera Roll album in the Photos app.


Quick Look supports the following document types:

.doc, .docx	Microsoft Word
.htm, .html	webpage
.key	Keynote
.numbers	Numbers
.pages	Pages
.pdf	Preview, Adobe Acrobat
.ppt, .pptx	Microsoft PowerPoint
.rtf	Rich Text Format
.txt	text
.vcf	contact information
.xls, .xlsx	Microsoft Excel

Printing messages and attachments

You can print email messages, and attachments that can be viewed in Quick Look.


Print an email message: Tap , then tap Print.

Print an inline image	Touch and hold the image, then tap Save Image. Then open Photos and print the image from your Camera Roll album.
Print an attachment	Tap the attachment to view it in Quick Look, then tap  and tap Print.

For more information about printing and printer options, see “Printing” on page 28.


Organizing mail

You can organize messages in any mailbox, folder, or search results window. You can delete or mark messages as read. You can also move messages from one mailbox or folder to another in the same account or between different accounts. You can add, delete, or rename mailboxes and folders.

Delete a message: Open the message and tap .

You can also delete a message directly from the mailbox message list by swiping left or right over the message title, then tapping Delete.

Some mail accounts support archiving messages instead of deleting them. When you archive a message, it moves from your Inbox to All Mail. Turn archiving on or off in Settings > Mail, Contacts, Calendars.

Recover a message	Deleted messages are moved to the Trash mailbox. To change how long a message stays in Trash before being permanently deleted, go to Settings > Mail, Contacts, Calendars. Then tap Advanced.
Delete or move multiple messages	While viewing a list of messages, tap Edit, select the messages you want to delete, then tap Move or Delete.
Move a message to another mailbox or folder	While viewing a message, tap  , then choose a mailbox or folder.
Add a mailbox	Go to the mailboxes list, tap Edit, then tap New Mailbox.
Delete or rename a mailbox	Go to the mailboxes list, tap Edit, then tap a mailbox. Enter a new name or location for the mailbox. Tap Delete Mailbox to delete it and all its contents.
Flag and mark multiple messages as read	While viewing a list of messages, tap Edit, select the messages you want, then tap Mark. Choose either Flag or Mark as Read.

Searching mail

You can search the To, From, Subject and body text of email messages. Mail searches the downloaded messages in the current mailbox. For iCloud, Exchange, and some IMAP mail accounts, you can also search messages on the server.

Search email messages: Open a mailbox, scroll to the top, and enter text in the Search field. Tap From, To, Subject, or All to choose which fields you want to search. If your mail account supports it, messages on the server are also searched.

Mail messages can also be included in searches from the Home screen. See “Searching” on page 29.

Mail accounts and settings

Accounts

For Mail and mail accounts, go to Settings > Mail, Contacts, Calendars. You can set up:

- Microsoft Exchange
- iCloud
- MobileMe
- Google
- Yahoo!
- AOL
- Microsoft Hotmail
- Other POP and IMAP mail systems

Settings may vary, based on the type of account you're setting up. Your service provider or system administrator can provide the information you need to enter.

Change an account's settings: Go to Settings > Mail, Contacts, Calendars, choose an account, then make the changes you want.

Changes you make to an account's settings on iPhone aren't synced to your computer, so you can configure your accounts to work with iPhone without affecting the account settings on your computer.

Stop using an account	Go to Settings > Mail, Contacts, Calendars, choose an account, then turn an account service (such as Mail, Calendars, or Notes) off. If an account service is off, iPhone doesn't display or sync information with that account service until you turn it back on. This is a good way to stop receiving work email while on vacation, for example.
Store drafts, sent messages, and deleted messages on iPhone	For IMAP accounts, you can change the location of the Draft, Sent, and Deleted mailboxes. Go to Settings > Mail, Contacts, Calendars, choose an account, then tap Advanced.
Set how long before messages are removed permanently from Mail	Go to Settings > Mail, Contacts, Calendars, choose an account, then tap Advanced. Tap Remove, then choose a time: Never, or after one day, one week, or one month.
Adjust mail server settings	Go to Settings > Mail, Contacts, Calendars, then choose an account. Ask your network administrator or Internet service provider for the correct settings.
Adjust SSL and password settings	Go to Settings > Mail, Contacts, Calendars, choose an account, then tap Advanced. Ask your network administrator or Internet service provider for the correct settings.
Turn Archive Messages on or off	Go to Settings > Mail, Contacts, Calendars, choose your account, then turn Archive Messages on or off. See "Organizing mail" on page 69.
Delete an account	Go to Settings > Mail, Contacts, Calendars, choose an account, then scroll down and tap Delete Account. All email and the contacts, calendar, and bookmark information synced with the account are removed from iPhone.
Send signed and encrypted messages	Go to Settings > Mail, Contacts, Calendars, choose an account, then tap Advanced. Turn on S/MIME, then select certificates for signing and encrypting outgoing messages. To install certificates, obtain a configuration profile from your system administrator, download the certificates from the issuer's website using Safari, or receive them in Mail attachments.
Set Push settings	Go to Settings > Mail, Contacts, Calendars > Fetch New Data. Push delivers new information when iPhone is connected to a Wi-Fi network. You might want to turn Push off to suspend delivery of email and other information, or to conserve battery life. When Push is off, use the Fetch New Data setting to determine how often data is requested. For optimal battery life, don't fetch too often.
Set other options for Mail	For settings that apply to all of your accounts, go to Settings > Mail, Contacts, Calendars.

Mail settings

To change settings that apply to all of your accounts, go to Settings > Mail, Contacts, Calendars.

Change the tones played when mail is sent or received: Go to Settings > Sounds.

Fetch New Data

This setting lets you turn Push on or off for iCloud, Microsoft Exchange, Yahoo!, and any other push accounts on iPhone. Push accounts deliver new information to iPhone whenever new information appears on the server (some delays may occur) and there's an Internet connection. You might want to turn Push off to suspend delivery of email and other information, or to conserve battery life.

When Push is off, and with accounts that don't support push, data can still be fetched—that is, iPhone can check with the server to see if new information is available. Use the Fetch New Data setting to determine how often data is requested. For optimal battery life, don't fetch too often. Setting Push to OFF (or setting Fetch to Manually on the Fetch New Data screen) overrides individual account settings.

Set Push settings: Go to Settings > Mail, Contacts, Calendars > Fetch New Data.


Safari

7



Safari lets you surf the web and view webpages. Create bookmarks on iPhone and sync them with your computer. Add web clips to the Home screen for quick access to your favorite sites. Print webpages, PDFs, and other documents. Use Reading List to collect sites to read later.

Viewing webpages

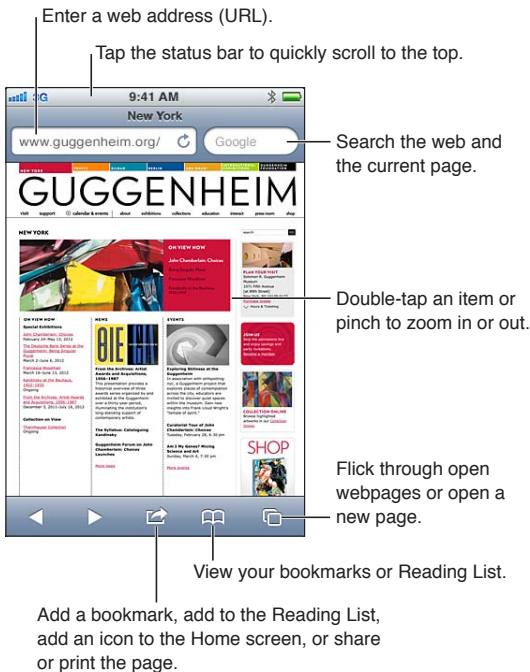





View a webpage: Tap the address field (in the title bar) to bring up the keyboard. Type the web address, then tap Go.

If the address field isn't visible, tap the status bar to quickly scroll to the top.

You can view webpages in portrait or landscape orientation.

Erase the text in the address field	Tap
Scroll a webpage	Drag up, down, or sideways.
Scroll within a frame on a webpage	Scroll with two fingers inside the frame.
Open a new page	Tap , then tap New Page. You can have up to eight pages open at a time. A number inside indicates the number of open pages.
Go to another page	Tap , flick left or right, then tap the page.

Stop a webpage from loading	Tap  .
Reload a webpage	Tap  in the address field.
Close a page	Tap  , then tap  by the page.
Protect private information and block some websites from tracking your behavior	Go to Settings > Safari and turn on Private Browsing.
Set options for Safari	Go to Settings > Safari.

Links

Follow a link on a webpage: Tap the link.

See a link's destination address	Touch and hold the link.
----------------------------------	--------------------------


Detected data—such as phone numbers and email addresses—may also appear as links in webpages. Touch and hold a link to see the available options. See “Using links and detected data” on page 68.

Reading List

Reading List lets you collect links to webpages to read later.

Add a link to the current page to your Reading List: Tap , then tap “Add to Reading List.”



Add a link to your Reading List: Touch and hold the link, then choose “Add to Reading List.”

View your Reading List	Tap  , then tap Reading List.
Use iCloud to keep your Reading List up to date on your iOS devices and computers	Go to Settings > iCloud, then turn on Bookmarks. See “iCloud” on page 16.

Reader

Reader displays web articles without ads or clutter, so you can read without distractions. On a webpage with an article, you can use Reader to view just the article.

View an article in Reader: Tap the Reader button, if it appears in the address field.

Adjust the font size	Tap  .
Bookmark, add to Reading List or Home Screen, share, or print the article	Tap  .
Return to normal view	Tap Done.

Entering text and filling out forms

Enter text: Tap a text field to bring up the keyboard.

Move to another text field	Tap the text field, or tap Next or Previous.
Submit a form	Tap Go or Search, or the link on the page to submit the form, if available.

To enable AutoFill to help fill out forms, go to Settings > Safari > AutoFill.

Searching

The search field in the upper-right corner lets you search the web, and the current page or PDF.

Search the web, and the current page or searchable PDF: Enter text in the search field.

- *To search the web:* Tap one of the suggestions that appear, or tap Search.
- *To find the search text on the current page or PDF:* Scroll to the bottom of the screen, then tap the entry below On This Page.

The first instance is highlighted. To find later occurrences, tap ►.


Change the search engine

Go to Settings > Safari > Search Engine.

Bookmarks and history

Bookmark a webpage: Open the page, tap , then tap Add Bookmark.


When you save a bookmark, you can edit its title. By default, bookmarks are saved at the top level of Bookmarks. Tap Bookmarks to choose another folder.

View previous webpages (history): Tap , then tap History. To clear the history, tap Clear.

Open a bookmarked webpage

Tap .

Edit a bookmark or bookmark folder

Tap , choose the folder that has the bookmark or folder you want to edit, then tap Edit.

Use iCloud to keep bookmarks up to date on your iOS devices and computers

Go to Settings > iCloud, then turn on Bookmarks. See “iCloud” on page 16.

Sync bookmarks with the web browser on your computer

See “Syncing with iTunes” on page 18.

Printing webpages, PDFs, and other documents

Print a webpage, PDF, or Quick Look document: Tap , then tap Print.

For more information, see “Printing” on page 28.

Web clips

You can create web clips, which appear as icons on the Home screen.

Add a web clip: Open the webpage and tap . Then tap “Add to Home Screen.”

When you open a web clip, Safari automatically zooms to the part of the webpage showing when you saved the web clip. Unless the webpage has a custom icon, that image is also used for the web clip icon on the Home screen.

Web clips are backed up by iCloud and by iTunes, but they aren’t synced by iTunes or MobileMe. They also aren’t pushed to other devices by iCloud.



Adding music and audio

To get music and other audio content onto iPhone:

- Purchase and download content from the iTunes Store on iPhone. See Chapter 21, “iTunes Store,” on page 115. (You can also go to the iTunes Store from Music by tapping the Store button when browsing.)
- Use Automatic Download to automatically download new music purchased on your other iOS devices and computers. See “iCloud” on page 16.
- Sync with iTunes on your computer. You can sync all of your media, or you can select specific songs and other items. See “Syncing with iTunes” on page 18.
- Use iTunes Match to store your music library in iCloud and access it on all your iOS devices and computers. See “iTunes Match” on page 79.

Playing songs and other audio

WARNING: For important information about avoiding hearing loss, see the *Important Product Information Guide* at www.apple.com/support/manuals/iphone.


The buttons along the bottom of the screen let you browse content on iPhone by playlists, artists, songs, and other categories.


Play a song or other item: Tap the item.

Use the onscreen controls to control playback. You can also use the buttons on the earphones. See “Apple Earphones with Remote and Mic” on page 33.

View the Now Playing screen: Tap Now Playing.




Customize the browse buttons	Tap More, tap Edit, then drag an icon over the button you want to replace.
Get more podcast episodes	Tap Podcasts (tap More first, if Podcasts isn't visible) then tap a podcast to see available episodes.
Shake to shuffle	Shake iPhone to turn shuffle on and change songs. Shake again to change to another song. To turn Shake to Shuffle on or off, go to Settings > Music.
Play music on AirPlay speakers or Apple TV	Tap  . See "AirPlay" on page 34.
Display a song's lyrics	Tap the album artwork while playing a song. (Lyrics appear, if you've added them to the song using the song's Info window in iTunes and you've synced iPhone with iTunes.)
Set options for Music	Go to Settings > Music.

When using another app, you can display the audio playback controls by double-clicking the Home button , then flicking from left to right along the bottom of the screen.




The controls operate the currently playing app, or—if the music is paused—the most recent app that played. The icon for the app appears on the right. Tap it to open the app. Flick right again to display a volume control and the AirPlay button (when in range of an Apple TV or AirPlay speakers).

Double-clicking the Home button  also displays audio playback controls when the screen is locked.

Additional audio controls


To display additional controls, tap the album artwork on the Now Playing screen. You can see elapsed time, remaining time, and the song number. The song's lyrics also appear, if you've added them to the song in iTunes.

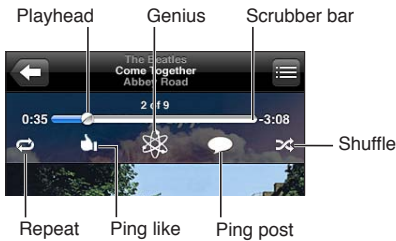


Repeat songs

Tap .

 = repeat all songs in the album or list

 = repeat the current song only

 = no repeat

Shuffle songs

Tap .


 = shuffle songs

 = play songs in order

Skip to any point in a song

Drag the playhead along the scrubber bar. Slide your finger down to slow down the scrub rate.

Make a Genius playlist


Tap . See "Genius" on page 79.

Use Ping


See "Following artists and friends" on page 116.


Podcast and audiobook controls


Podcast and audiobook controls and information appear on the Now Playing screen when you begin playback.

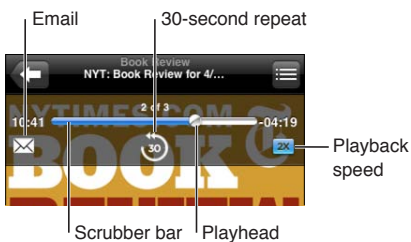


Set the playback speed

Tap . Tap again to change the speed.

 = Play at double speed.

 = Play at half speed.

 = Play at normal speed.

Skip to any point along the timeline

Drag the playhead along the scrubber bar. Slide your finger down to slow down the scrub rate.

Show or hide the controls

Tap the center of the screen.

Hide podcast info

Go to Settings > Music.

Using Siri or Voice Control with Music

You can use Siri (iPhone 4S) or Voice Control to control music playback on iPhone. See Chapter 4, “Siri,” on page 39 and “Voice Control” on page 30.

Control music playback	Say “play” or “play music.” To pause, say “pause” or “pause music.” You can also say “next song” or “previous song.”
Play an album, artist, or playlist	Say “play,” then say “album,” “artist,” or “playlist” and the name.
Shuffle the current playlist	Say “shuffle.”
Find out more about the currently playing song	Say “what’s playing,” “what song is this,” “who sings this song,” or “who is this song by.”
Use Genius to play similar songs	Say “Genius,” “play more like this,” or “play more songs like this.”
Cancel Voice Control	Say “cancel” or “stop.”

Browsing album artwork in Cover Flow

When you browse music, rotate iPhone to see your iTunes content in Cover Flow and browse your music by album artwork.




Browse album artwork: Drag left or right.

See the tracks on an album	Tap the album artwork or ⓘ. Drag up or down to scroll; tap a track to play it.
Return to the artwork	Tap the title bar. Or tap ⓘ again.

Viewing tracks on an album

See all the tracks on the album that contains the current song: On the Now Playing screen, tap ☰. Tap a track to play it. Tap the thumbnail to return to the Now Playing screen.

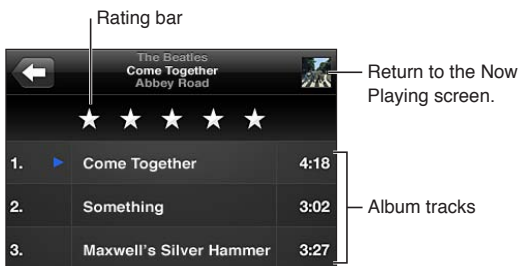

In track list view, you can assign ratings to songs. You can use ratings when creating smart playlists in iTunes.

Searching audio content

You can search the titles, artists, albums, and composers of songs, podcasts, and other audio content on iPhone.

Search music: Enter text in the search field at the top of a song list, playlist, artist list, or other view of your Music content.

You can also search audio content from the Home screen. See “Searching” on page 29.

iTunes Match

iTunes Match stores your music library in iCloud—including songs imported from CDs—and lets you enjoy your collection anywhere, anytime on your iPhone and other iOS devices and computers. iTunes Match is available as a paid subscription.

Note: iTunes Match is not available in all areas. Cellular data charges may apply if Settings > Music > Use Cellular Data is turned on.

Subscribe to iTunes Match: In iTunes on your computer, choose Store > Turn On iTunes Match, then click the Subscribe button.

Once you subscribe, iTunes adds your music, playlists, and Genius Mixes to iCloud. Your songs that match music already in the iTunes Store are automatically available in iCloud. Any remaining songs are uploaded. You can download and play matched songs at iTunes Plus quality (256 kbps DRM-free AAC), even if your original was of lower quality. For more information, see www.apple.com/icloud/features.

Turn on iTunes Match

Go to Settings > Music.

Turning on iTunes Match removes synced music from iPhone, and disables Genius Mixes and Genius Playlists.

Genius

A Genius playlist is a collection of songs from your library that go great together. You can create Genius playlists in iTunes and sync them to iPhone. You can also create and save Genius playlists directly on iPhone.

A Genius Mix is a selection of songs of the same kind of music, recreated from your library each time you listen to the mix.

To use Genius on iPhone, first turn on Genius in iTunes, then sync iPhone with iTunes. Genius Mixes are synced automatically, unless you manually manage your music and choose which mixes you want to sync in iTunes. Genius is a free service, but it requires an Apple ID.

When you sync a Genius Mix, iTunes may select and sync songs from your library that you haven't specifically chosen to sync.

Browse Genius Mixes: Tap Genius (tap More first, if Genius isn't visible). Flick left or right to access your other mixes. To play a mix, tap ►.

Make a Genius playlist: View Playlists, then tap Genius Playlist and choose a song in the list.

To make a Genius playlist from the Now Playing screen, tap to display the controls, then tap ⌘.


Save a Genius playlist	In the playlist, tap Save. The playlist is saved in Playlists with the title of the song you picked.
Refresh a Genius playlist	In the playlist, tap Refresh.
Make a Genius playlist using a different song	Tap Genius Playlist, then tap New and pick a song.
Delete a saved Genius playlist	Tap the Genius playlist, then tap Delete.

Genius playlists created on iPhone are copied to your computer when you sync with iTunes.

Note: Once a Genius playlist is synced to iTunes, you can't delete it directly from iPhone. Use iTunes to edit the playlist name, stop syncing, or delete the playlist.




Playlists

You can create and edit your own playlists on iPhone, or edit playlists synced from iTunes on your computer.

Create a playlist: View Playlists, then tap "Add Playlist" near the top of the list. Enter a title, tap  to select songs and videos you want to include, then tap Done.

When you make a playlist and then sync iPhone to your computer, the playlist is synced to your iTunes library.

Edit a playlist: View Playlists and select the playlist to edit. Tap Edit, then:

- *To add more songs:* Tap .
- *To delete a song:* Tap . Deleting a song from a playlist doesn't delete it from iPhone.
- *To move a song higher or lower in the list:* Drag .

Your edits are copied to the playlist in your iTunes library, either the next time you sync iPhone with your computer, or wirelessly via iCloud if you've subscribed to iTunes Match.

Delete a playlist	In Playlists, tap the playlist you want to delete, then tap Delete.
Clear a playlist	In Playlists, tap the playlist you want to clear, then tap Clear.
Delete a song from iPhone	In Songs, swipe the song, then tap Delete. The song is deleted from iPhone, but not from your iTunes library on your Mac or PC.

Home Sharing

Home Sharing lets you play music, movies, and TV shows on iPhone from the iTunes library on your Mac or PC. iPhone and your computer must be on the same Wi-Fi network. On your computer, iTunes must be open, with Home Sharing turned on and logged in using the same Apple ID as Home Sharing on iPhone.

Note: Home Sharing requires iTunes 10.2 or later, available at www.itunes.com/download. Bonus content, such as digital booklets and iTunes Extras, can't be shared.

Play music from your iTunes library on iPhone:

- 1 In iTunes on your computer, choose Advanced > Turn On Home Sharing.
- 2 Log in, then click Create Home Share.
- 3 On iPhone, go to Settings > Music, then log in to Home Sharing using the same Apple ID and password.
- 4 In Music, tap More, then tap Shared and choose your computer's library.

Return to content on iPhone

Tap Shared and choose My iPhone.

Messages

9





Sending and receiving messages


WARNING: For important information about driving safely, see the *Important Product Information Guide* at www.apple.com/support/manuals/iphone.


Messages supports text messages with other SMS and MMS devices, and with other iOS devices using iMessage. With MMS and iMessage, you can also include photos, videos, and other info.

Use iMessage to send messages over Wi-Fi or cellular data connections to other iOS 5 users. You can see when the other person is typing, and let others be notified when you've read their messages. Because iMessages are displayed on all of your iOS 5 devices logged in to the same account, you can start a conversation on one of your devices, then continue it on another device. iMessages are also encrypted.

Note: SMS and MMS require a cellular connection, and may not be available in all areas. Cellular data charges or additional fees may apply.

Send a text message: Tap , then tap  and choose a contact, search your contacts by entering a name, or enter a phone number or email address manually. Enter the message, then tap Send.


Note: An alert badge  appears if a message can't be sent. Tap the alert in a conversation to try sending the message again.

Conversations are saved in the Messages list. A blue dot  indicates unread messages. Tap a conversation to view or continue it. In an iMessage conversation, your outgoing messages appear in blue.



Tap the attach media button to include a photo or video.

Tap to enter text.

Use emoji characters	Go to Settings > General > Keyboard > International Keyboards > Add New Keyboard, then tap Emoji to make that keyboard available. To enter Emoji characters when typing a message, tap  to bring up the Emoji keyboard. See “Switching keyboards” on page 169.
Resume a previous conversation	Tap the conversation in the Messages list, then enter a message and tap Send.
Display earlier messages in the conversation	Scroll to the top (tap the status bar) and tap Load Earlier Messages.
Receive iMessages using another email address	Go to Settings > Messages > Receive At > Add Another Email.
Specify the phone number or Apple ID email address that appears in the “from” field when you start a new conversation	Go to Settings > Messages > Receive At > Caller ID. Existing conversations aren’t affected when you change this setting.
Follow a link in a message	Tap the link. A link may open a webpage in Safari, or dial a phone number, for example.
Forward a conversation	Select a conversation, then tap Edit. Select parts to include, then tap Forward.
Add someone to your contacts list	Tap a phone number in the Messages list, then tap “Add to Contacts.”
Notify others when you’ve read their messages	Go to Settings > Messages and turn on Send Read Receipts.
Set other options for Messages	Go to Settings > Messages.
Manage notifications for messages	See “Notifications” on page 159.
Set the alert sound for incoming text messages	See “Sounds and the Ring/Silent switch” on page 161.

Sending messages to a group


Group messaging lets you send a message to multiple recipients. Group messaging works with iMessage and MMS (not available in all areas).

Send messages to a group: Tap , then enter multiple recipients.




Note: With MMS, group messaging must also be turned on in Settings > Messages, and replies are sent only to you—they aren’t copied to the other people in the group.

Sending photos, videos, and more

With iMessage or MMS, you can send photos, videos, locations, contact info, and voice memos.

Send a photo or video: Tap .

The size limit of attachments is determined by your service provider. iPhone may compress photo and video attachments, if necessary.

Send a location	In Maps, tap  for a location, tap Share Location (bottom of screen), then tap Message.
Send contact info	In Contacts, choose a contact, tap Share Contact (bottom of screen), then tap Message.
Send a voice memo	In Voice Memos, tap  , tap the voice memo, tap Share, then tap Message.
Save a photo or video you receive to your Camera Roll album	Tap the photo or video, then tap  .

Copy a photo or video	Touch and hold the attachment, then tap Copy.
Save contact information you receive	Tap the contact bubble, then tap Create New Contact or "Add to Existing Contact."

Editing conversations

If you want to keep just part of a conversation, you can delete the parts you don't want. You can also delete entire conversations from the Messages list.

Edit a conversation: Tap Edit, select the parts to delete, then tap Delete.

Clear all text and attachments, without deleting the conversation	Tap Edit, then tap Clear All.
Delete a conversation	Swipe the conversation, then tap Delete.

Searching messages

You can search the content of conversations in the Messages list.

Search a conversation: Tap the top of the screen to display the search field, then enter the text you're looking for.

You can also search conversations from the Home screen. See "Searching" on page 29.

Calendar

10




About Calendar

Calendar makes it easy to stay on schedule. You can view individual calendars, or several calendars at once. You can view your events by day, by month, or in a list. You can search the titles, invitees, locations, and notes of events. If you enter birthdays for your contacts, you can view those birthdays in Calendar.

You can also make, edit, or cancel events on iPhone, and sync them back to your computer. You can subscribe to Google, Yahoo!, or iCal calendars. If you have a Microsoft Exchange or iCloud account, you can receive and respond to meeting invitations.

Viewing your calendars

You can view calendars individually, or as a combined calendar. This makes it easy to manage work and family calendars at the same time.

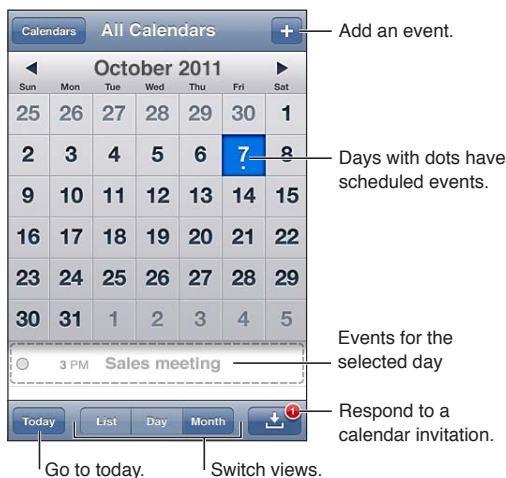

Change views: Tap List, Day, or Month. To view by week, rotate iPhone sideways.

In Day view, swipe left or right to move between dates.

View the Birthday calendar	Tap Calendars, then tap Birthdays to include birthdays from your Contacts with your events.
See the details of an event	Tap the event. You can tap information about the event to get more details. If an address for the location is specified, for example, tap it to open Maps.

Edit or delete a calendar	Tap Calendars, then tap Edit.
Select calendars to view	Tap Calendars, then tap to select the calendars you want to view. The events for all selected calendars appear in a single calendar on iPhone.

Adding events


You can create and update calendar events directly on iPhone.


Add an event: Tap **+** and enter event information, then tap Done.

You can also touch and hold an empty spot on a calendar to create a new event. Drag the grab points to adjust the event's duration.

Set an alert	Tap Alert, then set an alert from 5 minutes to two days before the event.
Set a default alert for events	Go to Settings > Mail, Contacts, Calendars > Default Alert Times
Update an event	Tap Edit and change event information. To quickly adjust an event's time or duration, touch and hold the event to select it, then drag it to a new time or use the grab points to change its duration.
Delete an event	Tap the event, tap Edit, then scroll down and tap Delete Event.
Invite others to an event	Tap Invitees to select people from Contacts. This requires an iCloud, a Microsoft Exchange, or CalDAV account.

Responding to invitations

If you have an iCloud, Microsoft Exchange account, or a supported CalDAV account, you can receive and respond to meeting invitations from people in your organization. When you receive an invitation, the meeting appears in your calendar with a dotted line around it.  appears in the lower-right corner of the screen.

Respond to an invitation: Tap an invitation in the calendar. Or tap  to display the Event screen, and then tap an invitation.

See information about the organizer	Tap "invitation from."
See other invitees	Tap Invitees. Tap a name to see that person's contact information.
Add comments in reply	Tap Add Comments. Your comments are visible to the organizer, but not to other attendees. Comments may not be available, depending on the calendar service you're using.
Set your availability	Tap Availability and select "busy" or "free."

Searching calendars

In List view, you can search the Titles, Invitees, Locations, and Notes fields of the events in your calendars. Calendar searches just the events for the calendars you're currently viewing.

Search for events: Tap List, then enter text in the search field.

Calendar events can also be included in searches from the Home screen. See "Searching" on page 29.

Subscribing to calendars

You can subscribe to calendars that use the iCalendar (.ics) format. Many calendar-based services support calendar subscriptions, including iCloud, Yahoo!, Google, and the iCal application in OS X.

Subscribed calendars are read-only. You can read events from subscribed calendars on iPhone, but you can't edit events or create new ones.

Subscribe to a calendar: Go to Settings > Mail, Contacts, Calendars, then tap Add Account. Tap Other, then tap Add Subscribed Calendar.

You can also subscribe to an iCal (or other .ics) calendar published on the web, by tapping a link to the calendar.

Importing calendar events from Mail

You can add events to a calendar by importing a calendar file from an email message. You can import any standard .ics calendar file.

Import events from a calendar file: In Mail, open the message and tap the calendar file.

Calendar accounts and settings

There are several settings in Settings > Mail, Contacts, Calendars that affect Calendar and your calendar accounts.

Calendar accounts are also used to sync to-do items for Reminders.

Add a CalDAV account: Go to Settings > Mail, Contacts, Calendars, tap Add an Account, then tap Other. Under Calendars, tap Add CalDAV Account.

These options apply to all of your calendars:

Set the calendar alert tones	Go to Settings > Sounds > Calendar Alerts.
Sync past events	Go to Settings > Mail, Contacts, Calendars > Sync, then choose time period. Future events are always synced.
Set alerts to sound when you receive a meeting invitation	Go to Settings > Mail, Contacts, Calendars and turn on New Invitation Alerts.
Turn on Calendar time zone support	Go to Settings > Mail, Contacts, Calendars > Time Zone Support.
Set a default calendar	Go to Settings > Mail, Contacts, Calendars > Default Calendar.
Use iCloud to keep Calendar up-to-date on your iOS devices and computers	Go to Settings > iCloud, then turn on Calendar. See "iCloud" on page 16.

Important: When Time Zone Support is on, Calendar displays event dates and times in the time zone of the city you selected. When Time Zone Support is off, Calendar displays events in the time zone of your current location as determined by the network time. Some carriers don't support network time in all areas. When you travel, iPhone may not display events or sound alerts at the correct local time. To manually set the correct time, see "Date & Time" on page 167.



Viewing photos and videos

Photos lets you view photos and videos on iPhone, in your:

- Camera Roll album—photos and videos you took with either of the built-in cameras, or saved from an email, text message, or webpage
- Photo Stream album—photos streamed from iCloud (see “Photo Stream” on page 94)
- Photo Library and other albums synced from your computer (see “Syncing with iTunes” on page 18)



View photos and videos: Tap an album, then tap a thumbnail to see the photo or video in full screen.

Albums you sync with iPhoto 8.0 (iLife '09) or later, or Aperture v3.0.2 or later, can be viewed by events or by faces. You can also view photos by location, if they were taken with a camera that supports geotagging.

Show or hide the controls	Tap the full-screen photo or video.
See the next or previous photo or video	Flick left or right.
Zoom in or out	Double-tap or pinch.

Pan a photo	Drag the photo.
Play a video	Tap ► in the center of the screen.
View a video in full screen, or fit to screen	Double-tap the video.
Stream a video to an HDTV	See "AirPlay" on page 34.
Edit photos or trim videos	See "Editing photos" or "Trimming videos" on page 93.

Viewing slideshows

View a slideshow: Tap an album to open it, then tap a photo and tap ►. Select slideshow options, then tap Start Slideshow.


Stream a slideshow to an HDTV	See "AirPlay" on page 34.
Stop a slideshow	Tap the screen.
Set additional options	Go to Settings > Photos.

Organizing photos and videos



You can create, rename, and delete albums on iPhone to help you organize your photos and videos.

Create a album: When viewing albums, tap Edit, then tap Add. Select photos to add to the new album, then tap Done.

Note: Albums created on iPhone aren't synced back to your computer.



Rename an album	Tap Edit, then select an album.
Rearrange albums	Tap Edit, then drag ≡ up or down.
Delete an album	Tap Edit, then tap  .



Sharing photos and videos

Send a photo or video in an email, text message (iMessage or MMS), or Tweet: Choose a photo or video, then tap . If you don't see , tap the screen to show the controls.

Note: To post a Tweet, you must be logged in to your Twitter account. Go to Settings > Twitter.

The size limit of attachments is determined by your service provider. iPhone may compress photo and video attachments, if necessary.


Send multiple photos or videos	While viewing thumbnails, tap  , select the photos or videos, then tap Share.
Copy a photo or video	Touch and hold the photo or video, then tap Copy.
Copy multiple photos or videos	Tap  in the upper-right corner of the screen. Select the photos and videos, then tap Copy.
Paste a photo or video in an email or text (iMessage or MMS) message	Touch and hold where you want to place the photo or video, then tap Paste.

Save a photo or video from an email message	Tap to download the item if necessary, tap the photo or touch and hold the video, then tap Save.
Save a photo or video from a text message	Tap the image in the conversation, tap  , then tap Save.
Save a photo from a webpage	Touch and hold the photo, then tap Save Image.
Share a video on YouTube	While viewing a video, tap  , then tap "Send to YouTube."

Photos and videos that you receive, or that you save from a webpage, are saved to your Camera Roll album.

Printing photos

Print a photo: Tap , then tap Print.


Print multiple photos: While viewing a photo album, tap . Select the photos you want to print, then tap Print.

For more information, see "Printing" on page 28.



About Camera

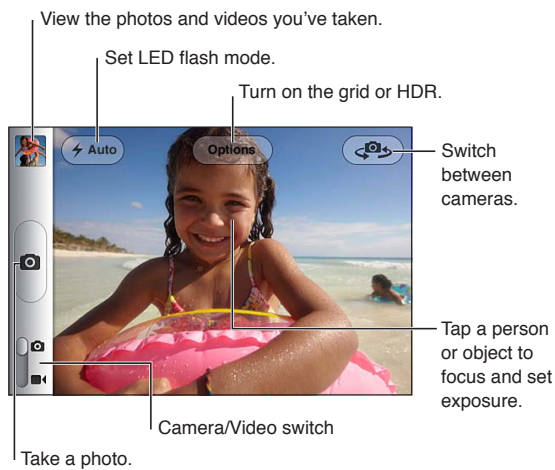

Built-in cameras let you take both still photos and videos. iPhone 4 and iPhone 4S include a front camera for FaceTime and self-portraits (in addition to the camera on the back), and an LED flash.






If Location Services is turned on, photos and videos are tagged with location data that can be used by some apps and photo-sharing websites. See “Location Services” on page 160.



Note: If Location Services is turned off when you open Camera, you may be asked to turn it on. You can use Camera without Location Services.

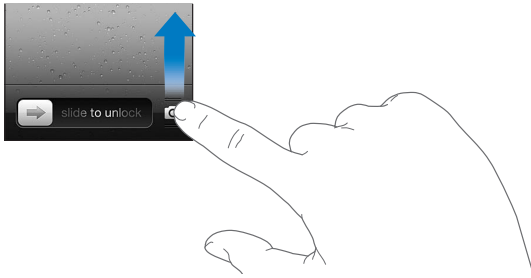Taking photos and videos

To quickly open Camera when iPhone is locked, press the Home button  or the On/Off button, then drag  up.




Take a photo: Make sure the Camera/Video switch is set to , then aim iPhone and tap . You can also take a photo by pressing the volume up button.

Record a video: Slide the Camera/Video switch to , then tap  to start or stop recording, or press the volume up button.

When you take a photo or start a video recording, iPhone makes a shutter sound. You can control the volume with the volume buttons or the Ring/Silent switch.

Note: In some areas, the shutter sound isn't silenced by the Ring/Silent switch.


A rectangle briefly appears where the camera is focused and setting the exposure. When you photograph people, iPhone 4S uses face detection to automatically focus on and balance the exposure across up to 10 faces. A rectangle appears for each face detected.

Zoom in or out	Pinch the screen (rear camera, in camera mode only).
Turn on the grid	Tap Options.
Set focus and exposure	Tap the person or object on the screen. (Face detection is temporarily turned off.)
Lock the focus and exposure	Touch and hold the screen until the rectangle pulses. AE/AF Lock appears on the screen, and the focus and exposure remain locked until you tap the screen again.
Take a screenshot	Press and release the On/Off button and the Home button  at the same time. The screenshot is added to your Camera Roll album.

HDR photos

HDR (iPhone 4 or later) blends the best parts of three separate exposures into a single “high dynamic range” photo. For best results, iPhone and the subject should be stationary.

Turn on HDR: Tap Option, then set HDR. When HDR is on, the flash is turned off.

To keep the normal versions in addition to the HDR versions, go to Settings > Photos. When you keep both versions,  HDR appears in the upper-left corner of the HDR photo (when viewed in your Camera Roll album with the controls visible).

Viewing, sharing, and printing





The photos and videos you take with Camera are saved in your Camera Roll album.

View your Camera Roll album: Flick left-to-right, or tap the thumbnail image in the lower-left corner of the screen. You can also view your Camera Roll album in the Photos app.

To take more photos or videos, tap .


If you have iCloud Photo Stream turned on in Settings > iCloud, new photos also appear in your Photo Stream album and are streamed to your other iOS devices and computers. See “iCloud” on page 16.

For more information about viewing and sharing photos and videos, see “Sharing photos and videos” on page 89 and “Uploading photos and videos to your computer” on page 94.

Show or hide the controls while viewing a full-screen photo or video	Tap the screen.
Email or text a photo or video	Tap  .
Tweet a photo	View the photo in full screen, tap  , then tap Tweet. You must be logged in to your Twitter account. Go to Settings > Twitter. To include your location, tap Add Location.
Print a photo	Tap  . See “Printing” on page 28.
Delete a photo or video	Tap  .

Editing photos

You can rotate, enhance, remove red-eye, and crop photos. Enhancing improves a photo’s overall darkness or lightness, color saturation, and other qualities.

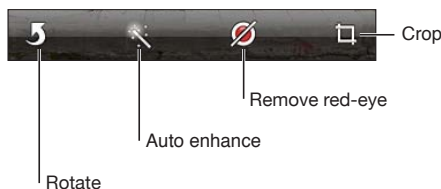

Edit a photo: While viewing a photo in full screen, tap Edit, then choose a tool.

With the red-eye tool, tap each eye to correct it. To crop, drag the corners of the grid, drag the photo to reposition it, then tap Crop. You can also tap Constrain when cropping, to set a specific ratio.

Trimming videos

You can trim the frames from the beginning and end of a video that you just recorded, or from any other video in your Camera Roll album. You can replace the original video, or save the trimmed version as a new video clip.

Trim a video: While viewing a video, tap the screen to display the controls. Drag either end of the frame viewer at the top of the video, then tap Trim.

Important: If you choose Trim Original, the trimmed frames are permanently deleted from the original video. If you choose “Save as New Clip,” a new trimmed video clip is saved in your Camera Roll album and the original video is unaffected.

Uploading photos and videos to your computer

You can upload the photos and videos you take with Camera to photo applications on your computer, such as iPhoto on a Mac.

Upload photos and videos to your computer: Connect iPhone to your computer using the Dock Connector to USB Cable.

- *Mac:* Select the photos and videos you want, then click the Import or Download button in iPhoto or other supported photo application on your computer.
- *PC:* Follow the instructions that came with your photo application.




If you delete the photos and videos from iPhone when you upload them to your computer, they're removed from your Camera Roll album. You can use the Photos settings pane in iTunes to sync photos and videos to the Photos app on iPhone (videos can be synced only with a Mac). See "Syncing with iTunes" on page 18.

Photo Stream

With Photo Stream—a feature of iCloud—photos you take on iPhone are automatically uploaded to iCloud and pushed to all your other devices that have Photo Stream enabled. Photos uploaded to iCloud from your other devices and computers are pushed to your Photo Stream album on iPhone. See "iCloud" on page 16.

Turn on Photo Stream: Go to Settings > iCloud > Photo Stream.

New photos you've taken are uploaded to your Photo Stream when you leave the Camera app and iPhone is connected to the Internet via Wi-Fi. Any other photos added to your Camera Roll—including photos downloaded from email and text messages, images saved from web pages, and screenshots—are also uploaded to your Photo Stream and pushed to your other devices. Photo Stream can share up to 1000 of your most recent photos across your iOS devices. Your computers can keep all your Photo Stream photos permanently.

Save photos to iPhone from Photo Stream	In your Photo Stream album, tap  , select the photos you want to save, then tap Save.
Delete a photo from iCloud	In your Photo Stream album, select the photo, then tap  .
Delete multiple photos from iCloud	In your Photo Stream album, tap  , select the photos you want to delete, then tap Delete.

Note: To delete photos from Photo Stream, you need iOS 5.1 or later on iPhone and all of your other iOS devices. See support.apple.com/kb/HT4486.

Although deleted photos are removed from the Photo Stream on your devices, the original remains in the Camera Roll album on the device the photo originated from.




About YouTube

YouTube lets you watch short videos submitted by people from around the world. Some YouTube features require a YouTube account. To set up an account, go to www.youtube.com.

Note: YouTube may not be available in all languages or areas.

Browsing and searching for videos


Browse videos: Tap any browse button at the bottom of the screen, or tap More to see additional browse buttons. If you're watching a video, tap Done to see the browse buttons.

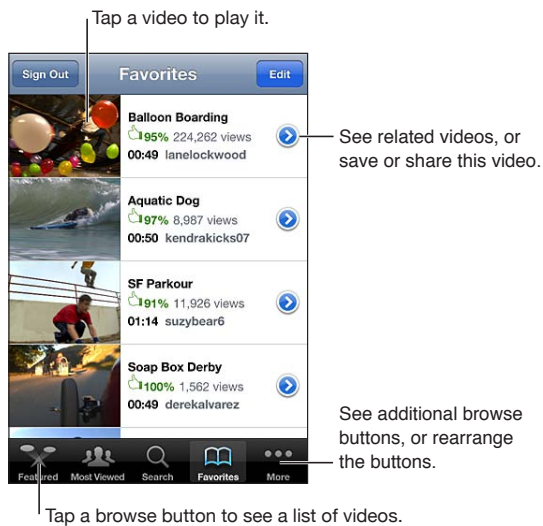

Change the browse buttons	Tap More, then tap Edit. Drag a button to the bottom of the screen, over the button you want to replace. Drag a button left or right to move it. When you're finished, tap Done.
Browse related videos	Tap next to any video in a list.
Search for a video	Tap Search at the bottom of the screen, then tap the search field.
See more videos submitted by the same account	Tap next to the current video on the video information screen, then tap More Videos.

Playing videos

Watch a video: Tap any video as you browse. Playback starts when enough of the video is downloaded to iPhone. The shaded portion of the scrubber bar shows download progress.

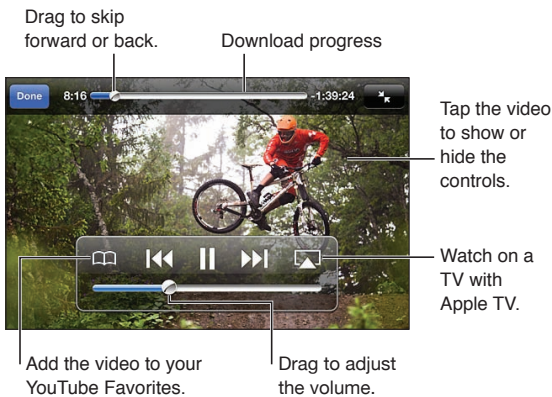


Pause or resume playback	Tap or ▶ . You can also press the center button on the iPhone earphones.
Start again from the beginning	Tap ◀◀ while the video is playing. If you've watched less than five seconds of the video, you'll skip instead to the previous video in the list.
Scan back or forward	Touch and hold ◀◀ or ▶▶ .
Skip to any point	Drag the playhead along the scrubber bar.
Skip to the next or previous video in a list	Tap ▶▶ to skip to the next video. Tap ◀◀ twice to skip to the previous video. If you've watched less than five seconds of the video, tap only once.
Switch between fill screen and fit screen	Double-tap the video. You can also tap 📺 to make the video fill the screen, or tap 📺 to make it fit the screen.
Watch YouTube on a TV	Connect iPhone to your TV or AV receiver using AirPlay or a cable. See "Watching videos on a TV" on page 127.
Stop watching a video	Tap Done.

Keeping track of videos you like



Add a video to your list of favorites or to a playlist: Tap **📌** next to a video to see buttons for adding the video to a list.

Add a video to Favorites	Tap "Add to Favorites." If you're watching the video, tap 📌 .
Add a video to a playlist	Tap "Add to Playlist" on the video information screen, then tap an existing playlist or tap + to create a new playlist.
Delete a favorite	Tap Favorites, tap Edit, and then tap ⊖ next to the video.
Delete a video from a playlist	Tap Playlists, tap the playlist, tap Edit, then tap ⊖ .
Delete a playlist	Tap Playlists, tap Edit, then tap ⊖ .
Subscribe to an account	Tap 📌 next to the current video (above the Related Videos list). Then tap More Videos, scroll to the bottom of the list, and tap "Subscribe to <i>account</i> ."
Unsubscribe from an account	Tap Subscriptions (tap More first if you don't see it), tap an account in the list, then tap Unsubscribe.

Sharing videos, comments, and ratings

Show the controls for sharing, commenting, and rating: Tap  next to the video.

Email a link to a video

Tap  next to a video and tap Share Video. Or, if you're watching the video, just tap .



Rate or comment on a video

On the More Info screen, tap "Rate, Comment, or Flag," then choose "Rate or Comment."

Send a video to YouTube

Open the Photos app, select the video, then Tap .

Getting information about a video

View a description and viewer comments: Tap  next to the video in a list, then tap  again when it appears at the top of the screen.

Sending videos to YouTube

If you have a YouTube account, you can send videos directly to YouTube. See "Sharing photos and videos" on page 89.



Viewing stock quotes

Stocks lets you see the latest available quotes for your selected stocks, funds, and indexes.

Quotes may be delayed up to 20 minutes or more, depending upon the reporting service.

Add a stock, fund, or index to the stock reader: Tap ⓘ, then tap +. Enter a symbol, company name, fund name, or index, then tap Search.

Show the change in value of a stock, fund, or index over time: Tap the stock, fund, or index in your list, then tap 1d, 1w, 1m, 3m, 6m, 1y, or 2y.

When you view a chart in landscape orientation, you can touch the chart to display the value for a specific point in time.



Use two fingers to see the change in value over a specific period of time.



You can also view your stock ticker in Notification Center. See “Notifications” on page 31.

Delete a stock

Tap ⓘ and tap ⓪ next to a stock, then tap Delete.

Change the order of the list

Tap ⓘ. Then drag ≡ next to a stock or index to a new place in the list.

Switch the view to percentage change, price change, or market capitalization

Tap any of the values along the right side of the screen. Tap again to switch to another view.

Use iCloud to keep your stock list up to date on your iOS devices

Go to Settings > iCloud > Document & Data, then turn on Documents & Data (it’s on by default). See “iCloud” on page 16.

Getting more information

See the summary, chart, or news page for a stock, fund, or index: Select the stock, fund, or index in your list, then flick the pages underneath the stock reader to view the summary, chart, or news page.


On the news page, you can scroll up or down to read headlines, or tap a headline to view the article in Safari.

See more stock information at Yahoo.com: Select the stock, fund, or index in your list, then tap !



Finding locations

WARNING: For important information about driving and navigating safely, see the *Important Product Information Guide* at www.apple.com/support/manuals/iphone.

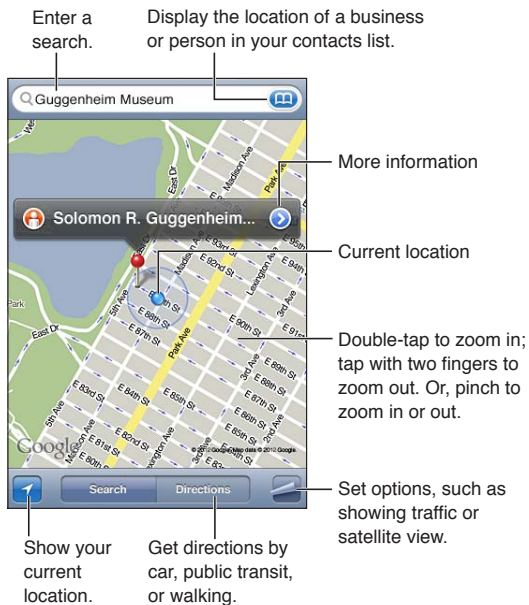





Find a location: Tap the search field to bring up the keyboard. Type an address or other information, then tap Search.

You can search for information such as:

- Intersection (“8th and market”)
- Area (“greenwich village”)
- Landmark (“guggenheim”)
- Zip code
- Business (“movies,” “restaurants san francisco ca,” “apple inc new york”)

You can also tap  to find the location of a contact.

See the name or description of a location	Tap the pin.
See a list of the businesses found in a search	Tap  , then tap List. Tap a business to see its location.
Find your current location	Tap  . Your current location is shown by a blue marker. If your location can't be determined precisely, a blue circle appears around the marker. The smaller the circle, the greater the precision.
Show which way you're facing	Tap  again. The icon changes to  and the map rotates to show your heading.
Mark a location	Touch and hold the map until the drop pin appears.









Important: Maps, directions, and location-based apps depend on data services. These data services are subject to change and may not be available in all areas, resulting in maps, directions, or location-based information that may be unavailable, inaccurate, or incomplete. Compare the information provided on iPhone to your surroundings, and defer to posted signs to resolve any discrepancies.

If Location Services is turned off when you open Maps, you may be asked to turn it on. You can use Maps without Location Services. See “Location Services” on page 160.


Getting directions



Get directions:

- 1 Tap Directions.
- 2 Enter starting and ending locations.
Tap  in either field to choose a location in Bookmarks (including your current location or the dropped pin), a recent location, or a contact. If  isn't visible, tap  to delete the contents of the field.
- 3 Tap Route, then select directions for driving () , public transit () , or walking ().
- 4 Do one of the following:
 - To view directions one step at a time, tap Start, then tap  to see the next leg of the trip.
 - To view all the directions in a list, tap , then tap List.
Tap any item in the list to see a map showing that leg of the trip. Tap Route Overview to return to the overview screen.


5 If multiple routes appear, choose the one you want to use.

If you're taking public transit, tap  to set your departure or arrival time, and to choose a schedule for the trip. Tap the icon at a stop to see the departure time for that bus or train, and to get a link to the transit provider's website or contact info.

Get directions from a location on the map Tap the pin, tap , then tap Directions To Here or Directions From Here.

Bookmark a location Tap "Add to Bookmarks."

Getting and sharing info about a location

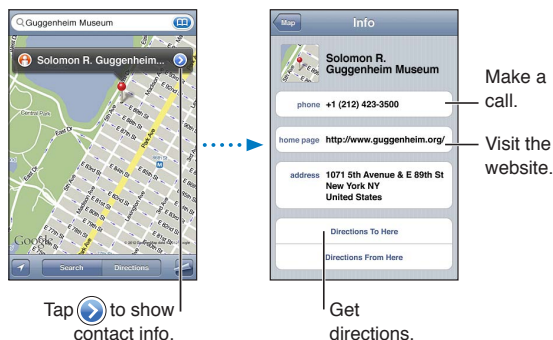

Get or share info about a location: Tap the pin, then tap .

Add a business to your contacts Tap "Add to Contacts."

Tweet, text, or email your location Tap Share Location.

Note: To post a Tweet, you must be logged in to your Twitter account. Go to Settings > Twitter.

Showing traffic conditions

You can show traffic conditions for major streets and highways on the map.

Show or hide traffic conditions: Tap , then tap Show Traffic or Hide Traffic.


Streets and highways are color-coded to indicate the flow of traffic:


- Gray—no data is available
- Green—posted speed limit
- Yellow—slower than the posted speed limit
- Red—stop and go


Note: Traffic conditions aren't available in all areas.

Map views



See a satellite view or hybrid view: Tap , then select the view you want.

See the Google Street View of a location: Tap . Flick left or right to pan through the 360° panoramic view (the inset shows your current view). Tap an arrow to move down the street. To return to map view, tap the map inset in the lower-right corner.

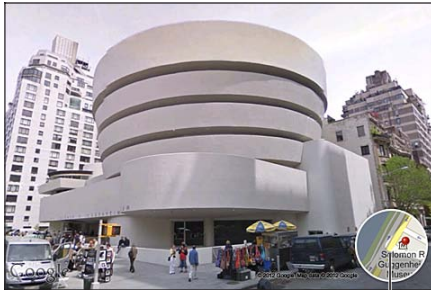

Tap to return to map view

Note: Street View may not be available in all areas.



Getting weather information

Tap Weather on the Home screen to get the current temperature and six-day forecast for one or more cities around the world.



If the weather board is light blue, it's daytime in that city. If the board is dark purple, it's nighttime.


Add a city: Tap ⓘ, then tap +. Enter a city or zip code, then tap Search.

Switch to another city	Flick left or right.
Reorder cities	Tap ⓘ, then drag ≡ up or down.
Delete a city	Tap ⓘ and tap ⓪, then tap Delete.
Display the temperature in Fahrenheit or Celsius	Tap ⓘ, then tap °F or °C.
Use iCloud to push your list of cities to your other iOS devices	Go to Settings > iCloud > Document & Data, then turn on Documents & Data (it's on by default). See "iCloud" on page 16.
See information about a city at Yahoo.com	Tap 📄!.



About Notes

Type notes on iPhone, and iCloud makes them available on your other iOS devices and Mac computers. You can also read and create notes in other accounts, such as Gmail or Yahoo.

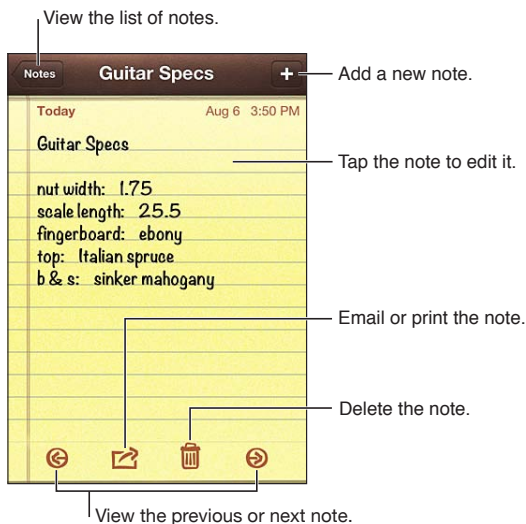

Writing notes

Add a note: Tap **+**, then type your note and tap Done.

Use iCloud to keep your notes up to date on your iOS devices and Mac computers

If you use a me.com or mac.com email address for iCloud, go to Settings > iCloud and turn on Notes.

If you use a Gmail or other IMAP account for iCloud, go to Settings > Mail, Contacts, Calendars and turn on Notes for the account.

See "iCloud" on page 16.

Create a note in a specific account

Tap Accounts and select the account, before you tap **+** to create the note.


Set the default account for new notes

If you tap **+** while viewing All Notes, the note is created in the default account you select in Settings > Notes.

Reading and editing notes

Notes are listed with the most recent at the top. If you use more than one iOS device or computer with your iCloud account, notes from all devices are listed. If you share notes with an application on your computer or with other online accounts such as Yahoo or Gmail, those notes are organized by account.

Read a note: Tap the note in the list. To see the next or previous note, tap ➡ or ⬅.

Change the font	Go to Settings > Notes.
See notes in a specific account	Tap Accounts and choose the account.
See notes in all accounts	Tap Accounts and choose All Notes.
Edit a note	Tap anywhere on the note to bring up the keyboard.
Delete a note	While looking at the list of notes, swipe left or right across the note. While reading a note, tap  .

Searching notes

You can search the text of all your notes.

Search for notes: While viewing a list of notes, flick down to scroll to the top of the list and reveal the search field, then tap in the field and type what you're looking for.

You can also search for notes from the iPhone Home screen. See "Searching" on page 29.

Printing or emailing notes


To email a note, iPhone must be set up for email. See "Setting up mail and other accounts" on page 16.

Print or email a note: While reading the note, tap .



About Clock

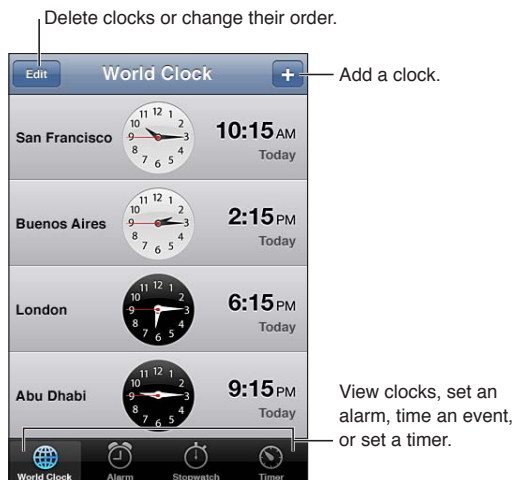

You can use Clock to check the time anywhere in the world, set an alarm, time an event, or set a timer.



Setting world clocks

You can add clocks to show the time in other major cities and time zones around the world.


Add a clock: Tap **+**, then type the name of a city. If you don't see the city you're looking for, try a major city in the same time zone.

Rearrange clocks	Tap Edit, then drag 
Delete a clock	Tap Edit, then tap 


Setting alarms

You can set multiple alarms. Set each alarm to repeat on days you specify, or to sound only once.

Set an alarm: Tap Alarm and tap **+**.

Change settings for an alarm	Tap Edit, then tap  .
------------------------------	--

Delete an alarm	Tap Edit, then tap  .
-----------------	--

If at least one alarm is set and turned on,  appears in the iPhone status bar at the top of the screen. If an alarm is set to sound only once, it turns off automatically after it sounds. You can turn it on again to reenable it.

Important: Some carriers don't support network time in all locations. If you're traveling, iPhone alerts may not sound at the correct local time. See "Date & Time" on page 167.

Using the stopwatch

Time an event: Tap Stopwatch, then tap Start.

Stopwatch keeps timing if you switch to another app.

Setting a timer

You can set a timer that keeps running even while you use other apps.

Set a timer: Tap Timer, flick to set the duration, and tap Start.


Choose the alert sound	Tap When Timer Ends.
------------------------	----------------------

Set a sleep timer for iPhone	Set the duration, tap When Timer Ends, and choose Stop Playing. iPhone stops playing music or video when the timer ends.
------------------------------	--



About Reminders

Reminders lets you organize your life with lists—complete with due dates and locations. You can be reminded of an item on a specific day and date, or when you're approaching or leaving a location, such as your home or office. Reminders works with your calendar accounts, so changes you make update automatically on your other iOS devices and computers.

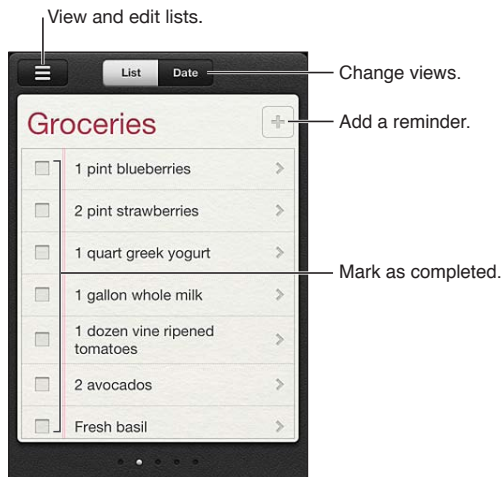

Switch between List view and Date view: At the top of the screen, tap List or Date.

Setting a reminder

You can set a reminder for a date and time, for a location, or for both.

Add a reminder: In Reminders, tap **+**, then enter a description and tap Done.







After you add a reminder, you can fine-tune its settings.

Set a location for a reminder	Tap the reminder, then tap Remind Me. Turn on “At a Location” and select When I Leave or When I Arrive, or both. To change the location to somewhere other than where you are, tap Current Location, then tap Choose Address and pick a location from Contacts. See “About location reminders” on page 111.
Set a due date for a reminder	Tap the reminder, then tap Remind Me. Turn on “On a Day,” then set the date and time you want to be reminded. Reminders that are due and uncompleted are displayed in Notification Center.
Add notes to a reminder	Tap the reminder, then tap Show More. Tap Notes.
Move a reminder to another list	Tap the reminder, then tap Show More. Tap List and choose a new list. To create or edit lists, see “Managing reminders in List view” on page 110.
Delete a reminder	Tap the reminder, tap Show More, then tap Delete.
Edit a reminder	Tap the reminder, then tap its name.
Mark a reminder as completed	Tap the box next to the item, so that a checkmark appears. Completed items are shown in the Completed list. See “Managing completed reminders” on page 111.
Set the tone played for reminders	Go to Settings > Sound.
Use iCloud to keep Reminders up-to-date on your iOS devices and computers	Go to Settings > iCloud, then turn on Reminders. See “iCloud” on page 16.

Managing reminders in List view

Organizing reminders into lists makes it easy to keep your work, personal, and other to-dos separate from each other. Reminders comes with one list for active reminders, plus a built-in list of completed items. You can add other lists of your own.

Create a list: At the top of the screen, tap List, then tap . Tap Edit.


Quickly switch between lists	Swipe left or right across the screen. You can also jump to a specific list. Tap  , then tap a list name.
View completed items	Swipe left across the screen until you reach the Completed list.
To change the order of lists	In List view, tap  , then tap Edit. Drag  next to a list to change the order. You can't move a list to a different account, and you can't change the order of reminders in a list.
Delete a list	In List view, tap  , then tap Edit. Tap  for each list you want to delete. When you delete a list, all items in the list are also deleted.
Change the name of a list	In List view, tap  , then tap Edit. Tap the name you want to change, then type a new name. Tap Done.
Set a default list for new reminders	Go to Settings > Mail, Contacts, Calendars, then under the Reminders heading, tap Default List.

You can also create a reminder by speaking. See Chapter 4, “Siri,” on page 39.

Managing reminders in Date view

You use Date view to manage reminders that have a due date.

View reminders for a date: At the top of the screen, tap Date to view today's reminders, as well as uncompleted items from previous days.

View a recent date	Drag the time slider, located under the list, to a new day.
View a specific day	Tap  , then select a date to view.

About location reminders

Location reminders are available only on iPhone 4 and iPhone 4S, and may not be available in all areas. You cannot set locations for reminders in Microsoft Exchange and Outlook accounts.

You can set a location reminder to have Reminders alert you when you approach the location, and again when you're no longer near the area. For best results, specify a location that's well defined—such as an address instead of a city—and remember that the accuracy can vary. iPhone may check its location less frequently depending on your model of iPhone and whether it's locked, so there may be a delay before the reminder is triggered.

When you create a reminder, you can use your current location or a location from your contacts list. Add locations that you'll use with Reminders, such as the grocery store or school, to Contacts. You should also add personal locations, such as your home and work addresses, to your contact card in Contacts. Reminders shows the locations from your contact card. For information about setting your contact card in Contacts, see "Contacts accounts and settings" on page 125.

Managing completed reminders

Reminders keeps track of the items you mark as complete. You can see them in List or Date view, or you can use the Completed list.

View completed items: Tap the List button at the top of the screen, then swipe from left to right until the Completed list appears.

View the number of completed items	In List view or Date view, scroll to the top of the reminder list, then pull down on the list until Completed appears. Tap Completed to view all of the completed items.
Mark a completed item as not completed	Tap to remove the checkmark. The item automatically moves back to its original list.
Sync previous reminders	Go to Settings > Mail, Contacts, Calendars, and, under Reminders, tap Sync. This setting applies to all of your reminder accounts. For best performance, don't sync more previous items than you need.

Searching reminders

You can quickly find pending or completed reminders. Reminders are searched by name.

Search Reminders in Date view: Tap , then tap Search Reminders and enter a search phrase.

Search Reminders in List view: Tap , then tap Search Reminders and enter a search phrase.

You can also search Reminders from the Home screen. See "Spotlight Search" on page 165. And you can ask Siri to find reminders by title. See Chapter 4, "Siri," on page 39.




About Game Center

Discover new games and share your game experiences with friends around the world in Game Center. Invite friends to play, or use auto-match to find other worthy opponents. Earn bonus points by achieving specific accomplishments in a game, see what your friends have achieved, and check leaderboards to see who the best players are.

Note: Game Center may not be available in all areas, and game availability may vary.

To use Game Center, you need an Internet connection and an Apple ID. If you don't have an Apple ID, you can create a new one in Game Center, as described below.

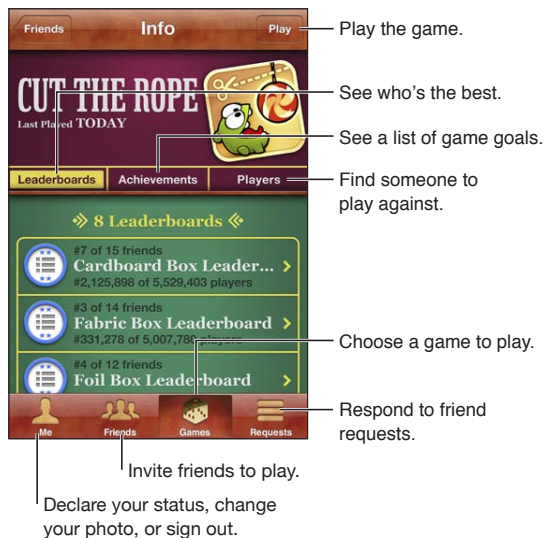

Signing in to Game Center

Sign in: Open Game Center. If you see your nickname and photo at the top of the screen, you're already signed in. If not, enter your Apple ID and password, then tap Sign In. Or, tap Create New Account to create a new Apple ID.

Add a photo	Tap the photo next to your name.
Declare your status	Tap Me, tap the status bar, and then enter your status.
View your account settings	Tap Me, tap the account banner, then choose View Account.
Sign out	Tap Me, tap the Account banner, then tap Sign Out. You don't need to sign out each time you quit Game Center.

Purchasing and downloading games

Games for the Game Center are available from the App Store.

Purchase and download a game: Tap Games, then tap a recommended game or tap Find Game Center Games.

Purchase a game your friend has	Tap Friends, then tap the name of your friend. Tap a game in your friend's list of games, then tap the price of the game below its name at the top of the screen.
---------------------------------	---

Playing games

Play a game: Tap Games, choose a game, then tap Play.

See a list of top scorers	Tap Games, then choose the game and tap Leaderboard.
See the achievements you can try for	Tap Games, choose a game, then tap Achievements.
Return to Game Center after playing	Press the Home button, then tap Game Center on the Home screen.

Playing with friends

Game Center can put you in contact with players around the world. You add friends to Game Center by making a request, or by accepting a request from another player.

Invite friends to a multiplayer game: Tap Friends, choose a friend, choose a game, and tap Play. If the game allows or requires additional players, choose additional players to invite, then tap Next. Send your invitation, then wait for the others to accept. When everyone is ready, start the game.

If a friend isn't available or doesn't respond to your invitation, you can tap Auto-Match to have Game Center find another player for you, or tap Invite Friend to try inviting some other friend.

Send a friend request	Tap Friends or Requests, tap + , then enter your friend's email address or Game Center nickname. Tap + to browse your contacts. To add several friends in one request, type Return after each address.
Respond to a friend request	Tap Requests, tap the request, then tap Accept or Ignore. To report a problem with the request, flick up and tap "Report a Problem."
See the games a friend plays and check your friend's scores	Tap Friends, tap your friend's name, then tap Games or Points.

Search for someone in your list of friends	Tap the status bar to scroll to the top of the screen, then tap the search field and start typing.
Prevent game invitations from others	Turn off Game Invites in your Game Center account settings. See “Game Center settings” on page 114.
Keep your email address private	Turn off Find Me By Email in your Game Center account settings. See “Game Center settings” on page 114.
Disable all multiplayer activity	Go to Settings > General > Restrictions > Game Center and turn off Multiplayer Games.
Disallow friend requests	Go to Settings > General > Restrictions > Game Center and turn off Adding Friends.
See a list of a friend’s friends	Tap Friends, tap the friend’s name, then tap Friends just below their picture.
Remove a friend	Tap Friends, tap a name, then tap Unfriend.
Report offensive or inappropriate behavior	Tap Friends, tap the person’s name, then tap “Report a Problem.”

Game Center settings

Some Game Center settings are associated with the Apple ID you use to sign in. Others are in the Settings app on iPhone.

Change Game Center settings for your Apple ID: Sign in with your Apple ID, tap Me, tap the Account banner, then choose View Account.

Specify which notifications you want for Game Center: Go to Settings > Notifications > Game Center. If Game Center doesn’t appear, turn on Notifications.

Change restrictions affecting Game Center: Go to Settings > General > Restrictions > Game Center.




About the iTunes Store

Use the iTunes Store to add content to your iPhone. You can browse and purchase music, TV shows, audiobooks, alert tones, and ringtones. You can also buy or rent movies, or download and play podcasts or iTunes U collections. You need an Apple ID to purchase content. See “Store settings” on page 122.

Note: The iTunes Store may not be available in all areas, and iTunes Store content may vary by area. Features are subject to change.

To access the iTunes Store, iPhone must have an Internet connection. See “Network” on page 163.

Finding music, videos, and more

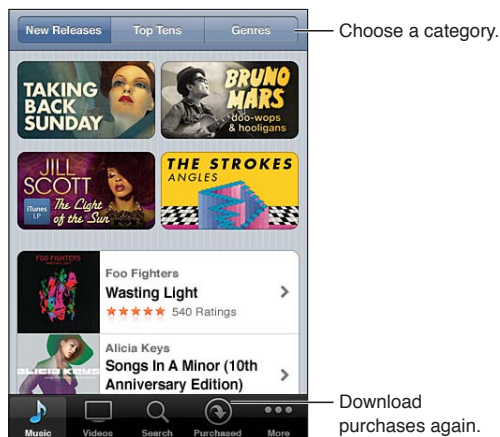

Browse content: Tap one of the content types, such as Music or Videos. Or tap More to browse other content.

Search for content	Tap Search (tap More first, if Search isn't visible), tap the search field and enter one or more words, then tap Search.
Buy, review, or tell a friend about an item	Tap an item in a list to see more details on its Info screen.
Explore artist and friend recommendations	Tap Ping (tap More first, if Ping isn't visible) to find out what's new from your favorite artists or see what music your friends are recommending. For information, see “Following artists and friends” on page 116.

Purchasing music, audiobooks, and tones

When you find a song, album, alert tone, ringtone, or audiobook you like in the iTunes Store, you can purchase and download it. You can preview an item before you purchase it, to make sure it's what you want.

Preview a song, ringtone, or audiobook: Tap the item and follow the onscreen instructions.


Redeem a gift card or code	Tap Music (tap More first, if Music isn't visible), then tap Redeem at the bottom of the screen and follow the onscreen instructions. When you're signed in, your remaining store credit appears with your Apple ID information at the bottom of most iTunes Store screens.
Complete an album	While viewing any album, tap the discounted price for the remaining songs below Complete My Album (not available in all areas). To see offers to complete other albums, tap Music, then tap Complete My Album Offers.
Download a previous purchase	Tap Purchased. You can also download an item while browsing. Just tap Download where you usually see the price.
Automatically download purchases made on other iOS devices and computers	Go to Settings > Store, then turn on the kinds of purchases you want to automatically download.

Purchasing or renting videos

The iTunes Store (may not be available in all areas) lets you purchase and download movies, TV shows, and music videos. Some movies can also be rented for a limited time. Video content may be available in standard-definition (SD, or 480p) format, high-definition (HD, or 720p) format, or both.

Purchase or rent a video: Tap Buy or Rent.

Once you purchase an item, it begins downloading and appears on the Downloads screen. See "Checking download status" on page 117.

Preview a video	Tap Preview.
View the preview on a TV with AirPlay and Apple TV	When the preview starts, tap  and choose Apple TV. See "AirPlay" on page 34.

Note: If you purchase HD video on iPhone 3GS, the video is downloaded in SD format.

Following artists and friends

Use Ping to connect with the world's most passionate music fans. Follow favorite artists to learn about new releases and upcoming concerts and tours, get an insider's perspective through their photos and videos, and learn about their musical influences. Read friends' comments about the music they're listening to, and see what they're buying and which concerts they plan to attend. Express your musical likes and post comments for your own followers as well.

To create and explore musical connections, you first create a profile.

Create your Ping profile: Open the iTunes application on your Mac or PC, click Ping, and follow the onscreen instructions.

Tap Ping (if Ping isn't visible, tap More first), then explore Ping. You can do the following:

Follow an artist	Tap Follow on their profile page.
Follow a friend	When you follow someone, they don't automatically follow you. In your profile, you can choose to approve or decline requests to be followed as they arrive, or simply accept all new followers without review.
Share your thoughts	As you browse albums and songs, tap Post to comment on a piece of music, or tap Like just to say you like it. Your friends will see your comments in their Ping Activity feed.
Share concert plans	Tap Concerts on your profile page to see upcoming concerts by the artists you follow, and to see which of your friends are going to a concert. Tap Tickets to buy your own ticket, or tap I'm Going to let others know you'll be there too. (Not available in all areas.)

Streaming or downloading podcasts

You can listen to audio podcasts or watch video podcasts streamed over the Internet from the iTunes Store. You can also download audio and video podcasts.

Stream a podcast: Tap Podcasts (tap More first, if Podcasts isn't visible) to browse podcasts in the iTunes Store.

Video podcasts are marked with a video icon .

Download a podcast	Tap the Free button, then tap Download. Downloaded podcasts appear in the Podcasts playlist.
Listen to or watch a podcast you've downloaded	In Music, tap Podcasts (tap More first, if Podcasts isn't visible), then tap the podcast. Video podcasts also appear in your list of videos.
Get more episodes of the podcast you've downloaded	In the Podcasts list in Music, tap the podcast, then tap Get More Episodes.
Delete a podcast	In the Podcasts list in Music, swipe left or right over the podcast, then tap Delete.

Checking download status

You can check the Downloads screen to see the status of in-progress and scheduled downloads, including purchases you pre-order.

See the status of items being downloaded: Tap Downloads (tap More first, if Downloads isn't visible).

Pre-ordered items don't automatically download when they're released. Return to the Downloads screen to begin the download.

Download a pre-ordered item	Tap the item, then tap  .
------------------------------------	--

If a download is interrupted, the download resumes when there's an Internet connection. Or, if you open iTunes on your computer, iTunes completes the download to your iTunes library (if your computer is connected to the Internet and signed in using the same Apple ID).

Changing the browse buttons

You can replace the Music, Podcasts, Videos, and Search buttons at the bottom of the screen with ones you use more frequently. For example, if you download audiobooks often but don't watch many videos, you could replace Videos with Audiobooks.

Change the browse buttons: Tap More, tap Edit, then drag a button to the bottom of the screen, over the button you want to replace.

You can drag the buttons at the bottom of the screen left or right to rearrange them. When you finish, tap Done.

While you browse, tap More to access the browse buttons that aren't visible.

Viewing account information

To view iTunes Store information for your Apple ID on iPhone, tap your Apple ID (at the bottom of most iTunes Store screens). Or go to Settings > Store and tap View Apple ID. You must be signed in to view your account information. See "Store settings" on page 122.

Verifying downloads

You can use iTunes on your computer to verify that all the music, videos, apps, and other items you bought from the iTunes Store or App Store are in your iTunes library. You might want to do this if a download was interrupted.


Verify your purchases: In iTunes on your computer, choose Store > Check for Available Downloads.

To see all of your purchases, sign in using your Apple ID, choose Store > View My Account, and click Purchase History.



About Newsstand

Newsstand organizes your magazine and newspaper app subscriptions with a shelf that lets you access your publications quickly and easily. Newsstand apps appear on the shelf, and as new issues become available, a badge lets you know they're ready for reading. They're delivered to iPhone automatically.

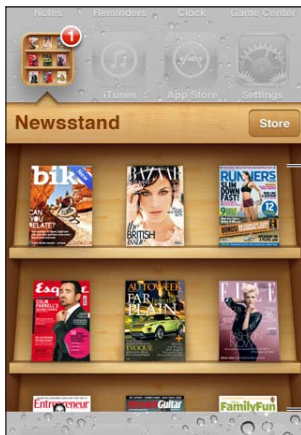

Touch and hold a publication to rearrange.

Find Newsstand apps: Tap Newsstand to reveal the shelf, then tap Store.

When you purchase a newsstand app, it's added to your shelf for easy access. After the app is downloaded, open it to view its issues and subscription options.

Subscriptions are In-App purchases, billed to your store account. See "Store settings" on page 122.

Pricing varies, and Newsstand apps may not be available in all areas.

Reading the latest issues

When a newspaper or magazine has a new issue, Newsstand downloads it when connected to Wi-Fi and notifies you by displaying a badge on the app icon. To start reading, open Newsstand, then look for apps with a "New" banner.

Each app has its own method of managing issues. For information about how to delete, find, or work with individual issues, see the app's help information or App Store listing. You can't remove a Newsstand app from the shelf, or put other types of apps on the shelf.

Turn off automatic downloads: Go to Settings > Store and turn off automatic downloads for the publication.

App Store

23




About the App Store

You can search for, browse, review, purchase, and download apps from the App Store directly to iPhone.

To browse the App Store, iPhone must be connected to the Internet. See “Network” on page 163. To purchase apps, you also need an Apple ID (may not be available in all areas). See “Store settings” on page 122.

Note: The App Store may not be available in all areas, and App Store content may vary by area. Features are subject to change.

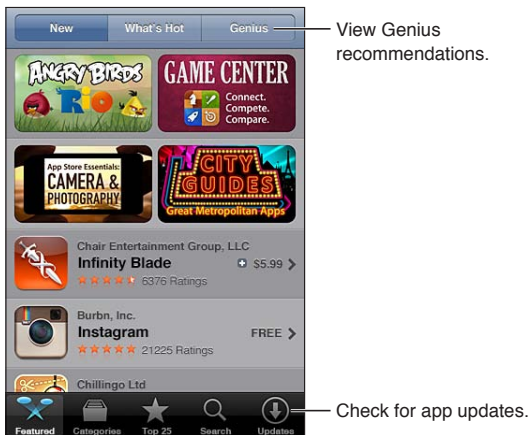

Finding and downloading apps



Browse the featured selections to see new, notable, or recommended apps, or browse Top 25 to see the most popular apps. To look for a specific app, use Search.

Browse the App Store: Tap Featured, Categories, or Top 25.

Browse using Genius	Tap Genius to see a list of recommended apps, based on what's already in your app collection. To turn on Genius, follow the onscreen instructions. Genius is a free service, but it requires an Apple ID.
Search for apps	Tap Search, tap the search field and enter one or more words, then tap Search.
Get ratings and read reviews	Tap Ratings near the bottom of the app's Info screen. You can rate and review apps you've downloaded.
Email a link to the app's Info page in iTunes	Tap "Tell a Friend" near the bottom of the app's Info screen.
Send the app to someone as a gift	Tap "Gift This App" near the bottom of the app's Info screen, then follow the onscreen instructions.
Report a problem	Tap "Report a Problem" near the bottom of the app's Info screen. Select a problem from the list or type optional comments, then tap Report.
Purchase and download an app	Tap the price (or tap Free), then tap Buy Now. If you already purchased the app, "Install" appears on the Info screen instead of the price. You won't be charged if you download it again.
Redeem a gift card or code	Tap Redeem near the bottom of the Featured screen, then follow the onscreen instructions.
See the status of downloads	As an app downloads, its icon appears on the Home screen and shows a progress indicator.
Download a previous purchase	Tap Purchased. You can also download an item while browsing; just tap Download where you usually see the price.
Automatically download purchases made on other devices	Go to Settings > Store, then turn on the kinds of purchases you want to automatically download.
Update an app	At the bottom of the app's Info screen, tap Updates and follow the onscreen instructions.

Deleting apps

You can delete apps you install from the App Store. If you delete an app, data associated with the app is also deleted.

Delete an App Store app: Touch and hold the app icon on the Home screen, until the icons start to jiggle, then tap . Press the Home button  when you finish deleting apps.

For information about erasing every app and all of your data and settings, see "Erase All Content and Settings" on page 168.

You can download any deleted app that you've purchased from the App Store, free of charge.

Download a deleted app	In the App Store, tap Updates, then tap Purchased. Tap the app, then tap Install.
-------------------------------	---

Store settings

Use Store settings to sign in to an Apple ID, create a new Apple ID, or edit an existing one. If you have more than one Apple ID, you can use Store settings to sign out from one account and in to another. By default, the Apple ID that appears in Store settings is the one you're signed in to when you sync iPhone with your computer.

For iTunes Store terms and conditions, go to www.apple.com/legal/itunes/ww/.

Sign in to an Apple ID: Go to Settings > Store, tap Sign In, then tap Use Existing Apple ID and enter your Apple ID and password.

View and edit your account information	Go to Settings > Store, tap your Apple ID, then tap View Apple ID. Tap an item to edit it. To change your account password, tap the Apple ID field.
Sign in using a different Apple ID	Go to Settings > Store, tap your account name, then tap Sign Out.
Create a new Apple ID	Go to Settings > Store, tap Sign In, then tap Create New Apple ID and follow the onscreen instructions.
Automatically download purchases	Go to Settings > Store, then turn on the types of purchases, such as Music or Books, that you want to automatically download to iPhone. You can also turn off automatic updating of Newsstand apps.
Download purchases using the cellular network	Go to Settings > Store, then turn Use Cellular Data on or off. Downloading purchases over the cellular network may incur charges from your carrier. Newsstand apps only update when iPhone is connected to a Wi-Fi network. See Chapter 22, "Newsstand," on page 119.



About Contacts

Contacts lets you easily access and edit your contact lists from personal, business, and organizational accounts. You can search across all of your groups, and the information in Contacts is automatically accessed to make addressing emails quick and easy.



Syncing contacts

You can add contacts in the following ways:

- In iTunes, sync contacts from Google or Yahoo!, or sync with applications on your computer. See “Syncing with iTunes” on page 18.
- Use your iCloud contacts. See “iCloud” on page 16.
- Set up a Microsoft Exchange account on iPhone, with Contacts enabled. See “Contacts accounts and settings” on page 125.
- Set up an LDAP or CardDAV account to access business or school directories. See “Contacts accounts and settings” on page 125.
- Enter contacts directly on iPhone. See “Adding and editing contacts” on page 124.
- Import contacts from a SIM card (GSM). See “Contacts accounts and settings” on page 125.

Searching contacts

You can search titles and first, last, and company names in your contacts on iPhone. If you have a Microsoft Exchange account, an LDAP account, or a CardDAV account, you can also search those contacts.

Search contacts: In Contacts, tap the search field at the top of any contact list and enter your search.

Search a GAL	Tap Groups, tap Directories at the bottom of the list, then enter your search.
Search an LDAP server	Tap Groups, tap the LDAP server name, then enter your search.
Search a CardDAV server	Tap Groups, tap the searchable CardDAV group at the bottom of the list, then enter your search.
Save contact information from a GAL, LDAP, or CardDAV server	Search for the contact you want to add, then tap Add Contact.

Contacts can also be found through searches from the Home screen. See “Searching” on page 29.

Adding and editing contacts

Add a contact on iPhone: Tap Contacts and tap **+**. If **+** isn't visible, make sure you're not viewing an LDAP, CalDAV, or GAL contact list.

Delete a contact	In Contacts, choose a contact, then tap Edit. Scroll down and tap Delete Contact.
Add a contact from the numeric keypad	Tap Keypad, enter a number, then tap +👤 . Tap Create New Contact or tap “Add to Existing Contact” and choose a contact.
Enter a soft (two-second) pause in a number	Tap +** , then tap Pause. One or more pauses may be required by a phone system before dialing an extension, for example. Each pause appears as a comma when the number is saved.
Enter a hard pause in a number	Tap +** , then tap Wait. A hard pause appears as a semicolon when the number is saved. When dialing, iPhone pauses when it reaches the semicolon and waits until you tap Dial to continue.
Add a recent caller's phone number to your contacts	Tap Recents and tap 👤 next to the number. Then tap Create New Contact, or tap “Add to Existing Contact” and choose a contact.

Edit contact information: Choose a contact, then tap Edit.

Add a new field	Tap + Add Field.
Add a contact's Twitter username	Tap + Add Field, then tap Twitter.
Change a field label	Tap the label and choose a different one. To add a new label, scroll to the bottom of the list and tap Add Custom Label.
Change the ringtone or text tone for the contact	Tap the ringtone or text tone field, then choose a new sound. The default tone is set in Settings > Sounds.
Delete an item	Tap - , then tap Delete.
Assign a photo to a contact	Tap Add Photo, or tap the existing photo. You can take a photo with the camera or use an existing photo. To import photos from your contacts' Twitter profiles, go to Settings > Twitter. Sign in to your Twitter account, then tap Update Contacts.

Unified contacts

When you sync contacts with multiple accounts, you might have entries for the same person in more than one account. To keep redundant contacts from appearing in the All Contacts list, contacts from different accounts that have the same name are linked and displayed as a single *unified contact*. When you view a unified contact, the title Unified Info appears at the top of the screen.

Link a contact: Tap Edit, the tap  and choose a contact.

If you link contacts with different first or last names, the names on the individual contacts won't change, but only one name appears on the unified card. To choose which name appears when you view the unified card, tap the linked card with the name you prefer, then tap Use This Name For Unified Card.

View contact information from a source account	Tap one of the source accounts.
---	---------------------------------

Unlink a contact	Tap Edit, tap  , then tap Unlink.
-------------------------	--

Linked contacts aren't merged. If you change or add information in a unified contact, the changes are copied to each source account in which that information already exists.

Contacts accounts and settings

You can add Contacts accounts, and adjust the way contact names are sorted and displayed.

Add a Contacts account: Go to Settings > Mail, Contacts, Calendars, then tap Add Account.

To change Contacts settings, go to Settings > Mail, Contacts, Calendars and set these options:

Set how contacts are sorted	Tap Sort Order to sort by first or last name.
------------------------------------	---

Set how contacts are displayed	Tap Display Order and choose to display by first or last name.
---------------------------------------	--

Import contacts from a SIM card	Tap Import SIM Contacts.
--	--------------------------

Set your My Info card	Tap My Info and select the contact card with your name and information from the list. The My Info card is used by Siri and other apps. Use the related persons fields to define relationships you want Siri to know, so you can say things like "call my sister."
------------------------------	--

Set a default Contacts account	Tap Default Account, then select an account. New contacts you create without specifying another account are stored here.
---------------------------------------	--

Use iCloud to keep Contacts up to date on your iOS devices and computers	Go to Settings > iCloud, then turn on Contacts. See "iCloud" on page 16.
---	--



About Videos

With iPhone, you can view video content such as movies, music videos, and video podcasts from iTunes, and, if they're available in your area, TV shows.



Playing videos

Play a video: Tap the video.



Cars 2 is available on iTunes. Cars 2 © Disney/Pixar.

Show or hide the playback controls	While a video is playing, tap the screen.
Adjust the volume	Drag the volume slider, or use the volume buttons on the side of iPhone or the volume buttons on the iPhone earphones.
Scale a video to fill the screen or fit to the screen	Tap or . Or, double-tap the video.
Pause or resume playback	Tap or , or press the center button on the iPhone earphones.
Start over from the beginning	If the video contains chapters, drag the playhead along the scrubber bar all the way to the left. If there are no chapters, tap . If you're less than 5 seconds into the video, the previous video in your library opens.
Skip to a specific chapter (if available)	Tap , then choose a chapter.
Skip to the next chapter (if available)	Tap , or press the center button on the iPhone earphones twice quickly.
Skip to the previous chapter (if available)	Tap , or press the center button on the iPhone earphones three times quickly. If you're less than 5 seconds into the video, the previous video in your library opens.

Rewind or fast forward	Touch and hold ⏮ or ⏭
Stop watching a video	Tap Done.
Select a different audio language (if available)	Tap  , then choose a language from the Audio list.
Show or hide subtitles (if available)	Tap  , then choose a language, or Off, from the Subtitles list.
Show or hide closed captioning (if available)	Go to Settings > Video.

Searching for videos

You can search the titles of movies, TV shows, and video podcasts on iPhone.

Search your videos: Tap the status bar at the top of the screen to reveal the search field, tap the field, then enter text.

You can also search for videos from the Home screen. See “Searching” on page 29.

Watching rented movies

You can rent movies from the iTunes Store and watch them on iPhone. You can download rented movies directly to iPhone, or transfer movies from iTunes on your computer to iPhone. (Rented movies may not be available in all areas.)

Rented movies expire, and once you start watching, you have a limited amount of time to finish. The time remaining appears near the title. Rented items are deleted when they expire. Before renting a movie, check the iTunes Store for the rental period. For information, see “Purchasing or renting videos” on page 116.

View a rented movie: Tap the video you want to watch. If you don’t see the video in your list, it might still be downloading.

Transfer rented movies to iPhone: Connect iPhone to your computer. Then select iPhone in the iTunes sidebar, click Movies, and select the rented movies you want to transfer. Your computer must be connected to the Internet. Movies rented on iPhone cannot be transferred to a computer.



On iPhone 3GS, you can transfer rented movies between iPhone and your computer. On iPhone 4, you can transfer rented movies between iPhone and your computer only if they were rented in iTunes on your computer.


Watching videos on a TV

You can stream videos wirelessly to your TV using AirPlay and Apple TV, or connect iPhone to your TV using one of the following cables:

- Apple Digital AV Adapter and an HDMI cable (iPhone 4 or later)
- Apple Component AV Cable
- Apple Composite AV Cable
- Apple VGA Adapter and a VGA cable

Apple cables, adapters, and docks are available for purchase separately in many areas. Go to www.apple.com/store or check with your local Apple retailer.

Stream videos using AirPlay: Start video playback, then tap  and choose your Apple TV from the list of AirPlay devices. If  doesn't appear or if you don't see Apple TV in the list of AirPlay devices, make sure it's on the same wireless network as iPhone. For more information, see "AirPlay" on page 34.

While video is playing, you can exit Videos and use other apps. To return playback to iPhone, tap  and choose iPhone.

Stream videos using a cable: Use the cable to connect iPhone to your TV or AV receiver and select the corresponding input.

Connect using an AV cable	Use the Apple Component AV Cable, Apple Composite AV Cable, or other authorized iPhone-compatible cable. You can also use these cables with the Apple Universal Dock to connect iPhone to your TV. You can use the dock's remote to control playback.
Connect using an Apple Digital AV Adapter (iPhone 4 or later)	Attach the Apple Digital AV Adapter to the iPhone Dock connector. Use an HDMI cable to connect the HDMI port of the adapter to your TV or receiver. To keep iPhone charged while watching videos, use an Apple Dock Connector to USB Cable to connect the 30-pin port of the adapter to your computer, or to a USB Power Adapter plugged into a power outlet.
Connect using a VGA Adapter	Attach the VGA Adapter to the iPhone Dock connector. Connect the VGA Adapter with a VGA cable to a compatible TV, projector, or VGA display.

The Digital AV Adapter supports high-definition video up to 720p, with audio.

When you connect iPhone 4S to a TV or projector using an Apple Digital AV Adapter or VGA Adapter, the iPhone screen is automatically mirrored on the external display at a resolution of up to 1080p, and videos play at a resolution of up to 720p.

With iPhone 4S, you can also mirror the screen on a TV wirelessly using AirPlay Mirroring and Apple TV. See "AirPlay" on page 34.

Deleting videos from iPhone

You can delete videos from iPhone to save space. Deleting a video from iPhone (other than a rented movie) doesn't delete the video from your iTunes library. It may reappear on iPhone if the video in iTunes is still set to sync.

Important: If you delete a rented movie from iPhone, it's deleted permanently and cannot be transferred back to your computer.

Delete a video: In the videos list, swipe left or right over the video, then tap Delete.

Using Home Sharing

Home Sharing lets you play music, movies, and TV shows on iPhone from the iTunes library on your Mac or PC. See "Home Sharing" on page 81.

Setting a sleep timer

You can set iPhone to stop playing music or videos after a period of time.

Set a sleep timer: In the Clock app, tap Timer, then flick to set the number of hours and minutes. Tap When Timer Ends and choose Sleep iPod, tap Set, then tap Start to start the timer.

When the timer ends, iPhone stops playing music or video, closes any other open app, and then locks itself.

Converting videos for iPhone


You can add videos other than those purchased from the iTunes Store to iPhone, such as videos you create in iMovie on a Mac, or videos you download from the Internet and then add to iTunes. If you try to add a video from iTunes to iPhone and a message says the video can't play on iPhone, you can convert the video.

Convert a video to work with iPhone: Select the video in your iTunes library and choose Advanced > "Create iPod or iPhone Version." Then add the converted video to iPhone.



Using the calculator

Tap numbers and functions in Calculator just as you would with a standard calculator. When you tap the add, subtract, multiply, or divide button, a white ring appears around the button to let you know the operation to be carried out.

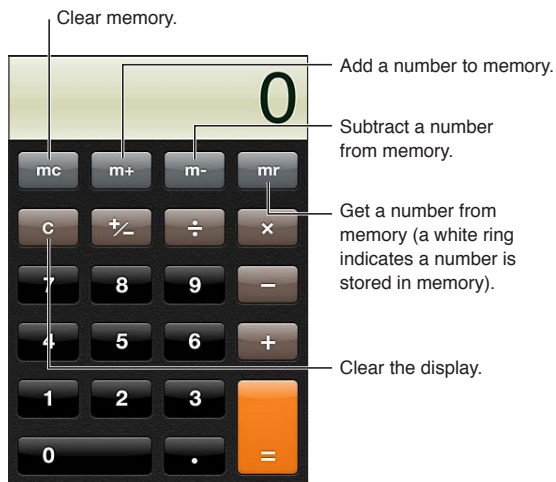

Scientific calculator

Rotate iPhone to landscape orientation to display the scientific calculator.




About Compass

The built-in compass shows which direction your iPhone is pointing and the geographical coordinates of your current location. You can have the compass point to magnetic north or true north.

Important: The accuracy of the compass can be affected by magnetic or environmental interference; even the magnets in the iPhone earbuds can cause a deviation. Use the digital compass only for basic navigation assistance and don't rely on it to determine precise location, proximity, distance, or direction.

If Location Services is turned off when you open Compass, you may be asked to turn it on. You can use Compass without turning on Location Services. See "Location Services" on page 160.

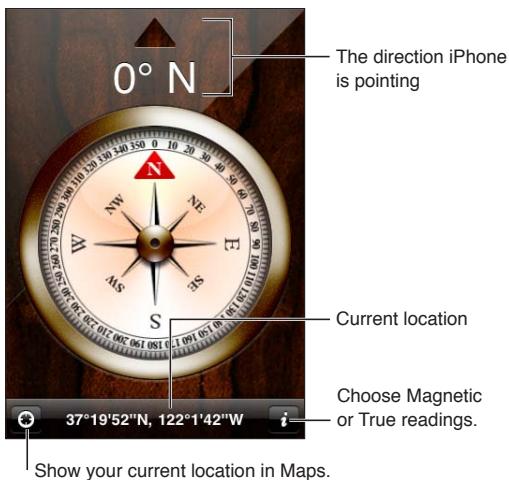


Calibrating the compass

You need to calibrate the compass the first time you use it, and occasionally after that. iPhone alerts you if calibration is needed.

Calibrate the internal compass: Wave iPhone in a figure eight.


Finding the direction



Find the direction your iPhone is pointing: Hold iPhone flat in your hand, level with the ground. Its heading appears at the top of the screen and location is displayed at the bottom.

Switch between true north and magnetic north Tap .

Using Compass with Maps

The Compass app can also show your current location and heading in Maps. For information, see “Finding locations” on page 100.

See your current location in Maps: Tap  at the bottom of the Compass screen. Maps opens and shows your current location with a blue marker.

Show the direction you’re facing In Maps, tap  twice. The icon changes to . The angle shows the accuracy of the compass reading—the smaller the angle, the greater the accuracy.



About Voice Memos

Voice Memos lets you use iPhone as a portable recording device using the built-in microphone, iPhone or Bluetooth headset mic, or supported external microphone. Recordings using the built-in microphone are mono, but you can record stereo using an external stereo microphone.

Note: External microphones must be designed to work with the iPhone headset jack or Dock Connector. These include Apple-branded earbuds and authorized third-party accessories marked with the Apple “Made for iPhone” or “Works with iPhone” logo.



Recording

Make a recording: Tap ● or press the center button on the iPhone earphones. Tap || to pause or ■ to stop recording, or press the center button on the iPhone earphones.

Adjust the recording level

Move the microphone closer to or further away from what you’re recording. For better recording quality, the loudest level on the level meter should be between -3 dB and 0 dB.




Play or mute the start/stop tone


Use the iPhone Ring/Silent switch. (In some areas, the sound effects for Voice Memos are played even if the Ring/Silent switch is set to silent.)

Use another app while recording

Press the Home button □ and open an app. To return to Voice Memos, tap the red bar at the top of the screen.



Listening to a recording

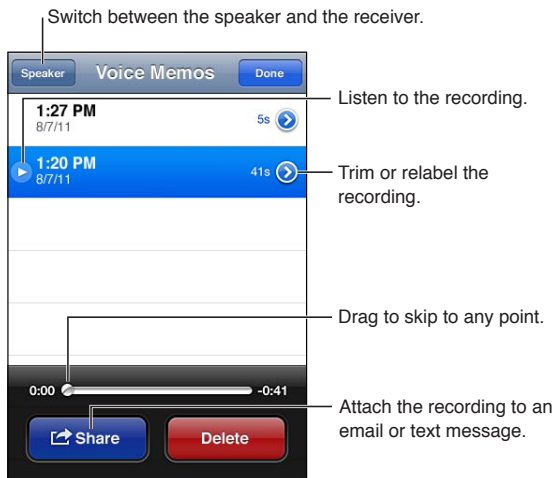Play a recording: Tap , tap a memo, then tap . Tap  to pause.





Skip to any point in a recording Drag the playhead along the scrubber bar.

Listen through the built-in iPhone speaker instead of the receiver Tap Speaker.

Trim a recording Tap  next to the recording, then tap Trim Memo. Drag the edges of the audio region, then tap  to preview. Adjust if necessary, then tap Trim Voice Memo to save. The portions you trim can't be recovered.

Managing and sharing recordings

A recording is labeled with the time when it was recorded.

Label a recording: Tap  next to the recording, tap  on the Info screen, then choose a label or choose Custom.

Delete a recording Tap a recording in the list, then tap Delete.

View recording details Tap  next to the recording.

Email a recording or send it in a message Tap a recording in the list, then tap Share.

Sharing voice memos with your computer

iTunes can sync voice memos with your iTunes library when you connect iPhone to your computer.

When you sync voice memos to iTunes, they remain in the Voice Memos app until you delete them. If you delete a voice memo on iPhone, it isn't deleted from the Voice Memos playlist in iTunes. However, if you delete a voice memo from iTunes, it *is* deleted from iPhone the next time you sync with iTunes.


Sync voice memos with iTunes: Connect iPhone to your computer and select iPhone in the iTunes device list. Select Music at the top of the screen (between Apps and Movies), select Sync Music, select "Include voice memos," and click Apply.

The voice memos from iPhone appear in the Voice Memos playlist in iTunes.



About Nike + iPod

With a Nike + iPod Sensor (sold separately), the Nike + iPod app provides audible feedback on your speed, distance, time elapsed, and calories burned during a run or walk. You can send your workout information to nikeplus.com, where you can track your progress, set goals, and participate in challenges.

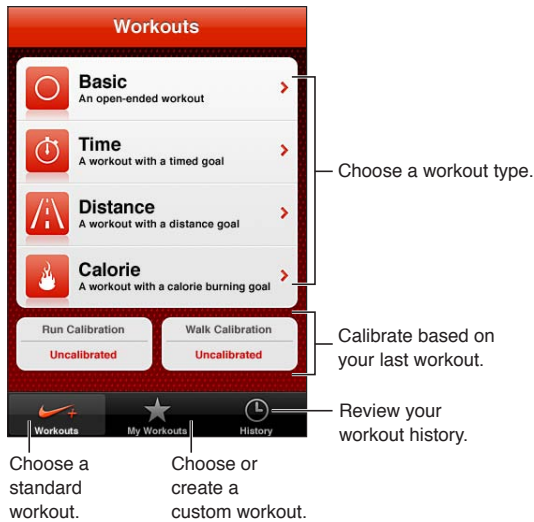

Activating Nike + iPod

The Nike + iPod app doesn't appear on the Home screen until you turn it on.

For help setting up Nike + iPod, see the Nike + iPod documentation.

Turn on Nike + iPod: Go to Settings > Nike + iPod.

Linking a sensor

Nike + iPod bases its workout data on a signal from a sensor (sold separately) that you attach to your shoe. The first time you start a workout, you're prompted to activate your sensor, which automatically links the sensor to iPhone. You can also use Nike + iPod settings to link a sensor to iPhone.

Nike + iPod can link to only one sensor at a time. To use a different sensor, use Nike + iPod settings to link to the new sensor.

Link your sensor to iPhone: Attach the sensor to your shoe, then go to Settings > Nike + iPod > Sensor.

Link to a different sensor to iPhone Go to Settings > Nike + iPod > Sensor and tap Link New.

Working out with Nike + iPod

After activating Nike + iPod and inserting the Nike + iPod Sensor in your Nike+ ready shoe, you're ready to collect workout data.

Important: Before starting any exercise program, you should consult with a physician and have a complete physical examination. Do a warmup or stretching exercise before beginning any workout. Be careful and attentive while exercising. Slow down, if necessary, before adjusting your device while running. Stop exercising immediately if you feel pain, or feel faint, dizzy, exhausted, or short of breath. By exercising, you assume the risks inherent in physical exercise, including any injury that may result from such activity.

Work out using Nike + iPod: Open Nike + iPod, tap Workouts, and choose a workout. Data collection continues while iPhone is asleep.

Pause or resume your workout	If your workout is interrupted, wake iPhone and tap on the lock screen. Tap ▶ when you're ready to go.
End your workout	Wake iPhone, tap , then tap End Workout.
Change workout settings	Go to Settings > Nike + iPod.

Calibrating Nike + iPod

To ensure accurate workout data, you can calibrate Nike + iPod to the length of your walking or running stride.

Calibrate Nike + iPod: Record a running or walking workout over a known distance of at least a quarter mile (400 meters). Then, after you tap End Workout, tap Calibrate on the workout summary screen and enter the actual distance you covered.

Reset to the default calibration Go to Settings > Nike + iPod.

Sending workout data to nikeplus.com

At nikeplus.com you can track your progress over time, view a record of all of your past workouts, set and monitor goals, and compare your results with others. You can even compete with other Nike + iPod users in online workout challenges.

Send workout data wirelessly to nikeplus.com from iPhone: With iPhone connected to the Internet, open Nike + iPod, tap History, then tap "Send to Nike+."

See your workouts on nikeplus.com In Safari, go to nikeplus.com, log in to your account, and follow the onscreen instructions.



About iBooks

iBooks is a great way to read and buy books. Download the free iBooks app from the App Store, and then get everything from classics to best sellers from the built-in iBookstore. Once you download a book, it's displayed on your bookshelf.

To download the iBooks app and use the iBookstore, you need an Internet connection and an Apple ID. If you don't have an Apple ID, or if you want to make purchases using another Apple ID, go to Settings > Store. See "Store settings" on page 122.

Note: The iBooks app and the iBookstore may not be available in all languages or areas.

Using the iBookstore

In the iBooks app, tap Store to open the iBookstore. From there, you can browse featured books or best sellers, and browse for books by author or topic. When you find a book you like, you can purchase and download it.

Note: Some features of the iBookstore may not be available in all areas.

Purchase a book: Find a book you want, tap the price, then tap Buy Book, or Get Book, if it's free.

Get information about a book	You can read a summary of the book, read reviews, and download a sample of the book before buying it. After buying a book, you can write a review of your own.
Download a previous purchase	Tap Purchased. You can also download an item while browsing; just tap Download where you usually see the price.
Automatically download purchases made on other iOS devices and computers	In Settings, choose Store, then turn on the kinds of purchases you want to automatically download.

Syncing books and PDFs


Use iTunes to sync your books and PDFs between iPhone and your computer, and to buy books from the iTunes Store. When iPhone is connected to your computer, the Books pane lets you select which items to sync. You can also add DRM-free ePub books and PDFs to your iTunes library. Books in PDF and ePub format are available on the web.

Sync an ePub book or PDF to iPhone: In iTunes on your computer, choose File > Add to Library and select the file. Select the book or PDF in the Books pane in iTunes, and then sync.

To add a book or PDF to iBooks without syncing, email the file to yourself from your computer. Open the email message on iPhone, then touch and hold the attachment and choose “Open in iBooks” from the menu that appears.

Reading books



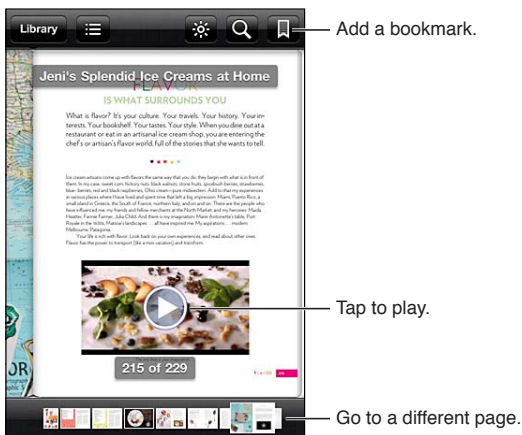







Reading a book is easy. Go to the bookshelf and tap the book you want to read. If you don’t see the book you’re looking for, tap the name of the current collection at the top of the screen to go to other collections.



Read a book while lying down: Use the portrait orientation lock to prevent iPhone from rotating the screen when you rotate iPhone. See “Viewing in portrait or landscape orientation” on page 21.

Each book has a particular set of features, based on its contents and format. Some of the capabilities described below might not be available in the book you’re reading. For example, printing is available only for PDFs, and if a book doesn’t include a recorded narration, you won’t see the read aloud icon.

Show the controls	Tap near the center of the page.
Turn the page	Tap near the right or left margin of the page, or flick left or right. To change the direction the page turns when you tap the left margin, go to Settings > iBooks > Tap Left Margin.
View the table of contents	Tap . With some books, you can also pinch to see the the table of contents.
Add or remove a bookmark	Tap . You can have multiple bookmarks. To remove a bookmark, tap it. You don’t need to add a bookmark when you close a book, because iBooks remembers where you left off.

Add or remove a highlight	<p>Double-tap a word, use the grab points to adjust the selection, then tap Highlight and choose a color.</p> <p><i>To remove a highlight</i>, tap the highlighted text, then tap .</p> <p><i>To underline words</i>, tap .</p> <p><i>To change the color</i>, tap the highlighted text, tap the current color, then select a new color from the menu.</p>
Add, remove, or edit a note	<p>Double-tap a word, tap Highlight, then choose  from the menu that appears.</p> <p><i>To view a note</i>, tap the indicator in the margin near the highlighted text.</p> <p><i>To remove a note</i>, delete its text. To remove a note and its highlight, tap the highlighted text, then tap .</p> <p><i>To change the color</i>, tap the highlighted text, then select a color from the menu.</p> <p><i>To add a note to a highlight</i>, tap the highlighted text, then tap .</p>
See all your bookmarks	Tap  then tap Bookmarks.
See all your notes	Tap  then tap Notes.
Enlarge an image	Double-tap the image to zoom in.
Go to a specific page	Use the page navigation controls at the bottom of the screen. Or, tap  and enter a page number, then tap the page number in the search results.
Search in a book	<p>Tap .</p> <p><i>To search the web</i>, tap Search Web or Search Wikipedia. Safari opens and displays the results.</p>
Search for other occurrences of a word or phrase	Double-tap a word, use the grab points to adjust the selection, then tap Search in the menu that appears.
Look up a word	<p>Double-tap a word, use the grab points to adjust the selection, then tap Define in the menu that appears.</p> <p>Definitions are not available for all languages.</p>
Listen to a book	<p>Tap .</p> <p>This feature is not available for all books.</p> <p>If you have a visual impairment, you can also use VoiceOver to speak the text of almost any book. See “VoiceOver” on page 143.</p>

iBooks stores your collections, bookmarks, notes, and current page information using your Apple ID, so you can read books seamlessly across all your iOS devices. iBooks saves information for all of your books when you open or quit the app. Information for individual books is also saved when you open or close the book.

Turn syncing on or off: Go to Settings > iBooks.




Some books might access video or audio that’s stored on the web.

Turn online video and audio access on or off: Go to Settings > iBooks > Online Audio & Video.


Note: If iPhone has a cellular data connection, playing these files may incur carrier charges.

Changing a book's appearance


Some books let you change the type size, font, and page color.

Change the brightness: Tap near the center of a page to display the controls, then tap . If you don't see , tap  first.

Change the font or type size

Tap near the center of a page to display the controls, then tap . Tap Fonts to select a typeface. Not all books support changing the font. Some books allow you to change the type size only when iPhone is in portrait orientation.

Change the color of the page and text

Tap near the center of a page to display the controls, tap , then tap Theme. This setting applies to all books that support it.


Turn justification and hyphenation on or off

Go to Settings > iBooks. Some books and PDFs can't be justified or hyphenated.


Printing or emailing a PDF

You can use iBooks to send a copy of a PDF via email, or to print all or a portion of the PDF to a supported printer.

You can email or print PDFs, but not books.

Email a PDF: Open the PDF, then tap  and choose Email Document. A new message appears with the PDF attached. When you finish addressing and writing your message, tap Send.

Print a PDF

Open the PDF, then tap  and choose Print. Select a printer, the page range, and the number of copies, then tap Print. For more information, see "Printing" on page 28.



Organizing the bookshelf

Use the bookshelf to browse your books and PDFs. You can also organize items into collections.



Move a book or PDF to a collection: Go to the bookshelf and tap Edit. Select the items you want to move, then tap Move and select a collection.

When you add a book or PDF to your bookshelf, it appears in your Books or PDF collection. From there, you can move it to a different collection. You might want to create collections for work and school, for example, or for reference and leisure reading.

View a collection	Tap the name of the current collection at the top of the screen, then pick a new one from the list that appears.
Manage collections	Tap the name of the current collection you're viewing, such as Books or PDFs, to display the collections list. You can't edit or remove the built-in Books and PDFs collections.
Sort the bookshelf	Tap the status bar to scroll to the top of the screen, then tap  and select a sort method from the choices at the bottom of the screen.
Delete an item from the bookshelf	Tap Edit, then tap each book or PDF that you want to delete so that a checkmark appears. Tap Delete. When you finish, tap Done. If you delete a book you purchased, you can download it again from Purchases in the iBookstore.
Search for a book	Go to the bookshelf. Tap the status bar to scroll to the top of the screen, then tap  . Searching looks for the title and the author's name.

Universal Access features

iPhone incorporates numerous accessibility features, including:

- VoiceOver
- Call audio routing
- Siri
- Zoom
- Large Text
- White on Black
- Speak Selection
- Speak Auto-text
- Mono Audio and balance
- Hearing Aid Mode (iPhone 4 GSM)
- Custom Vibrations
- LED Flash for Alerts
- AssistiveTouch
- Support for braille displays
- Playback of closed-captioned content

With the exception of VoiceOver, these accessibility features work with most iPhone apps, including third-party apps you download from the App Store. VoiceOver works with all apps that come preinstalled on iPhone, and with many third-party apps.

For more information about iPhone accessibility features, go to www.apple.com/accessibility.

You can turn individual accessibility features on or off in Accessibility settings on iPhone. You can also turn some features on or off in iTunes when iPhone is connected to your computer.

Turn on accessibility features using iPhone: Go to Settings > General > Accessibility.

Turn on accessibility features using iTunes: Connect iPhone to your computer and select iPhone in the iTunes device list. Click Summary, then click Configure Universal Access at the bottom of the Summary screen.

Large Text can only be turned on or off in iPhone settings. See “Large Text” on page 153.

VoiceOver

VoiceOver describes aloud what appears onscreen, so you can use iPhone without seeing it.

VoiceOver tells you about each element on the screen as you select it. When you select an element, a black rectangle (the VoiceOver cursor) encloses it and VoiceOver speaks the name or describes the item.

Touch the screen or drag your fingers to hear different items on the screen. When you select text, VoiceOver reads the text. If you turn on Speak Hints, VoiceOver may tell you the name of the item and provide instructions for you—for example, “double-tap to open.” To interact with items on the screen, such as buttons and links, use the gestures described in “Learning VoiceOver gestures” on page 145.

When you go to a new screen, VoiceOver plays a sound and automatically selects and speaks the first element of the screen (typically, the item in the upper-left corner). VoiceOver also lets you know when the display changes to landscape or portrait orientation, and when the screen is locked or unlocked.


Note: VoiceOver speaks in the language specified in International settings, which may be influenced by the Region Format setting (Settings > General > International > Region Format). VoiceOver is available in many languages, but not all.


Setting up VoiceOver

Important: VoiceOver changes the gestures you use to control iPhone. Once VoiceOver is turned on, you must use VoiceOver gestures to operate iPhone—even to turn VoiceOver off again to resume standard operation.

Note: You can't use VoiceOver and Zoom at the same time.

Turn VoiceOver on or off: Go to Settings > General > Accessibility > VoiceOver. You can also set Triple-click Home to turn VoiceOver on or off. See “Triple-click Home” on page 153.

Turn spoken hints on or off	Go to Settings > General > Accessibility > VoiceOver. When Speak Hints is turned on, VoiceOver may tell you the action of the item or provide instructions for you—for example, “double-tap to open.” You can also add Hints to the rotor, then swipe up or down to adjust. See “Using the VoiceOver rotor control” on page 147.
Set the VoiceOver speaking rate	Go to Settings > General > Accessibility > VoiceOver and drag the Speaking Rate slider. You can also add Speech Rate to the rotor, then swipe up or down to adjust. See “Using the VoiceOver rotor control” on page 147.
Change typing feedback	Go to Settings > General > Accessibility > VoiceOver > Typing Feedback.
Use phonetics in typing feedback	Go to Settings > General > Accessibility > VoiceOver > Use Phonetics. Text is read character-by-character. Voiceover first speaks the character, then its phonetic equivalent—for example, “f” and then “foxtrot.”
Use pitch change	Go to Settings > General > Accessibility > VoiceOver > Use Pitch Change. VoiceOver uses a higher pitch when entering a letter, and a lower pitch when deleting a letter. VoiceOver also uses a higher pitch when speaking the first item of a group (such as a list or table) and a lower pitch when speaking the last item of a group.
Set rotor options	Go to Settings > General > Accessibility > VoiceOver > Rotor. Tap to select or deselect options, or drag  up to reposition an item.
Change VoiceOver pronunciation	Set the rotor to Language and then swipe up or down. The Language rotor position is available when you select more than one pronunciation.

Select the pronunciations available in the language rotor	Go to Settings > General > Accessibility > VoiceOver > Language Rotor. To change the position of a language in the list, drag  up or down.
Change the language for iPhone	Go to Settings > General > International > Language. Some languages may be affected by the Region Format setting (Settings > General > International > Region Format).
Skip images while navigating	Go to Settings > General > Accessibility > VoiceOver > Navigate Images. You can choose to skip all images or only those without descriptions.
Speak notifications when you unlock iPhone	Go to Settings > General > Accessibility > VoiceOver > Speak Notifications. If this is off, iPhone speaks only the time when you unlock it.

Using VoiceOver



Select items on the screen: Drag your finger over the screen. VoiceOver identifies each element as you touch it. You can move systematically from one element to the next by flicking left or right with a single finger. Elements are selected from left-to-right, top-to-bottom. Flick right to go to the next element, or flick left to go to the previous element.

Enable vertical navigation	Add Vertical Navigation to the rotor, use the rotor to select it, then swipe up or down to move to the item above or below. See “Using the VoiceOver rotor control” on page 147.
Select the first or last element on the screen	Flick up or down with four fingers.
Unlock iPhone	Select the Unlock button, then double-tap the screen.
Select an item by name	Triple-tap with two fingers anywhere on the screen to open the Item Chooser. Then type a name in the search field, or flick right or left to move through the list alphabetically, or tap the table index to the right of the list and flick up or down to move quickly through the list of items.
Change the name of a screen item so it’s easier to find	Tap and hold with two fingers anywhere on the screen.

Speak the text of the selected element: Flick down or up with one finger to read the next or previous word or character (twist the rotor control to choose characters or words). You can include the phonetic spelling. See “Setting up VoiceOver” on page 143.

Stop speaking an item	Tap once with two fingers. Tap again with two fingers to resume speaking. Speaking automatically resumes when you select another item.
Change the speaking volume	Use the volume buttons on iPhone, or add volume to the rotor and swipe up and down to adjust. See “Using the VoiceOver rotor control” on page 147.
Mute VoiceOver	Double-tap with three fingers. Double-tap again with three fingers to turn speaking back on. To turn off only VoiceOver sounds, set the Ring/Silent switch to Silent. If an external keyboard is connected, you can also press the Control key on the keyboard to mute or unmute VoiceOver.
Change the reading voice	Go to Settings > General > Accessibility > VoiceOver > Use Compact Voice.
Speak the entire screen from the top	Flick up with two fingers.
Speak from the current item to the bottom of the screen	Flick down with two fingers.
Speak the iPhone status information	Tap the top of the screen to hear such information as the time, battery life, Wi-Fi signal strength, and more.

“Tap” the selected item when VoiceOver is on: Double-tap anywhere on the screen.

“Double-tap” the selected item when VoiceOver is on	Triple-tap anywhere on the screen.
Adjust a slider	With a single finger, flick up to increase the setting or down to decrease the setting. VoiceOver announces the setting as you adjust it.
Scroll a list or area of the screen	Flick up or down with three fingers. Flick down to page down through the list or screen, or flick up to page up. When paging through a list, VoiceOver speaks the range of items displayed (for example, “showing rows 5 through 10”). You can also scroll continuously through a list, instead of paging through it. Double-tap and hold. When you hear a series of tones, you can move your finger up or down to scroll the list. Continuous scrolling stops when you lift your finger.
Use a list index	Some lists have an alphabetical index along the right side. The index can’t be selected by flicking between elements; you must touch the index directly to select it. With the index selected, flick up or down to move along the index. You can also double-tap, then slide your finger up or down.
Reorder a list	Some lists, such as Favorites in Phone, and Rotor and Language Rotor in Accessibility settings can be reordered. Select  on the right side of an item, double-tap and hold until you hear a sound, then drag up or down. VoiceOver speaks the item you’ve moved above or below, depending on the direction you’re dragging.
Rearrange the Home screen	On the Home screen, select the icon you want to move. Double-tap and hold the icon, then drag it. VoiceOver speaks the row and column position as you drag the icon. Release the icon when it’s in the location you want. You can drag additional icons. Drag an item to the left or right edge of the screen to move it to a different page of the Home screen. When you finish, press the Home button  .
Turn the screen curtain on or off	Triple-tap with three fingers. When the screen curtain is on, the screen contents are active even though the display is turned off.
Unlock iPhone	Select the Unlock switch, then double-tap the screen.

Learning VoiceOver gestures

When VoiceOver is turned on, the standard touchscreen gestures have different effects. These and some additional gestures let you move around the screen and control individual elements when they’re selected. VoiceOver gestures include two- and three-finger gestures to tap or flick. For best results when using two- and three-finger gestures, relax and let your fingers touch the screen with some space between them.

You can use standard gestures when VoiceOver is turned on, by double-tapping and holding your finger on the screen. A series of tones indicates that normal gestures are in force. They remain in effect until you lift your finger. Then VoiceOver gestures resume.

You can use different techniques to enter VoiceOver gestures. For example, you can enter a two-finger tap using two fingers from one hand, or one finger from each hand. You can also use your thumbs. Many find the “split-tap” gesture especially effective: instead of selecting an item and double-tapping, you can touch and hold an item with one finger, then tap the screen with another finger. Try different techniques to discover which works best for you.

If your gestures don’t work, try quicker movements, especially for double-tapping and flicking gestures. To flick, try quickly brushing the screen with your finger or fingers. When VoiceOver is turned on, the VoiceOver Practice button appears, which gives you a chance to practice VoiceOver gestures before proceeding.

Practice gestures: Go to Settings > General > Accessibility > VoiceOver, then tap VoiceOver Practice. When you finish practicing, tap Done.

If you don't see the VoiceOver Practice button, make sure VoiceOver is turned on.

Here's a summary of key VoiceOver gestures:

Navigate and read

- *Tap*: Speak item.
- *Flick right or left*: Select the next or previous item.
- *Flick up or down*: Depends on the Rotor Control setting. See "Using the VoiceOver rotor control" on page 147.
- *Two-finger tap*: Stop speaking the current item.
- *Two-finger flick up*: Read all from the top of the screen.
- *Two-finger flick down*: Read all from the current position.
- *Two-finger "scrub"*: Move two fingers back and forth three times quickly (making a "z") to dismiss an alert or go back to the previous screen.
- *Two-finger triple tap*: Open the Item Chooser.
- *Three-finger flick up or down*: Scroll one page at a time.
- *Three-finger flick right or left*: Go to the next or previous page (such as the Home screen, Stocks, or Safari).
- *Three-finger tap*: Speak additional information, such as position within a list or whether text is selected.
- *Four-finger tap at top of screen*: Select the first item on the page.
- *Four-finger tap at bottom of screen*: Select the last item on the page.

Activate

- *Double-tap*: Activate the selected item.
- *Triple-tap*: Double-tap an item.
- *Split-tap*: An alternative to selecting an item and double-tapping is to touch an item with one finger, then tap the screen with another to activate an item.
- *Touch an item with one finger, tap the screen with another finger ("split-tapping")*: Activate the item.
- *Double-tap and hold (1 second) + standard gesture*: Use a standard gesture.
The double-tap and hold gesture tells iPhone to interpret the subsequent gesture as standard. For example, you can double-tap and hold, then without lifting your finger, drag your finger to slide a switch.
- *Two-finger double-tap*: Answer or end a call. Play or pause in Music, Videos, YouTube, Voice Memos, or Photos. Take a photo (Camera). Start or pause recording in Camera or Voice Memos. Start or stop the stopwatch.
- *Two-finger double-tap and hold*: Open the element labeler.
- *Two-finger triple-tap*: Open the Item Chooser.
- *Three-finger double-tap*: Mute or unmute VoiceOver.
- *Three-finger triple-tap*: Turn the screen curtain on or off.

Using the VoiceOver rotor control

The rotor control is a virtual dial that you can use to change the results of up and down flick gestures when VoiceOver is turned on.

Operate the rotor: Rotate two fingers on the iPhone screen around a point between them.



Change the options included in the rotor: Go to Settings > General > Accessibility > VoiceOver > Rotor and select the options you want to be available using the rotor.

The effect of the rotor setting depends on what you're doing. If you're reading text in an email you received, you can use the rotor to switch between hearing text spoken word-by-word or character-by-character when you flick up or down. If you're browsing a webpage, you can use the rotor setting to hear all the text (either word-by-word or character-by-character), or to jump from one element to another of a certain type, such as headers or links.

Reading text

Select and hear text by:

- Character, word, or line

Speaking

Adjust VoiceOver speaking by:

- Volume or rate
- Use of typing echo, pitch change, or phonetics (using Apple Wireless Keyboard)

See "Controlling VoiceOver using an Apple Wireless Keyboard" on page 150.

Navigating

Select and hear items by:

- Character, word, or line
- Heading
- Link, visited link, non-visited link, or in-page link
- Form control
- Table or row (when navigating a table)
- List
- Landmark
- Image
- Static text
- Items of the same type
- Buttons
- Text fields
- Search fields
- Containers (screen regions such as the dock)

Zoom in or out

Entering text

Move insertion point and hear text by:

- Character, word, or line

Select edit function

Select language

Using a control

Select and hear values by:

- Character, word, or line

Adjust the value of the control object

Entering and editing text with VoiceOver

When you select a text field with VoiceOver, you can use the onscreen keyboard or an external keyboard connected to iPhone to enter text.

There are two ways to enter text in VoiceOver—*standard* typing and *touch* typing. With standard typing, you select a key, then double-tap the screen to enter the character. With touch typing, you touch to select a key and the character is entered automatically when you lift your finger. Touch typing can be quicker, but may require more practice than standard typing.

VoiceOver also lets you use the editing features of iPhone to cut, copy, or paste in a text field.


Enter text: Select an editable text field, double-tap to display the insertion point and the onscreen keyboard, and type characters.

- *Standard typing:* Select a key on the keyboard by flicking left or right, then double-tap to enter the character. Or move your finger around the keyboard to select a key and, while continuing to touch the key with one finger, tap the screen with another finger. VoiceOver speaks the key when it's selected, and again when the character is entered.
- *Touch typing:* Touch a key on the keyboard to select it, then lift your finger to enter the character. If you touch the wrong key, move your finger on the keyboard until you select the key you want. VoiceOver speaks the character for each key as you touch it, but doesn't enter a character until you lift your finger.

Note: Touch typing works only for the keys that enter text. Use standard typing for other keys such as Shift, Delete, and Return.

Move the insertion point: Flick up or down to move the insertion point forward or backward in the text. Use the rotor to choose whether you want to move the insertion point by character, by word, or by line. VoiceOver makes a sound when the insertion point moves, and speaks the character, word, or line that the insertion point moves across.

When moving forward by words, the insertion point is placed at the end of each word, before the space or punctuation that follows. When moving backward, the insertion point is placed at the end of the preceding word, before the space or punctuation that follows it. To move the insertion point past the punctuation at the end of a word or sentence, use the rotor to switch back to character mode. When moving the insertion point by line, VoiceOver speaks each line as you move across it. When moving forward, the insertion point is placed at the beginning of the next line (except when you reach the last line of a paragraph, when the insertion point is moved to the end of the line just spoken). When moving backward, the insertion point is placed at the beginning of the line that's spoken.

Choose standard or touch typing	With VoiceOver turned on and a key selected on the keyboard, use the rotor to select Typing Mode, then flick up or down.
Delete a character	Select the  , then double-tap or split-tap. You must do this even when touch typing. To delete multiple characters, touch and hold the Delete key, then tap the screen with another finger once for each character you want to delete. VoiceOver speaks the character as it's deleted. If Use Pitch Change is turned on, VoiceOver speaks deleted characters in a lower pitch.
Select text	Set the rotor to Edit, flick up or down to choose Select or Select All, then double tap. If you chose Select, the word closest to the insertion point is selected when you double-tap. If you chose Select All, the entire text is selected. Pinch apart or together to increase or decrease the selection.
Cut, copy, or paste	Make sure the rotor is set to edit. With text selected, flick up or down to choose Cut, Copy, or Paste, then double-tap.
Undo	Shake iPhone, flick left or right to choose the action to undo, then double-tap.
Enter an accented character	In standard typing mode, select the plain character, then double-tap and hold until you hear a sound indicating alternate characters have appeared. Drag left or right to select and hear the choices. Release your finger to enter the current selection.
Change the language you're typing in	Set the rotor to Language, then flick up or down. Choose "default language" to use the language specified in International settings. The Language rotor appears only if you select more than one language in the VoiceOver Language Rotor setting. See "Setting up VoiceOver" on page 143.

Making phone calls with VoiceOver

Double-tap the screen with two fingers to answer or end a call. When a phone call is established with VoiceOver on, the screen displays the numeric keypad by default, instead of showing call options. This makes it easier to use the keypad to respond to a menu of options when you reach an automated system.

Display call options: Select the Hide Keypad button in the lower-right corner and double-tap.

Display the numeric keypad again: Select the Keypad button near the center of the screen and double-tap.

Using VoiceOver with Safari

When you search the web in Safari with VoiceOver on, the Search Results rotor items lets you hear the list of suggested search phrases.

Search the web: Select the search field, enter your search, then select Search Results using the rotor. Flick right or left to move down or up the list, then double-tap the screen to search the web using the current search phrase.

Using VoiceOver with Maps

You can use VoiceOver to zoom in or out, select pins, and get information about locations.

Zoom in or out: Select the map, use the rotor to choose zoom mode, then flick up or down to zoom in or out.

Select a pin: Touch a pin, or flick left or right to move from one item to another.

Get information about a location: With a pin selected, double-tap to display the information flag. Flick left or right to select the More Info button, then double-tap to display the information page.

Editing videos and voice memos with VoiceOver

You can use VoiceOver gestures to trim Camera videos and Voice Memo recordings.

Trim a voice memo: On the Voice Memos screen, select the button to the right of the memo you want to trim, then double-tap. Then select Trim Memo and double-tap. Select the beginning or end of the trim tool. Flick up to drag to the right, or flick down to drag to the left. VoiceOver announces the amount of time the current position will trim from the recording. To execute the trim, select Trim Voice Memo and double-tap.

Trim a video: While viewing a video in Photos, double-tap the screen to display the video controls, then select the beginning or end of the trim tool. Then flick up to drag to the right, or flick down to drag to the left. VoiceOver announces the amount of time the current position will trim from the recording. To execute the trim, select Trim and double-tap.

Controlling VoiceOver using an Apple Wireless Keyboard

You can control VoiceOver on iPhone using an Apple Wireless Keyboard. See “Using an Apple Wireless Keyboard” on page 27.

You can use VoiceOver keyboard commands to navigate the screen, select items, read screen contents, adjust the rotor, and perform other VoiceOver actions. All the keyboard commands (except one) include Control-Option, abbreviated in the table below as “VO.”

VoiceOver Help speaks keys or keyboard commands as you type them. You can use VoiceOver Help to learn the keyboard layout and the actions associated with key combinations.

VoiceOver keyboard commands

VO = Control-Option

Read all, starting from the current position	VO-A
Read from the top	VO-B
Move to the status bar	VO-M
Press the Home button	VO-H
Select the next or previous item	VO-Right Arrow or VO-Left Arrow
Tap an item	VO-Space bar
Double-tap with two fingers	VO-“-”
Choose the next or previous rotor item	VO-Up Arrow or VO-Down Arrow
Choose the next or previous speech rotor item	VO-Command-Left Arrow or VO-Command-Right Arrow
Adjust speech rotor item	VO-Command-Up Arrow or VO-Command-Down Arrow
Mute or unmute VoiceOver	VO-S
Turn the screen curtain on or off	VO-Shift-S
Turn on VoiceOver help	VO-K
Return to the previous screen, or turn off VoiceOver help	Escape

Quick Nav

Turn on Quick Nav to control VoiceOver using the arrow keys. Quick Nav is off by default.

Turn Quick Nav on or off	Left Arrow–Right Arrow
Select the next or previous item	Right Arrow or Left Arrow
Select the next or previous item specified by the rotor setting	Up Arrow or Down Arrow
Select the first or last item	Control–Up Arrow or Control–Down Arrow
"Tap" an item	Up Arrow–Down Arrow
Scroll up, down, left, or right	Option–Up Arrow, Option–Down Arrow, Option–Left Arrow, or Option–Right Arrow
Change the rotor	Up Arrow–Left Arrow or Up Arrow–Right Arrow

You can also use the number keys on an Apple Wireless Keyboard to dial a phone number in Phone or enter numbers in Calculator.

Single-letter Quick Nav for the web

When you view a web page with Quick Nav enabled, you can use the following keys on the keyboard to navigate the page quickly. Typing the key moves to the next item of the indicated type. Hold the Shift key as you type the letter to move to the previous item.

H	Heading
L	Link
R	Text field
B	Button
C	Form control
I	Image
T	Table
S	Static text
W	ARIA landmark
X	List
M	Element of the same type
1	Level 1 heading
2	Level 2 heading
3	Level 3 heading
4	Level 4 heading
5	Level 5 heading
6	Level 6 heading

Using a braille display with VoiceOver

You can use a refreshable Bluetooth braille display to read VoiceOver output in braille, and you can use a braille display with input keys and other controls to control iPhone when VoiceOver is turned on. iPhone works with many wireless braille displays. For a list of supported displays, go to www.apple.com/accessibility/iphone/braille-display.html.

Set up a braille display: Turn on the display, then go to Settings > General > Bluetooth and turn on Bluetooth. Then, go to Settings > General > Accessibility > VoiceOver > Braille and choose the display.

Turn contracted braille on or off	Go to Settings > General > Accessibility > VoiceOver > Braille.
--	---

Turn eight-dot braille on or off	Go to Settings > General > Accessibility > VoiceOver > Braille.
---	---

For information about common braille commands for VoiceOver navigation, and for information specific to certain displays, go to support.apple.com/kb/HT4400.

The braille display uses the language that's set for Voice Control. This is normally the language set for iPhone in Settings > International > Language. You can use the VoiceOver language setting to set a different language for VoiceOver and braille displays.

Set the language for VoiceOver: Go to Settings > General > International > Voice Control, then choose the language.

If you change the language for iPhone, you may need to reset the language for VoiceOver and your braille display.

You can set the leftmost or rightmost cell of your braille display to provide system status and other information:

- Announcement History contains an unread message
- The current Announcement History message hasn't been read
- VoiceOver speech is muted
- The iPhone battery is low (less than 20% charge)
- iPhone is in landscape orientation
- The screen display is turned off
- The current line contains additional text to the left
- The current line contains additional text to the right

Set the leftmost or rightmost cell to display status information: Go to Settings > General > Accessibility > VoiceOver > Braille > Status Cell, and tap Left or Right.

See an expanded description of the status cell: On your braille display, press the status cell's router button.

Routing the audio of incoming calls


You can have the audio of incoming calls automatically routed to a headset or speaker phone instead of the iPhone receiver.

Reroute call audio: Go to Settings > General > Accessibility > Incoming Calls and choose where you want to hear your calls.

Siri

With Siri, you can do things with your iPhone just by asking, and VoiceOver can read Siri responses to you. For information, see Chapter 4, “Siri,” on page 39.

Triple-click Home

Triple-click Home provides an easy way to turn some of the Accessibility features on or off when you press the Home button  quickly three times. You can set Triple-click Home to:

- Turn VoiceOver on or off
- Turn White on Black on or off
- Turn Zoom on or off
- Turn AssistiveTouch on or off

You can also set Triple-click Home to present the option to turn VoiceOver, White on Black, or Zoom on or off. Triple-click Home is turned off by default.

Set the Triple-click Home function: Go to Settings > General > Accessibility > Triple-click Home.

Zoom

Many iPhone apps let you zoom in or out on specific elements. For example, you can double-tap or use the pinch gesture to expand webpage columns in Safari.

Zoom is also a special accessibility feature that lets you magnify the entire screen of any app you’re using, to help you see what’s on the display.

While using Zoom with an Apple Wireless Keyboard (see “Using an Apple Wireless Keyboard” on page 27), the screen image follows the insertion point, keeping it in the center of the display.

Turn Zoom on or off: Go to Settings > General > Accessibility > Zoom. Or, use Triple-click Home. See “Triple-click Home” on page 153.

Note: You can’t use VoiceOver and Zoom at the same time.

Zoom in or out	Double-tap the screen with three fingers. By default, the screen is magnified 200 percent. If you manually change the magnification (by using the tap-and-drag gesture, described below), iPhone automatically returns to that magnification when you zoom in by double-tapping with three fingers.
Increase magnification	With three fingers, tap and drag toward the top of the screen (to increase magnification) or toward the bottom of the screen (to decrease magnification). The tap-and-drag gesture is similar to a double-tap, except you don’t lift your fingers on the second tap—instead, drag your fingers on the screen. Once you start dragging, you can drag with a single finger.
Move around the screen	When zoomed in, drag or flick the screen with three fingers. Once you start dragging, you can drag with a single finger so that you can see more of the screen. Hold a single finger near the edge of the display to pan to that side of the screen image. Move your finger closer to the edge to pan more quickly. When you open a new screen, Zoom always goes to the top-middle of the screen.

Large Text

Large Text lets you make the text larger in alerts, and in Calendar, Contacts, Mail, Messages, and Notes.

Set the text size: Go to Settings > General > Accessibility > Large Text.

White on Black

Use White on Black to invert the colors on the iPhone screen, which may make it easier to read the screen. When White on Black is turned on, the screen looks like a photographic negative.

Invert the screen's colors: Go to Settings > General > Accessibility > White on Black.

Speak Selection

Even with VoiceOver turned off, you can have iPhone read aloud any text you can select.

Turn on Speak Selection and adjust speaking rate: Go to Settings > General > Accessibility > Speak Selection.

Have text read to you

Select the text, then tap Speak.

Speak Auto-text

Speak Auto-text speaks the text corrections and suggestions iPhone makes when you're typing.

Turn Speak Auto-text on or off: Go to Settings > General > Accessibility > Speak Auto-text.

Speak Auto-text also works with VoiceOver or Zoom.

Mono Audio

Mono Audio combines the left and right stereo channels into a mono signal played through both channels. You can adjust the balance of the mono signal for greater volume on the right or left.

Turn Mono Audio on or off: Go to Settings > General > Accessibility > Mono Audio.

Hearing aid compatibility

The FCC has adopted hearing aid compatibility (HAC) rules for digital wireless phones. These rules require certain phones to be tested and rated under the American National Standard Institute (ANSI) C63.19-2007 hearing aid compatibility standards. The ANSI standard for hearing aid compatibility contains two types of ratings: an "M" rating for reduced radio frequency interference to enable acoustic coupling with hearing aids that are not operating in telecoil mode, and a "T" rating for inductive coupling with hearing aids operating in telecoil mode. These ratings are given on a scale from one to four, where four is the most compatible. A phone is considered hearing aid compatible under FCC rules if it is rated M3 or M4 for acoustic coupling and T3 or T4 for inductive coupling.

For current iPhone hearing aid compatibility ratings, go to www.apple.com/support/hac.

Hearing aid compatibility ratings don't guarantee that a particular hearing aid works with a particular phone. Some hearing aids may work well with phones that don't meet particular ratings. To ensure interoperability between a hearing aid and a phone, use them together before purchase.

Hearing Aid Mode

iPhone 4 GSM has a Hearing Aid Mode that, when activated, may reduce interference with some hearing aid models. Hearing Aid Mode reduces the transmission power of the cellular radio in the GSM 1900 MHz band and may result in decreased 2G cellular coverage.

Activate Hearing Aid Mode (iPhone 4 GSM): Go to Settings > General > Accessibility.

Custom Vibrations

You can assign special vibration patterns for phone calls or FaceTime calls from important contacts. Choose from existing patterns or create a new one.

Turn on custom vibrations: Go to Settings > General > Accessibility > Custom Vibrations.

Choose the vibration pattern for a contact	In Contacts, choose a contact, then tap “vibration.” If you don’t see vibration in the contact info, tap Edit and add it.
Create a new vibration pattern	If you’re already editing a contact, tap “vibration” and then tap Create New Vibration. You can also go to Settings > Sounds > Vibration > Create New Vibration.
Set a custom pattern as the default	Go to Settings > Sounds > Vibration and choose a pattern.

LED Flash for Alerts

If you can’t hear the sounds that announce incoming calls and other alerts, you can have iPhone flash its LED (next to the camera lens on the back of the iPhone). This works only when iPhone is locked or asleep. Available for iPhone 4 or later.

Turn on LED Flash for Alerts: Go to Settings > General > Accessibility > LED Flash for Alerts.

AssistiveTouch

AssistiveTouch helps you use iPhone if you have difficulty touching the screen or pressing the buttons. You can use a compatible adaptive accessory (such as a joystick) together with AssistiveTouch to control iPhone. You can also use AssistiveTouch without an accessory to perform gestures that are difficult for you.

Turn on AssistiveTouch: Go to Settings > General > Accessibility > AssistiveTouch. You can also set Triple-click Home to turn AssistiveTouch on or off; go to Settings > General > Accessibility > Triple-click Home.

Adjust the tracking speed	Go to Settings > General > Accessibility > AssistiveTouch > Touch speed.
Show or hide the AssistiveTouch menu	Click the secondary button on your accessory.
Hide the menu button	Go to Settings > General > Accessibility > AssistiveTouch > Always Show Menu.
Perform a flick or drag that uses 2, 3, 4, or 5 fingers	Tap the menu button, tap Gestures, and then tap the number of digits needed for the gesture. When the corresponding circles appear on the screen, flick or drag in the direction required by the gesture. When you finish, tap the menu button.
Perform a Pinch gesture	Tap the menu button, tap Favorites, and then tap Pinch. When the pinch circles appear, touch anywhere on the screen to move the pinch circles, then drag the pinch circles in or out to perform a pinch gesture. When you finish, tap the menu button.
Create your own gesture	Tap the menu button, tap Favorites, and then tap an empty gesture placeholder. You can also go to Settings > General > Accessibility > AssistiveTouch > “Create custom gesture.”
Lock or rotate the screen, adjust the volume, toggle ring/silent, or simulate shaking iPhone	Tap the menu button, then tap Device.
Simulate pressing the Home button	Tap the menu button, then tap Home.

Move the menu button	Drag it to any location on the screen.
Exit a menu without performing a gesture	Tap anywhere outside the menu.

Universal Access in OS X


Take advantage of the Universal Access features in OS X when you use iTunes to sync information and content from your iTunes library to iPhone. In the Finder, choose Help > Help Center, then search for “universal access.”

For more information about iPhone and OS X accessibility features, go to www.apple.com/accessibility.

TTY support

You can use the iPhone TTY Adapter cable (sold separately in many areas) to connect iPhone to a TTY machine. Go to www.apple.com/store (may not be available in all areas) or check with your local Apple retailer.

Connect iPhone to a TTY machine: Go to Settings > Phone and turn TTY on, and then connect iPhone to your TTY machine using the iPhone TTY Adapter.

When TTY is enabled on iPhone, the TTY icon  appears in the status bar at the top of the screen. For information about using a particular TTY machine, see the documentation that came with the machine.

Minimum font size for mail messages

To increase readability, you can set the minimum font size for Mail message text to Large, Extra Large, or Giant.

Set the minimum mail message font size: Go to Settings > Mail, Contacts, Calendars > Minimum Font Size.

The Large Text setting overrides this minimum font size.

Assignable ringtones

You can assign distinctive ringtones to individuals in your contacts list for audible caller ID. You can purchase ringtones from the iTunes Store on iPhone. See “Purchasing music, audiobooks, and tones” on page 116.

Visual voicemail

The play and pause controls in visual voicemail let you control the playback of messages. Drag the playhead on the scrubber bar to repeat a portion of the message that’s hard to understand. See “Checking voicemail” on page 62.

Widescreen keyboards

Many apps, including Mail, Safari, Messages, Notes, and Contacts, let you rotate iPhone when you’re typing, so you can use a larger keyboard.

Large phone keypad

Make phone calls simply by tapping entries in your contacts and favorites lists. When you need to dial a number, iPhone's large numeric keypad makes it easy. See "Phone calls" on page 56.

Voice Control

Voice Control lets you make phone calls and control Music playback using voice commands. See "Voice dialing" on page 57, and "Using Siri or Voice Control with Music" on page 78.

Closed captioning

Turn on closed captioning for videos: Go to Settings > Video > Closed Captioning.

Not all video content includes closed captions.



Settings lets you configure iPhone, set app options, add accounts, and enter other preferences.

Airplane mode

Airplane mode disables the wireless features in order to reduce potential interference with aircraft operation and other electrical equipment.

Turn on airplane mode: Go to Settings and turn on airplane mode.


When airplane mode is on, ✈ appears in the status bar at the top of the screen. No phone, Wi-Fi, or Bluetooth signals are emitted from iPhone, and GPS reception is turned off. You won't be able to use apps or features that depend on these signals, such as connecting to the Internet, placing or receiving phone calls or messages, getting visual voicemail, and so on.

If allowed by the aircraft operator and applicable laws and regulations, you can continue to listen to music, watch videos, browse email, calendar, and other data you've previously received, and use apps that don't require an Internet connection.

If Wi-Fi is available and allowed by the aircraft operator and applicable laws and regulations, go to Settings > Wi-Fi to turn it on. You can turn on Bluetooth in Settings > General > Bluetooth.

Wi-Fi



Joining Wi-Fi networks

Wi-Fi settings determine whether iPhone uses local Wi-Fi networks to connect to the Internet. When iPhone is joined to a Wi-Fi network, the Wi-Fi icon  in the status bar at the top of the screen shows signal strength. The more bars you see, the stronger the signal. If no Wi-Fi networks are available, or if you've turned Wi-Fi off, then iPhone connects to the Internet via your cellular data network when available.

Once you join a Wi-Fi network, iPhone automatically connects to it whenever the network is in range. If more than one previously used network is in range, iPhone joins the one last used.

You can also use iPhone to set up a new AirPort base station that provides Wi-Fi services to your home or office. See "Setting up an AirPort base station" on page 159.

Turn Wi-Fi on or off: Go to Settings > Wi-Fi.

Set iPhone to ask if you want to join a new network	Go to Settings > Wi-Fi and turn “Ask to Join Networks” on or off. If “Ask to Join Networks” is off, you must manually join a network to connect to the Internet when a previously used network isn’t available.
Forget a network, so iPhone doesn’t join it	Go to Settings > Wi-Fi and tap  next to a network you’ve joined before. Then tap “Forget this Network.”
Join a closed Wi-Fi network	To join a Wi-Fi network that isn’t shown in the list of scanned networks, go to Settings > Wi-Fi > Other, then enter the network name. You must already know the network name, password, and security type to connect to a closed network.
Adjust the settings for connecting to a Wi-Fi network	Go to Settings > Wi-Fi and tap  next to a network. You can set an HTTP proxy, define static network settings, turn on BootP, or renew the settings provided by a DHCP server.

Setting up an AirPort base station

An AirPort base station provides a Wi-Fi connection to your home, school, or small business network. You can use iPhone to set up a new AirPort Express, AirPort Extreme or Time Capsule base station.

Use the AirPort Setup Assistant: Go to Settings > Wi-Fi. Under “Set up an AirPort base station,” tap the name of the base station you want to set up. Then follow the onscreen instructions.

Some older AirPort base stations cannot be set up using an iOS device. For setup instructions, see the documentation that came with the base station.

If the base station you want to set up isn’t listed, make sure that it has power, that you’re within range, and that it hasn’t already been configured. You can only set up base stations that are new or have been reset.

If your AirPort base station is already configured, the AirPort Utility app from the App Store lets you change its settings and monitor its status on iPhone.

Notifications

Push notifications appear in Notification Center and alert you to new information, even when an app isn’t running. Notifications vary by app, but may include text or sound alerts, and a numbered badge on the app icon on the Home screen.

You can turn off notifications if you don’t want to be notified, and you can change the order notifications appear in.

Turn notifications on or off: Go to Settings > Notifications. Tap an item in the list, then turn notifications on or off for that item.

Apps that have notifications turned off are shown in the “Not In Notification Center” list.

Change the number of notifications	Go to Settings > Notifications, then choose an item in the In Notification Center list. Tap Show to set how many notifications of this type appear in Notification Center.
Change the alert styles	Go to Settings > Notifications, then choose an item from the In Notification Center list. Choose an alert style, or select None to turn off alerts and banners. Notifications will still appear in Notification Center.
Change the order of notifications	Go to Settings > Notifications, then tap Edit. Drag the notifications into the order you want. To turn off a notification, drag it to the Not In Notification Center list.

Display numbered badges on apps with notifications	Go to Settings > Notifications, then choose an item from the In Notification Center list and turn on Badge App Icon.
Hide alerts when iPhone is locked	Go to Settings > Notifications, then choose an app from the In Notification Center list. Turn off “View in Lock Screen” to hide alerts from the app when iPhone is locked.

Some apps have additional options. For example, Messages lets you specify how many times the alert sound repeats and whether message previews appear in the notification.

Location Services

Location Services lets apps such as Reminders, Maps, Camera, and third-party location-based apps gather and use data indicating your location. The location data collected by Apple isn't collected in a form that personally identifies you. Your approximate location is determined using available information from cellular network data, local Wi-Fi networks (if you have Wi-Fi turned on), and GPS (may not be available in all areas). To conserve battery life, turn Location Services off when you're not using it.

When an app is using Location Services,  appears in the menu bar.

Every app and system service that uses Location Services appears in the Location Services settings screen, showing whether Location Services is turned on or off for that app or service. If you don't want to use Location Services, you can turn it off for some or for all apps and services. If you turn Location Services off, you're prompted to turn it on again the next time an app or service tries to use this feature.

If you have third-party apps on iPhone that use Location Services, review the third-party terms and privacy policy for each app to understand how it uses your location data.

Turn Location Services on or off: Go to Settings > Location Services.

VPN

VPNs used within organizations allow you to communicate private information securely over a non-private network. You may need to configure VPN, for example, to access your work email. This setting appears when you have VPN configured on iPhone, allowing you to turn VPN on or off. See “Network” on page 163.

Personal Hotspot

You can use Personal Hotspot (iPhone 4 or later) to share an Internet connection with a computer or other device—such as an iPod, iPad, or other iPhone—connected to your iPhone via Wi-Fi. You can also use Personal Hotspot to share an Internet connection with a computer connected to iPhone via Bluetooth or USB. Personal Hotspot works only if iPhone is connected to the Internet over the cellular data network.


Note: This feature may not be available in all areas. Additional fees may apply. Contact your carrier for more information.

Share an Internet connection: Go to Settings > General > Network and tap Set Up Personal Hotspot—if it appears—to set up the service with your carrier.

After you turn on Personal Hotspot, other devices can connect in the following ways:

- *Wi-Fi*: On the device, choose your iPhone from the list of available Wi-Fi networks.
- *USB*: Connect your computer to iPhone using the Dock Connector to USB Cable. In your computer's Network preferences, choose iPhone and configure the network settings.
- *Bluetooth*: On iPhone, go to Settings > General > Bluetooth and turn on Bluetooth. To pair and connect iPhone with your device, refer to the documentation that came with your computer.

When a device is connected, a blue band appears at the top of the iPhone screen. Personal Hotspot remains on when you connect with USB, even when you aren't actively using the Internet connection.

Note: The Personal Hotspot icon  appears in the status bar of iOS devices using the Personal Hotspot.

Change the Wi-Fi password for iPhone	Go to Settings > Personal Hotspot > Wi-Fi Password, then enter a password of at least 8 characters.
Monitor your cellular data network usage	Go to Settings > General > Usage > Cellular Usage.

Carrier

This setting appears on GSM networks when you're outside your carrier's network and other local carrier data networks are available to use for your phone calls, visual voicemail, and cellular network Internet connections. You can make calls only on carriers that have a roaming agreement with your carrier. Additional fees may apply. Roaming charges may be billed to you by the other carrier, through your carrier.

Select a carrier: Go to Settings > Carrier and select the network you want to use.

Once you select a network, iPhone uses only that network. If the network is unavailable, "No service" appears on the iPhone.

Sounds and the Ring/Silent switch

You can set iPhone to play a sound whenever you get a new message, email, call, Tweet, voicemail, or reminder. Sounds can also play for appointments, sending an email, keyboard clicks, and when you lock iPhone.

When set to silent, iPhone doesn't play any ring, alert, or effects sounds. It does, however, play Clock alarms and other sounds.

Switch between ring and silent mode: Flip the Ring/Silent switch on the side of iPhone.

Note: In some areas, the sound effects for Camera and Voice Memos are played even if the Ring/Silent switch is set to silent.

Set whether iPhone vibrates when you get a call	Go to Settings > Sounds.
Adjust the ringer and alerts volume	Go to Settings > Sounds and drag the slider. Or, if "Change with Buttons" is turned on, use the volume buttons on the side of iPhone.
Change the volume of other sounds	Use the volume buttons on the side of iPhone.
Set the ringtone	Go to Settings > Sounds > Ringtone.
Set the ringer and alerts sounds	Go to Settings > Sounds and select tones for the items in the list.

Brightness

Screen brightness affects battery life. Dim the screen to extend the time before you need to recharge iPhone, or use Auto-Brightness.

Adjust the screen brightness: Go to Settings > Brightness and drag the slider.

Set whether iPhone adjusts screen brightness automatically	Go to Settings > Brightness and turn Auto-Brightness on or off. If Auto-Brightness is on, iPhone adjusts the screen brightness for current light conditions using the built-in ambient light sensor.
---	--

Wallpaper

Wallpaper settings let you set an image or photo as wallpaper for the Lock screen or Home screen. See “Adding wallpaper” on page 23.

General

General settings include network, sharing, security, and other iOS settings. You can also find information about your iPhone, and reset various iPhone settings.

About

Go to Settings > General > About to get information about iPhone, including available storage space, serial numbers, network addresses, IMEI (International Mobile Equipment Identity) and ICCID (Integrated Circuit Card Identifier, or Smart Card) (GSM), MEID (Mobile Equipment Identifier) (CDMA), and legal and regulatory information.

Change the device name: Go to Settings > General > About, then tap Name.

The device name appears in the sidebar when it’s connected to iTunes, and it’s used by iCloud.

Software Update

Software Update lets you download and install iOS updates from Apple.

Update to the latest iOS version: Go to Settings > General > Software Update.

If a newer version of iOS is available, follow the onscreen instructions to download and install the update.

Note: Make sure iPhone is connected to a power source so that the installation, which can take several minutes, completes successfully.

Usage

Usage lets you view cellular usage, battery status, and available storage. You can also view and manage iCloud storage.

View cellular network usage, battery status, and available storage: Go to Settings > General > Usage.

See your cellular usage	Go to Settings > General > Usage > Cellular Usage.
Manage iCloud storage	Go to Settings > General > Usage > Manage Storage. You can view and delete backups, and turn off backing up your Camera Roll. You can also buy additional iCloud storage. For information, see “iCloud” on page 16.
View app storage	Go to Settings > General > Usage. Each installed app’s total storage space is shown. For more details, tap the app’s name.

Reset your usage statistics	Go to Settings > General > Usage > Cellular Usage, then tap Reset Statistics to clear the data and cumulative time statistics.
Show battery percentage	Go to Settings > General > Usage and turn on Battery Percentage.

Siri


Enable Siri: Go to Settings > General > Siri.

For information about using Siri and changing Siri settings, see “Setting options for Siri” on page 42.

Network

Use Network settings to configure a VPN (virtual private network) connection, access Wi-Fi settings, or turn cellular data roaming on or off.

When an app needs to use the Internet, iPhone does the following, in order, until connected:

- Connects over the most recently used available Wi-Fi network .
- Shows a list of Wi-Fi networks in range, and connects using the one you choose.
- Connects over the cellular data network, if available.

If iPhone is connected to the Internet via the cellular data network, the **4G**, **3G**, **E**, or **o** icon appears in the status bar.

The 4G and 3G GSM cellular networks support simultaneous voice and data communications. For all other cellular connections, you can't use Internet services while you're talking on the phone unless iPhone also has a Wi-Fi connection to the Internet. Depending on your network connection, you may not be able to receive calls while iPhone transfers data over the cellular network—when downloading a webpage, for example.

GSM networks: On an EDGE or GPRS connection, incoming calls may go directly to voicemail during data transfers. For incoming calls that you answer, data transfers are paused.

CDMA: On EV-DO connections, data transfers are paused when you answer incoming calls. On 1xRTT connections, incoming calls may go directly to voicemail during data transfers. For incoming calls that you answer, data transfers are paused.

Data transfer resumes when you end the call.

Turn Cellular Data on or off: Go to Settings > General > Network, then turn Cellular Data on or off.

If Cellular Data is turned off, all data services will use only Wi-Fi—including email, web browsing, push notifications, and other services. If Cellular Data is turned on, carrier charges may apply. For example, certain features and services such as Siri and Messages transfer data, and your use of these features and services could impact charges to your data plan.

Turn Voice Roaming on or off (CDMA)	Go to Settings > General > Network. Turn Voice Roaming off to avoid charges from using other carrier's networks. When your carrier's network isn't available, iPhone won't have cellular (data or voice) service.
Turn Data Roaming on or off	Go to Settings > General > Network. Data Roaming permits Internet access over a cellular data network when you're in an area not covered by your carrier's network. When you're traveling, you can turn off Data Roaming to avoid roaming charges. See "Carrier" on page 161.
Enable or disable 3G	Go to Settings > General > Network. This option is not available in all areas. Using 3G loads Internet data faster in some cases, but may decrease battery performance. If you're making a lot of phone calls, you may want to turn 3G off to extend battery life.
Turn Personal Hotspot on or off	Go to Settings > General > Network > Personal Hotspot. See "Personal Hotspot" on page 160.
Add a new VPN configuration	Go to Settings > General > Network > VPN > Add VPN Configuration. Ask your network administrator which settings to use. In most cases, if you set up VPN on your computer, you can use the same VPN settings for iPhone. See "VPN" on page 160.

Bluetooth

iPhone can connect wirelessly to Bluetooth devices such as headsets, headphones, and car kits for music listening and hands-free talking. You can also connect the Apple Wireless Keyboard with Bluetooth. See "Using an Apple Wireless Keyboard" on page 27.

Turn Bluetooth on or off: Go to Settings > General > Bluetooth and turn Bluetooth on or off.

Connect to a Bluetooth device	Tap the device in the Devices list, then follow the onscreen instructions to connect to it. See the documentation that came with the device for instructions about Bluetooth pairing.
--------------------------------------	---

iTunes Wi-Fi Sync

You can sync iPhone with iTunes on a computer that is connected to the same Wi-Fi network.

Enable iTunes Wi-Fi Sync: To set up Wi-Fi syncing for the first time, connect iPhone to the computer that you want to sync with. For instructions see "Syncing with iTunes" on page 18.

After you configure Wi-Fi Sync, iPhone syncs with iTunes automatically, once a day, when it's connected to a power source and:

- iPhone and your computer are both connected to the same Wi-Fi network.
- iTunes on your computer is running.


See the date and time of the last sync	Go to Settings > General > iTunes Wi-Fi Sync.
Immediately sync with iTunes	Go to Settings > General > iTunes Wi-Fi Sync, then tap Sync Now.

Spotlight Search

The Spotlight Search setting lets you specify the content areas searched by Search, and rearrange the order of the results.

Set which content areas are searched by Search: Go to Settings > General > Spotlight Search, then select the items to search.

Set the order of search result categories

Go to Settings > General > Spotlight Search. Touch  next to an item, then drag up or down.

Auto-Lock

Locking iPhone turns off the display in order to save your battery and prevent unintended operation of iPhone. You can still receive calls and text messages, and you can adjust the volume and use the mic button on the iPhone earphones when listening to music or on a call.

Set the amount of time before iPhone locks: Go to Settings > General > Auto-Lock, then choose a time.

Passcode Lock

By default, iPhone doesn't require you to enter a passcode to unlock it.

Set a passcode: Go to Settings > General > Passcode Lock and set a 4-digit passcode.

If you forget your passcode, you must restore the iPhone software. See "Updating and restoring iPhone software" on page 175.

Turn passcode lock off or change your passcode

Go to Settings > General > Passcode Lock.

Set how long before your passcode is required

Go to Settings > General > Passcode Lock and enter your passcode. Tap Require Passcode, then select how long iPhone will wait after being locked before it requires your passcode in order to be unlocked again.

Turn Simple Passcode on or off

Go to Settings > General > Passcode Lock.
A simple passcode is a four-digit number. To increase security, turn off Simple Passcode and use a longer passcode with a combination of numbers, letters, punctuation, and special characters.

Prevent access to Siri when iPhone is locked

Go to Settings > General > Passcode Lock > Siri. See "Setting options for Siri" on page 42.

Turn Voice Dial on or off

Go to Settings > General > Passcode Lock.
Turning off Voice Dial prevents someone from placing a call when iPhone is locked. This setting is available only when Siri is turned off. For information about dialing using Siri, see "Phone" on page 44.

Erase data after ten failed passcode attempts

Go to Settings > General > Passcode Lock and tap Erase Data.
After ten failed passcode attempts, all settings are reset, and all your information and media are erased by removing the encryption key to the data (which is encrypted using 256-bit AES encryption).


Restrictions

You can set restrictions for some apps and for purchased content. For example, parents can restrict explicit music from being seen on playlists, or turn off YouTube access entirely.

Turn on restrictions: Go to Settings > General > Restrictions, then tap Enable Restrictions.

Important: If you forget your passcode, you must restore the iPhone software. See “Updating and restoring iPhone software” on page 175.

You can set the following restrictions:

Safari	Safari is disabled and its icon is removed from the Home screen. You cannot use Safari to browse the web or access web clips.
YouTube	YouTube is disabled and its icon is removed from the Home screen.
Camera	Camera is disabled and its icon is removed from the Home screen. You cannot take photos.
FaceTime	You cannot make or receive FaceTime video calls.
iTunes	The iTunes Store is disabled and its icon is removed from the Home screen. You cannot preview, purchase, or download content.
Ping	You cannot access Ping or any of its features.
Installing Apps	The App Store is disabled and its icon is removed from the Home screen. You cannot install apps on iPhone.
Deleting Apps	You cannot delete apps from iPhone.  doesn't appear on app icons when you're customizing the Home screen.
Siri	You cannot use Siri. Voice commands and dictation are disabled.
Explicit Language	Siri attempts to replace explicit words you speak by replacing them with asterisks and beep sounds.
Location	Turn off Location Services for individual apps. You can also lock Location Services so that changes to the settings can't be made, including authorizing additional apps to use the services.
Accounts	The current Mail, Contacts, Calendar settings are locked. You cannot add, modify, or delete accounts. You also cannot modify iCloud settings.
In-app Purchases	Turn off In-App Purchases. When enabled, this feature lets you purchase additional content or functionality within apps you download from the App Store.
Require Password	Requires you to enter your Apple ID for in-app purchases after the time period you specify.
Set content restrictions	Tap Ratings For, then select a country from the list. You can set restrictions using a country's ratings system for music, podcasts, movies, TV shows, and apps. Content that doesn't meet the rating you select won't appear on iPhone.
Multiplayer Games	When Multiplayer Games is off, you can't request a match, send or receive invitations to play games, or add friends in Game Center.
Adding Friends	When Adding Friends is off, you can't make or receive friend requests in Game Center. If Multiplayer Games is turned on, you can continue to play with existing friends.

Date & Time

These settings affect the time shown in the status bar at the top of the screen, and in world clocks and calendars.

Set whether iPhone shows 24-hour time or 12-hour time: Go to Settings > General > Date & Time, then turn 24-Hour Time on or off. (24-Hour Time may not be available in all areas.)

Set whether iPhone updates the date and time automatically	Go to Settings > General > Date & Time, then turn Set Automatically on or off. If iPhone is set to update the time automatically, it gets the correct time over the cellular network and updates it for the time zone you're in. Some carriers don't support network time in all areas. If you're traveling, iPhone may not be able to automatically set the local time.
Set the date and time manually	Go to Settings > General > Date & Time, then turn Set Automatically off. Tap Time Zone to set your time zone. Tap the Date & Time button, then tap Set Date & Time and enter the date and time.

Keyboard

You can turn on keyboards for writing in different languages, and you can turn typing features, such as spell-checking, on or off. For information about the keyboard, see "Typing" on page 24.

For information about international keyboards, see Appendix A, "International Keyboards," on page 169.

International

Use International settings to set the language for iPhone, turn keyboards for different languages on or off, and set the date, time, and telephone number formats for your area.

Set the language for iPhone: Go to Settings > General > International > Language.

Set the calendar format	Go to General > International > Calendar, then choose the format.
Set the language for Siri and Voice Control	Go to Settings > General > International > Voice Control, then choose a language.
Set the date, time, and telephone number formats	Go to Settings > General > International > Region Format, then choose your region. The Region Format also determines the language used for the days and months that appear in apps.

Accessibility

To turn on accessibility features, choose Accessibility and choose the features you want. See Chapter 31, "Accessibility," on page 142.

Profiles

This setting appears if you install one or more profiles on iPhone. Tap Profiles to see information about the profiles you've installed.

Reset

You can reset the word dictionary, network settings, home screen layout, and location warnings. You can also erase all of your content and settings.

Erase all content and settings: Go to Settings > General > Reset, then tap Erase All Content and Settings.

After confirming that you want to reset iPhone, all content, your information, and settings are removed. iPhone cannot be used until it's set up again.

Reset all settings	Go to Settings > General > Reset and tap Reset All Settings. All your preferences and settings are reset.
Reset network settings	Go to Settings > General > Reset and tap Reset Network Settings. When you reset network settings, your list of previously used networks and VPN settings not installed by a configuration profile are removed. Wi-Fi is turned off and then back on, disconnecting you from any network you're on. The Wi-Fi and "Ask to Join Networks" settings remain turned on. To remove VPN settings installed by a configuration profile, go to Settings > General > Profile, then select the profile and tap Remove. This also removes other settings or accounts provided by the profile.
Reset the keyboard dictionary	Go to Settings > General > Reset and tap Reset Keyboard Dictionary. You add words to the keyboard dictionary by rejecting words iPhone suggests as you type. Tap a word to reject the correction and add the word to the keyboard dictionary. Resetting the keyboard dictionary erases all words you've added.
Reset the Home screen layout	Go to Settings > General > Reset and tap Reset Home Screen Layout.
Reset location warnings	Go to Settings > General > Reset and tap Reset Location Warnings. Location warnings are requests made by apps to use Location Services. iPhone presents a location warning for an app the first time the app makes a request to use Location Services. If you tap Cancel in response, the request isn't presented again. To reset the location warnings so you get a request for each app, tap Reset Location Warnings.

Settings for apps

See other chapters for information about settings for apps. For example, for Safari settings, refer to Chapter 7, "Safari," on page 72.


International Keyboards


International keyboards let you type text in many different languages, including Asian languages and languages that are written from right to left.

Adding and removing keyboards

To type text in different languages on iPhone, you use different keyboards. By default, only the keyboard for the language you've set is available. To make keyboards for other languages available, use Keyboard settings. For a list of supported iPhone keyboards, go to www.apple.com/iphone/specs.html.



Add a keyboard: Go to Settings > General > International, tap Keyboards, then choose a keyboard from the list. Repeat to add more keyboards.



Remove a keyboard: Go to Settings > General > International > Keyboards, then tap Edit. Tap  next to the keyboard you want to remove, then tap Delete.

Edit your keyboard list: Go to Settings > General > International > Keyboards. Tap Edit, then drag  next to a keyboard to move it to a new place in the list.

Switching keyboards

To enter text in a different language, switch keyboards.

Switch keyboards while typing: Touch and hold the Globe key  to show all enabled keyboards. To choose a keyboard, slide your finger to the name of the keyboard, then release. The Globe key  appears when you enable more than one keyboard.

You can also tap . When you tap , the name of the newly activated keyboard appears briefly. Continue tapping to access other enabled keyboards.

Many keyboards provide letters, numbers, and symbols that aren't visible on the keyboard.

Enter accented letters or other alternate characters: Touch and hold the related letter, number, or symbol, then slide to choose a variant. On a Thai keyboard, for example, you can choose native numbers by touching and holding the related Arabic number.

Chinese

You can use keyboards to type Chinese in several different ways, including Pinyin, Cangjie, Wubihua, and Zhuyin. You can also use your finger to write Chinese characters on the screen.

Typing using Pinyin

Use the QWERTY keyboard to type Simplified or Traditional Pinyin. As you type, suggested characters appear. Tap a suggestion to choose it, or continue typing to see more options.

If you keep entering Pinyin without spaces, sentence suggestions appear.

Typing using Cangjie

Build Chinese characters from the component Cangjie keys. As you type, suggested characters appear. Tap a character to choose it, or continue typing up to five components to see more character options.

Typing using Stroke (Wubihua)

Use the keyboard to build Chinese characters using up to five strokes in the correct writing sequence: horizontal, vertical, left falling, right falling, and hook. For example, the Chinese character 圈 (circle) should begin with the vertical stroke |.

As you type, suggested characters appear, with the most commonly used characters appearing first. Tap a character to choose it.

If you're not sure of the correct stroke, type an asterisk (*). To see more character options, type another stroke, or scroll through the character list.

Tap the match key (匹配) to show only characters that match exactly what you typed.


Typing using Zhuyin

Use the keyboard to enter Zhuyin letters. As you type, suggested Chinese characters appear. Tap a suggestion to choose it, or continue entering Zhuyin letters to see more options. After you type an initial letter, the keyboard changes to show more letters.

If you keep typing Zhuyin without spaces, sentence suggestions appear.

Drawing Chinese characters

When Simplified or Traditional Chinese handwriting formats are turned on, you can draw or write Chinese characters directly on the screen with your finger. As you write character strokes, iPhone recognizes them and shows matching characters in a list, with the closest match at the top. When you choose a character, its likely follow-on characters appear in the list as additional choices.

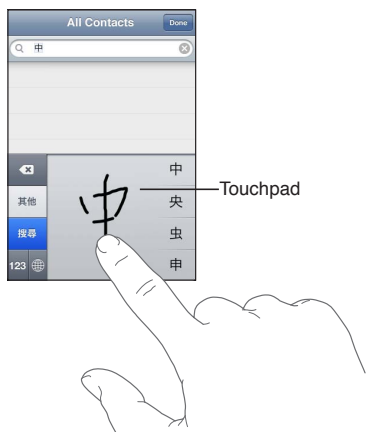

Some complex characters, such as 齧 (part of the name for the Hong Kong International Airport), 𨮒 (elevator), and 𨮒 (particle used in Cantonese), can be typed by writing two or more component characters in sequence. Tap the character to replace the characters you typed.

Roman characters are also recognized.

Converting between Simplified and Traditional Chinese

Select the character or characters you want to convert, then tap Replace. See "Editing text" on page 26. You can type an entire phrase or sentence before converting.

Japanese

You can type Japanese using the Romaji or Kana keyboards. You can also type facemarks.

Typing Japanese kana

Use the Kana keypad to select syllables. For more syllable options, tap the arrow key and select another syllable or word from the window.

Typing Japanese romaji

Use the Romaji keyboard to type syllables. Alternative choices appear along the top of the keyboard, tap one to type it. For more syllable options, tap the arrow key and select another syllable or word from the window.

Typing facemarks or emoticons

Using the Japanese Kana keyboard, tap the ^_^ key.

Using the Japanese Romaji keyboard (QWERTY-Japanese layout), tap the Number key **123**, then tap the ^_^ key.

Using the Chinese (Simplified or Traditional) Pinyin or (Traditional) Zhuyin keyboard, tap the Symbols key **#+=**, then tap the ^_^ key.

Typing emoji characters

Use the Emoji keyboard to add picture characters. You also can type emoji characters using a Japanese keyboard. For example, type はーと to get 🇯🇵.

Using the candidate list

As you type on Chinese, Japanese, or Arabic keyboards, suggested characters or candidates appear at the top of the keyboard. Tap a candidate to enter it, or flick to the left to see more candidates.

Use the extended candidate list: Tap the up arrow at the right to view the full candidate list. Flick up or down to scroll the list. Tap the down arrow to go back to the short list.

Using shortcuts

When using certain Chinese or Japanese keyboards, you can create a shortcut for word and input pairs. The shortcut is added to your personal dictionary. When you type a shortcut while using a supported keyboard, the associated word or input pair is substituted for the shortcut. Shortcuts are available for the following keyboards:

- Chinese - Simplified (Pinyin)
- Chinese - Traditional (Pinyin)
- Chinese - Traditional (Zhuyin)
- Japanese (Romaji)
- Japanese (Kana)

Turn shortcuts on or off: Go to Settings > General > Keyboard > Shortcuts.

Vietnamese

Touch and hold a character to see the available diacritical marks, then slide to choose the one you want.

You can also type the following key sequences to enter characters with diacritical marks:

- aa—â (a circumflex)
- aw—ă (a caron)
- as—á (a acute)
- af—à (a grave)
- ar—â (a question mark)
- ax—ã (a rising accent)
- aj—ạ (a drop tone)
- dd—đ (d dash)
- ee—ê (e circumflex)
- oo—ô (o circumflex)
- ow—ơ (o hook)
- w—ư (u hook)

iPhone Support site

Comprehensive support information is available online at www.apple.com/support/iphone. You can also use Express Lane for personalized support (not available in all areas). Go to expresslane.apple.com.

Restarting or resetting iPhone

If something isn't working right, try restarting iPhone, forcing an app to close, or resetting iPhone.

Restart iPhone: Hold down the On/Off button until the red slider appears. Slide your finger across the slider to turn off iPhone. To turn iPhone back on, hold down the On/Off button until the Apple logo appears.

Force an app to close: Hold down the On/Off button for a few seconds until a red slider appears, then hold down the Home button until the app closes.

You can also remove an app from the recents list to force it to close. See "Opening and switching apps" on page 19.

If you can't turn off iPhone or if the problem continues, you may need to reset iPhone. A reset should be done only if turning iPhone off and on doesn't resolve the problem.

Reset iPhone: Hold down the On/Off button and the Home button at the same time for at least ten seconds, until the Apple logo appears.

Backing up iPhone

You can use iCloud or iTunes to automatically back up iPhone. If you choose to automatically back up using iCloud, you can't also use iTunes to automatically back up to your computer, but you can use iTunes to manually back up to your computer.

Backing up with iCloud

iCloud automatically backs up to iPhone daily over Wi-Fi, when it's connected to a power source and is locked. The date and time of the last backup is listed at the bottom of the Storage & Backup screen. iCloud backs up your:

- Purchased music, TV shows, apps, and books
- Photos and videos in your Camera Roll
- iPhone settings
- App data
- Home screen and app organization
- Messages (iMessage, SMS, and MMS)
- Ringtones

Note: Purchased music is not backed up in all areas and TV shows are not available in all areas.

If you didn't enable iCloud backup when you first set up iPhone, you can turn it on in iCloud settings.

Turn on iCloud backups	Go to Settings > iCloud, then log in with your Apple ID and password, if required. Go to Storage & Backup, then turn on iCloud Backup.
Back up immediately	Go to Settings > iCloud > Storage & Backup, then tap Back Up Now.
Manage your backups	Go to Settings > iCloud > Storage & Backup, then tap Manage Storage. Tap the name of your iPhone.
Turn Camera Roll backup on or off	Go to Settings > iCloud > Storage & Backup, then tap Manage Storage. Tap the name of your iPhone, then turn Camera Roll backup on or off.
View the devices being backed up	Go to Settings > iCloud > Storage & Backup > Manage Storage.
Stop iCloud automatic backups	Go to Settings > iCloud > Storage & Backup > Backup, then turn off iCloud Backup.

Music that isn't purchased in iTunes isn't backed up in iCloud. You have to use iTunes to back up and restore that content. See "Syncing with iTunes" on page 18.

Important: Backups for music or TV show purchases are not available in all areas. Previous purchases may be unavailable if they are no longer in the iTunes Store, App Store, or iBookstore.

Purchased content, as well as Photo Stream content, doesn't count against your 5 GB of free iCloud storage.

Backing up with iTunes

iTunes creates a backup of photos in your Camera Roll or Saved Photos album, and in text messages, notes, call history, contact favorites, sound settings, and more. Media files, such as songs, and some photos, aren't backed up, but can be restored by syncing with iTunes.

When you connect iPhone to the computer you normally sync with, iTunes creates a backup each time you:

- *Sync with iTunes:* iTunes syncs iPhone each time you connect iPhone to your computer. iTunes won't automatically back up an iPhone that isn't configured to sync with that computer. See "Syncing with iTunes" on page 18.
- *Update or restore iPhone:* iTunes automatically backs up iPhone before updating and restoring.

iTunes can also encrypt iPhone backups to secure your data.

Encrypt iPhone backups: Select "Encrypt iPhone backup" in the iTunes Summary screen.

Restore iPhone files and settings: Connect iPhone to the computer you normally sync with, select iPhone in the iTunes window, and click Restore in the Summary pane.

For more information about backups, including the settings and information stored in a backup, go to support.apple.com/kb/HT1766.

Removing an iTunes backup

You can remove an iPhone backup from the list of backups in iTunes. You may want to do this, for example, if a backup was created on someone else's computer.

Remove a backup:

- 1 In iTunes, open iTunes Preferences.
 - *Mac:* Choose iTunes > Preferences.
 - *Windows:* Choose Edit > Preferences.
- 2 Click Devices (iPhone doesn't need to be connected).
- 3 Select the backup you want to remove, then click Delete Backup.
- 4 Click Delete, to confirm you wish to remove the selected backup, then click OK.

Updating and restoring iPhone software

You can update iPhone software in Settings, or by using iTunes. You can also erase or restore iPhone, and then use iCloud or iTunes to restore from a backup.

Deleted data is no longer accessible through the iPhone user interface, but it isn't erased from iPhone. For information about erasing all content and settings, see "Reset" on page 168.

Updating iPhone

You can update software in iPhone Settings or by using iTunes.

Update wirelessly on iPhone: Go to Settings > General > Software Update. iPhone checks for available software updates.

Update software in iTunes: iTunes checks for available software updates each time you sync iPhone using iTunes. See "Syncing with iTunes" on page 18.

For more information about updating and restoring iPhone software, go to support.apple.com/kb/HT4623.

Restoring iPhone

You can use iCloud or iTunes to restore iPhone from a backup.

Restore from an iCloud backup: Reset iPhone to erase all settings and information. Sign in to iCloud and choose Restore from a Backup in the Setup Assistant. See "Reset" on page 168.

Restore from an iTunes backup: Connect iPhone to the computer you normally sync with, select iPhone in the iTunes window, and click Restore in the Summary pane.

When the iPhone software is restored, you can either set it up as a new iPhone, or restore your music, videos, app data, and other content from a backup.

For more information about updating and restoring iPhone software, go to support.apple.com/kb/HT1414.

File sharing

File Sharing lets you transfer files with a USB cable between iPhone and your computer, using iTunes. You can share files created with a compatible app and saved in a supported format.

Apps that support file sharing appear in the File Sharing Apps list in iTunes. For each app, the Files list shows the documents that are on iPhone. See the app's documentation for information about how it shares files; not all apps support this feature.

Transfer a file from iPhone to your computer: In iTunes, go to your device's Apps pane. In the File Sharing section, select an app from the list. On the right, select the file you want to transfer, then click "Save to."

Transfer a file from your computer to iPhone: In iTunes, go to your device's Apps pane. In the File Sharing section, select an app, then click Add. The file is immediately transferred to your device for use with the app you selected.

Delete a file from iPhone: In iTunes, go to your device's Apps pane. In the File Sharing section, select the file, then press the Delete key.

Safety, software, and service information

This table describes where to get more iPhone-related safety, software, and service information.

To learn about	Do this
Using iPhone safely	See the <i>Important Product Information Guide</i> at www.apple.com/support/manuals/iphone for the latest safety and regulatory information.
iPhone service and support, tips, forums, and Apple software downloads	Go to www.apple.com/support/iphone .
Service and support from your carrier	Contact your carrier or go to your carrier's website.
The latest information about iPhone	Go to www.apple.com/iphone .
Creating an Apple ID	Go to appleid.apple.com .
Using iCloud	Go to www.apple.com/support/icloud .
Using iTunes	Open iTunes and choose Help > iTunes Help. For an online iTunes tutorial (may not be available in all areas), go to www.apple.com/support/itunes .
Using iPhoto in OS X	Open iPhoto and choose Help > iPhoto Help.
Using Address Book in OS X	Open Address Book and choose Help > Address Book Help.
Using iCal in OS X	Open iCal and choose Help > iCal Help.
Microsoft Outlook, Windows Address Book, or Adobe Photoshop Elements	See the documentation that came with those apps.
Finding your iPhone serial number, IMEI, ICCID, or MEID	You can find your iPhone serial number, International Mobile Equipment Identity (IMEI), ICCID, or Mobile Equipment Identifier (MEID) on the iPhone packaging. Or, on iPhone, choose Settings > General > About. For more information, go to support.apple.com/kb/ht1267 .
Obtaining warranty service	First follow the advice in this guide and online resources. Then go to www.apple.com/support or see the <i>Important Product Information Guide</i> at www.apple.com/support/manuals/iphone .
Battery replacement service	Go to www.apple.com/batteries/replacements.html .

Using iPhone in an enterprise environment

Go to www.apple.com/iphone/business to learn more about the enterprise features of iPhone, including Microsoft Exchange, IMAP, CalDAV, CardDAV, VPN, and more.

Using iPhone with other carriers

Some carriers let you unlock iPhone for use with their network. To see if your carrier offers this option, go to support.apple.com/kb/HT1937.

Contact your carrier for authorization and setup information. You need to connect iPhone to iTunes to complete the process. Additional fees may apply.

For troubleshooting information, go to support.apple.com/kb/TS3198.

Disposal and recycling information

Apple Recycling Program (available in some areas): For free recycling of your old mobile phone, a prepaid shipping label, and instructions, see: www.apple.com/recycling

iPhone disposal and recycling: You must dispose of iPhone properly according to local laws and regulations. Because iPhone contains electronic components and a battery, iPhone must be disposed of separately from household waste. When iPhone reaches its end of life, contact local authorities to learn about disposal and recycling options, or simply drop it off at your local Apple retail store or return it to Apple. The battery will be removed and recycled in an environmentally friendly manner. For more information, see: www.apple.com/recycling

European Union—electronics and battery disposal information:



This symbol means that according to local laws and regulations your product and its battery should be recycled separately from household waste. When this product reaches its end of life, take it to a collection point designated by local authorities for the recycling of electronic equipment. The improper disposal of waste electronic equipment from the consumer may be subject to fines. The separate collection and recycling of your product and its battery at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For collection and recycling services for iPhone, go to:
www.apple.com/recycling/nationalservices/europe.html

Battery replacement for iPhone: The rechargeable battery in iPhone should be replaced only by Apple or an Apple Authorized Service Provider. For more information about battery replacement services, go to: www.apple.com/batteries/replacements.html

Deutschland: Dieses Gerät enthält Batterien. Bitte nicht in den Hausmüll werfen. Entsorgen Sie dieses Gerätes am Ende seines Lebenszyklus entsprechend der maßgeblichen gesetzlichen Regelungen.

Nederlands: Gebruikte batterijen kunnen worden ingeleverd bij de chemokar of in een speciale batterijcontainer voor klein chemisch afval (kca) worden gedeponerd.

Türkiye: EEE yönetmeliğine (Elektrikli ve Elektronik Eşyalarda Bazı Zararlı Maddelerin Kullanımının Sınırlandırılmasına Dair Yönetmelik) uygundur.

台灣



廢電池請回收

Brasil: Informações sobre descarte e reciclagem



O símbolo acima indica que este produto e/ou sua bateria não devem ser descartadas no lixo doméstico. Quando decidir descartar este produto e/ou sua bateria, faça-o de acordo com as leis e diretrizes ambientais locais. Para informações sobre o programa de reciclagem da Apple, pontos de coleta e telefone de informações, visite www.apple.com/br/environment.

Apple and the environment

At Apple, we recognize our responsibility to minimize the environmental impacts of our operations and products. For more information, go to: www.apple.com/environment

iPhone operating temperature

If the interior temperature of iPhone exceeds normal operating temperatures, you may experience the following as it attempts to regulate its temperature:

- iPhone stops charging.
- The screen dims.
- The cellular signal is weak.
- A temperature warning screen appears.

Important: You can't use iPhone while the temperature warning screen is displayed, except to make an emergency call. If iPhone can't regulate its internal temperature, it goes into deep sleep mode until it cools. You can't make an emergency call when iPhone is in this mode. Move iPhone to a cooler location and wait a few minutes before trying to use iPhone again.

 Apple Inc.

© 2012 Apple Inc. All rights reserved.

Apple, the Apple logo, AirPlay, AirPort, AirPort Express, AirPort Extreme, Aperture, Apple TV, Cover Flow, FaceTime, Finder, iBooks, iCal, iLife, iMovie, iPad, iPhone, iPhoto, iPod, iPod touch, iTunes, iTunes Extras, Keynote, Mac, Mac OS, Numbers, OS X, Pages, Safari, Siri, Spotlight, and the Works with iPhone logo are trademarks of Apple Inc., registered in the U.S. and other countries.

AirPrint, iMessage, the Made for iPhone logo, Multi-Touch, and Retina are trademarks of Apple Inc.

Apple Store, Genius, iCloud, iTunes Plus, iTunes Store, and MobileMe are service marks of Apple Inc., registered in the U.S. and other countries.

App Store, iBookstore, and iTunes Match are service marks of Apple Inc.

iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

Ping is a registered trademark of Karsten Manufacturing Corporation and is used in the U.S. under license.

NIKE and the Swoosh Design are trademarks of NIKE, Inc. and its affiliates, and are used under license.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Apple Inc. is under license.

Adobe and Photoshop are trademarks or registered trademarks of Adobe Systems Incorporated in the U.S. and/or other countries.

Other company and product names mentioned herein may be trademarks of their respective companies.

Map data © 2010 Google.

Mention of third-party products is for informational purposes only and constitutes neither an endorsement nor a recommendation. Apple assumes no responsibility with regard to the performance or use of these products. All understandings, agreements, or warranties, if any, take place directly between the vendors and the prospective users. Every effort has been made to ensure that the information in this manual is accurate. Apple is not responsible for printing or clerical errors.

019-2267/2012-03